

M-Series



USER MANUAL

020-100009-02

1: Introduction

1.1 Labels and Marking	1-1
1.1.1 Typographical Notations	1-2
1.2 Purchase Record and Service Contacts	1-2
1.3 Projector Overview	1-3
1.3.1 How the Projector Works	1-3
1.3.2 User Interface Overview	1-3
1.3.3 List of Components	1-3
1.3.4 Key Features	1-3

2: Installation and Setup

2.1 Projector Quick Setup and Installation	2-1
2.2 Detailed Setup and Installation	2-4
2.2.1 About the Projector	2-5
2.2.2 Installation Considerations	2-7
2.2.3 Projector Position and Mounting	2-9
2.2.4 Mounting	2-16
2.2.5 Adjusting Projector Height/Tilt	2-16
2.2.6 Basic Optical Alignment	2-17
2.2.7 Advanced Optical Alignment	2-18
2.2.8 Powering Down	2-20
2.2.9 Connecting Communications	2-21
2.3 Connecting Sources	2-27

3: Operation

3.1 Using the Remote Keypad or Built-In Keypad	3-1
3.1.1 Remote Keypad Commands	3-4
3.2 Navigating the Menus	3-8
3.3 Using Inputs and Channels	3-12
3.4 Channel Setup Menu	3-13
3.5 Adjusting the Image	3-17
3.6 Size and Position Menu	3-17
3.7 Image Settings Menu	3-22
3.8 Configuration - Adjusting System Parameters and Advanced Controls	3-31
3.9 Input Switching & PIP Menu	3-46
3.10 Lamp Menu	3-48
3.11 Status	3-49
3.12 Using Multiple Projectors	3-49
3.13 Remote Control of the Projector	3-53
3.14 Alarm Conditions	3-53

4: Menu Tree

4.1 M-Series Menu Tree	4-1
------------------------------	-----

5: Maintenance

5.1 Safety Warnings and Guidelines.....	5-1
5.1.1 General Precautions	5-1
5.1.2 AC /Power Precautions	5-1
5.1.3 Lamp Precautions.....	5-2
5.2 Maintenance of the Cooling System	5-2
5.2.1 Ventilation.....	5-2
5.2.2 Optional Filters	5-2
5.3 Maintenance of Optics	5-3
5.3.1 Optical (Excluding Lens)	5-3
5.3.2 Cleaning the Lens.....	5-4
5.4 Replacing the Lamps	5-4

6: Troubleshooting

6.1 Power	6-1
6.1.1 Projector Does Not Power ON.....	6-1
6.2 Lamp	6-1
6.2.1 Lamp Does Not Ignite.....	6-1
6.2.2 Lamp Suddenly Turns OFF.....	6-1
6.2.3 Flicker, Shadows Or Dimness.....	6-2
6.3 LCD	6-2
6.3.1 Blank Screen, No Menu Displaying	6-2
6.4 Remote Keypad.....	6-2
6.4.1 Remote Keypad Does Not Seem to Work	6-2
6.5 OSD	6-2
6.5.1 The OSD Menu does not display	6-2
6.6 Ethernet.....	6-3
6.6.1 Trouble Establishing Communication with Projector.....	6-3
6.7 Displays	6-3
6.7.1 The projector is on but there is no display	6-3
6.7.2 Severe Motion Artifacts	6-3
6.7.3 Image Appears ‘Squeezed’ or Vertically Stretched into Center of Screen.....	6-3
6.7.4 The Display is Jittery or Unstable.....	6-3
6.7.5 The Display is Faint	6-4
6.7.6 The Upper Portion of the Display is Waving, Tearing or Jittering.....	6-4
6.7.7 Portions of the Display are Cut Off or Warped to the Opposite edge	6-4
6.7.8 Display Appears Compressed (Vertically Stretched)	6-4
6.7.9 Data is Cropped from Edges	6-4
6.7.10 Display Quality Appears to Drift from Good to Bad, Bad to Good	6-4
6.7.11 Display has Suddenly Frozen.....	6-4
6.7.12 Colors in the Display are Inaccurate	6-4
6.7.13 Display is Not Rectangular	6-5
6.7.14 Display is “Noisy”	6-5

7: Specifications

7.1 Image Performance	7-1
7.1.1 Pixel Format	7-1
7.1.2 Brightness (ANSI Lumens)	7-1
7.1.3 Contrast	7-2
7.1.4 Luminance Uniformity	7-2
7.1.5 Color Uniformity	7-2
7.1.6 Color Primaries	7-2
7.1.7 Gamma	7-2
7.1.8 Grayscale/Color Resolution	7-2
7.1.9 Color Temperature	7-3
7.1.10 Convergence	7-3
7.1.11 Blemishes	7-3
7.1.12 Pixel Defects	7-4
7.1.13 Image Artifacts	7-4
7.1.14 Picture Centering	7-4
7.2 Feature Set	7-4
7.2.1 Airflow	7-4
7.2.2 Air Filters (Optional)	7-4
7.2.3 Dust Sealing	7-4
7.2.4 ILS (Intelligent Lens System)	7-4
7.2.5 Projection Lens Compatibility	7-5
7.2.6 Dynamic Iris	7-5
7.2.7 Automatic Fans	7-5
7.2.8 Automatic Color Filtering	7-5
7.2.9 Constant Lamp Output Management	7-5
7.2.10 Shutter	7-6
7.2.11 Lamps	7-6
7.2.12 Status LED	7-6
7.2.13 Electronics/SW	7-6
7.3 Image Processor Performance	7-7
7.4 Input (Source Signal) Compatibility	7-7
7.4.1 Analog (Only) Input	7-7
7.4.2 Twin HDMI Input	7-7
7.4.3 Dual Link DVI Input	7-7
7.4.4 Video Decoder Input	7-8
7.4.5 Dual Standard Definition, High Definition or Serial Digital Input	7-8
7.5 Control Signal Compatibility	7-8
7.5.1 Remote Dual Frequency	7-8
7.5.2 Control Receiver	7-8
7.5.3 RS232	7-8
7.5.4 RS422	7-9
7.5.5 Ethernet	7-9
7.5.6 USB 2.0 Device Port	7-9
7.5.7 GPIO	7-9

7.5.8 Built-In Keypad and Display 7-9

7.5.9 AMX/Crestron Support 7-9

7.6 Power Requirements 7-9

7.6.1 Lamp Specification 7-10

7.7 Physical Specifications 7-10

7.7.1 Size 7-10

7.7.2 Adjustment 7-10

7.7.3 Weight 7-11

7.7.4 Operating Position 7-11

7.7.5 Cosmetics 7-11

7.8 Reliability and Serviceability 7-11

7.8.1 Reliability 7-11

7.8.2 Serviceability 7-11

7.9 Environment 7-11

7.9.1 Temperature/Humidity/Altitude 7-11

7.10 Accessories and Service Components 7-12

7.10.1 Service Components 7-12

7.11 Regulatory 7-12

A: GPIO

A.1 GPIO Port A-1

1 Introduction

Every effort has been made to ensure the information in this document is accurate and reliable; however, due to constant research the information in this document is subject to change without notice.

USERS/OPERATORS: This manual is intended for trained users operating professional high-brightness projection systems. Such users may also be trained to replace the lamp and air filter, but cannot install the projector or perform any service functions on the M-Series projector.

SERVICE: Only CHRISTIE accredited technicians knowledgeable about all potential hazards associated with high voltage, ultraviolet exposure and high temperatures generated by the lamp and associated circuits are authorized to **1)** assemble/install the projector and **2)** perform service functions inside the projector.

This manual contains the following sections:

- [Section 1 Introduction](#)
- [Section 2 Installation and Setup](#)
- [Section 3 Operation](#)
- [Section 4 Menu Tree](#)
- [Section 5 Maintenance](#)
- [Section 6 Troubleshooting](#)
- [Section 7 Specifications](#)
- [Section Appendix A: GPIO](#)

Disclaimer: Every effort has been made to ensure the information in this document is accurate and reliable. However, due to constant research, the information in this document is subject to change without notice. Christie Digital Systems assumes no responsibility for omissions or inaccuracies. Updates to this document are published regularly, as required. Please contact Christie Digital Systems for availability.

1.1 Labels and Marking

Observe and follow any warnings and instructions marked on the projector.

⚠ DANGER Symbols are used to alert situations where the user will become seriously injured if they do not follow the advice in this section.

⚠ WARNING Warning symbols are used to alert situations where a user may be injured.

⚠ CAUTION Caution symbols are used to convey information where equipment damage will occur.

1.1.1 Typographical Notations

The following notations are used throughout this manual:

- Keypad commands and PC keystrokes appear in bold small caps, such as POWER, INPUT, ENTER etc.
- References to specific areas of the document appear italicized and underlined. When viewed online the text appears in blue indicating a direct link to that section. For example, *[Section 2 Installation and Setup](#)*.
- References to other documents appear italicized and bold, such as ***Service Manual***.
- References to software menus and available options appear bold, such as **Main** menu, **Preferences**.
- User input or messages that appear on screen, in status display units or other control modules appear in Courier font. For example. "No Signal Present", Login: christiedigital.
- Error codes, LED status appear in bold, e.g. LP, A1 etc.
- Operational states of modules appear capitalized, such as power ON/OFF.

1.2 Purchase Record and Service Contacts

Whether the projector is under warranty or the warranty has expired, Christie's highly trained and extensive factory and dealer service network is always available to quickly diagnose and correct projector malfunctions. Complete service manuals and updates are available for all projectors. Should a problem be encountered with any part of the projector, contact your dealer. In most cases, servicing is performed on site. If you have purchased the projector, fill out the information below and keep with your records.

Table 1.1

Dealer:
Dealer or Christie Sales/Service Contact Phone Number:
Projector Serial Number*:
Purchase Date:
Installation Date:

* The serial number can be found on the license label located on the back of the projector.

Table 1.2 Ethernet Settings

Default Gateway:
DNS Server:
Projector DLP Address:
Projector Mgmt IP Address:
Subnet Mask:

1.3 Projector Overview

The M-Series is a family of high resolution video/graphics 3 chip HD and SXGA+ projectors, see [Table 1.3 M-Series Projectors](#). These projectors are based on next-generation DLP® technology provided by Texas Instruments.

1.3.1 How the Projector Works

The projector accepts data/graphics and video input signals for projection onto front or rear screens. Light is generated by dual mercury lamps, then modulated by three Digital Micro-mirror Device (DMD) panels that provide digitized red, green or blue color information. Light from the “ON” pixels of each panel is reflected, converged and then projected to the screen through a single front lens, where all pixels are perfectly superimposed as a sharp full-color image.



FIGURE 1-1 - M-SERIES

1.3.2 User Interface Overview

The projector can be controlled via a menu system displayed on the image. The menu system can be controlled by an IR remote, wired remote or through the built-in keypad. The LCD screen and built-in keypad allow some functions to be controlled without the need of an OSD display, and provide a quickly accessible interface to view error reporting. The functions on the OSD can also be controlled using the Christie Serial Protocol, via a serial or Ethernet connection to the projector. The Web interface provides access to the menu system as a Virtual OSD (On-screen display) and to features that maintain the projector's software and settings.

1.3.3 List of Components

Ensure the following components were received with the projector:

- ☐ Projector with Built-In Keypad (LCD status display)
- ☐ IR remote keypad (includes two, 1.5V AA batteries and an XLR to mini-stereo cable conversion to wired)
- ☐ Line cord
- ☐ Lens Mount Security Screw (M6x10mm long, Qty. 2)
- ☐ Lens Mount Security Screw (5mm Hex, Qty. 1)
- ☐ Warranty Card
- ☐ Web Registration Form

1.3.4 Key Features

- Up to 10,000 lumens
- HD (1080p) or SXGA+ resolution
- Dual Mercury lamp illumination with 200W or 350W options
- Dynamic iris contrast aperture providing up to 10,000:1 contrast ratio
- Ultra-compact design and weighs less than 55lbs

- 10-bit image processor electronics with modular design
- Fully sealed optical system
- Active fan control for minimum noise level
- Selectable, motorized yellow notch filter for expanded color gamut
- User interchangeable projection lenses with no-tool mounting
- PIP and seamless switching
- LiteLOC™ for constant brightness maintenance
- Intelligent Lens System (ILS)
- Motorized lens mount for all models
- Auto-setup feature
- Integrated ChristieNET
- Networking ability through RS232 and RS422 connectors
- Status LED display on built-in keypad for easy projector status monitoring
- Control with remote keypad, wired remote, or built-in keypad
- Four input slots for Optional Input Modules

Refer to [Section 7 Specifications](#) for a complete list of technical specifications.

Table 1.3 M-Series Projectors

<i>Model Name</i>	<i>Part Number</i>
DS+6K-M	118-013105-XX
DS+10K-M	118-014106-XX
HD6K-M	118-021104-XX
HD10K-M	118-023106-XX
Roadster HD10K-M	118-042107-XX
Roadster S+10K-M	118-044109-XX

2 Installation and Setup

This section explains how to install, connect and optimize the projector for delivery of superior image quality. Illustrations are graphical representations only and are provided to enhance the understanding of the written material.

2.1 Projector Quick Setup and Installation

The following instructions are for those preferring a quick setup. Refer to the remaining subsections for detailed setup instructions.

⚠ DANGER Always power down the projector and disconnect all power sources before servicing or cleaning.

⚠ WARNING Refer to Safety Warnings and Guidelines in [Section 5 Maintenance](#).

STEP 1 - Installing a Projection Lens

The projection lens, shipped separately from the projector, must be installed prior to setting up the projector.

⚠ WARNING Remove the lens plug from the lens opening in the projector before installing the lens. Retain the lens plug for projector transportation to protect the projector's optical components from dust and debris.

IMPORTANT! *The lens seals the projector, preventing contaminants from entering the interior of the projector. Never operate a projector without a lens.*

LENS INSTALLATION

1. Remove the rear lens cap from the lens. Keep the front lens cap on the lens to protect it during installation.
2. Rotate the lens clamp to the OPEN position, see [Figure 2-1 - Lens Installation](#).
3. Remove and retain the 2 security screws from the lens mount, see [Figure 2-2 - Security Screw Location](#).
4. Align the lens interface plate with the lens mount. Align the lens electrical connector with the mating connector on the lens mount. Fully insert the assembly straight into the lens mount opening without turning. Press using your hand, see [Figure 2-3 - Lens Placement](#). **NOTE:** When installing the lens, ensure that the lens IS NOT inserted at an angle, as this can cause damage.
5. While holding the lens flat against the lens mount, rotate the lens clamp clockwise to lock the lens assembly in place.
6. For added stability such as motion applications, fasten the security screws, see [Figure 2-2 - Security Screw Location](#) provided on the lens-mount, using the tool provided. **NOTES:** **1)** Recommended for heaviest lenses such as 0.73:1 and 1.2:1. **2)** Security screws **MUST** be installed when hoisting the projector overhead, or installing the projector in an overhead position.
7. Remove the front lens cap.

⚠ WARNING Use of the lens security screws is required if the projector is hoisted or installed in an overhead position.

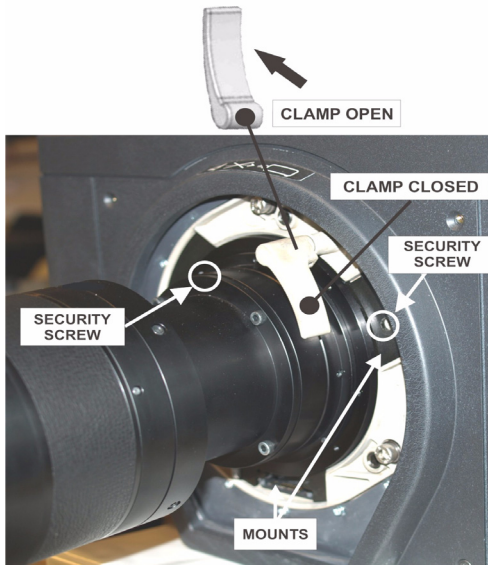


FIGURE 2-1 - LENS INSTALLATION

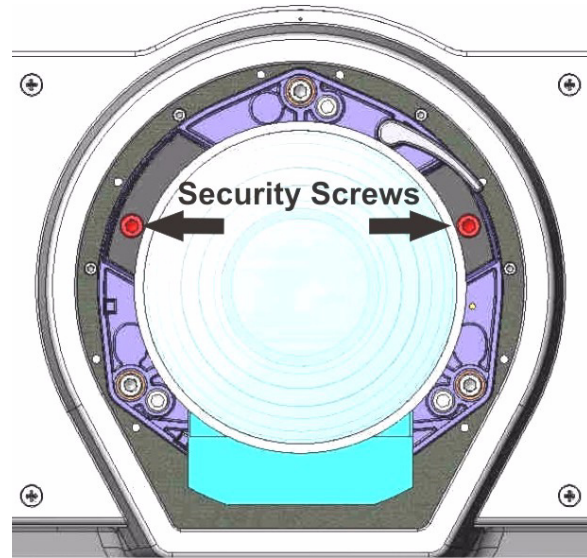


FIGURE 2-2 - SECURITY SCREW LOCATION



FIGURE 2-3 - LENS PLACEMENT

STEP 2 - Positioning the Projector

⚠ WARNING 2 people are required to safely lift and install the projector.

Place the projector on a sturdy, level surface and position it so that it is perpendicular to the screen at a suitable distance. The further back the projector is positioned for the screen, the larger the image will be.

To level the projector adjust its 3 feet. With the projector positioned perpendicular to the screen the image will appear rectangular instead of keystone.

For more detailed instructions on positioning the projector refer to [2.2.3 Projector Position and Mounting](#) later in this section.

STEP 3 - Connecting a Source

Located at the back of the projector is the input panel where all source connections are made. Each input is clearly labeled for easy identification. Depending on the type of option card installed, connect your source using the appropriate cable(s), as follows:

- **Analog Input Card**, connect 3-, 4-, or 5-wire RGB source to Red/Pr, Green/Y, Blue/Pb, H/C and V using 3, 4 or 5 BNC connectors as required.
- **Dual SD/HD - SDI Input Card**, connect SDI (Serial Digital Interface) cable to one of the two inputs, 1-IN or 2-IN. Both standard-definition (SD) and high-definition (HD) signals are accepted and automatically recognized on either input.
- **Dual Link DVI Input Card**, connect a single or dual DVI video signal to the DVI-I connector, an analog video signal to the DVI-I connector or an analog video signal to the VGA connector. The DVI signal may contain HDCP (High-Bandwidth Digital Content Protection).
- **Twin HDMI Input Card**, connect HDMI (High-Definition Multimedia Interface) cable to one of the two inputs, 1-IN or 2-IN.
- **Video Decoder Input Card**, depending on the source you can apply the following;
 - Composite video source to 1-CVBS, using a BNC Cable **NOTE:** *Same signal can be used on 4, 5 or 6 when input is selected as CVBS.*
 - A component signal on Inputs 4(Pr), 5(Y), 6(Pb) using BNC Connectors. **NOTE:** *Grouped as a component input, YPbPr.*
 - S-Video to one of the two, 2-SVID or 3-SVID using S-Video cable.
 - S-Video using two BNC cables, with Luma (Y) connected to 4 (Sy) and Chroma (C) connected to 6 (Sc). **NOTE:** *Must be grouped as 1 S-Video + 1 CVBS.*

Refer to [Section 2.3 Connecting Sources](#) for more details.

STEP 4 - Connecting the Line Cord

IMPORTANT: *Use the line cord provided with the projector, or ensure you are using a line cord, power plug and socket that meet the appropriate rating standards. **NOTE:** Voltage and current requirements are listed on the license label, located at the back of the projector.*

Connect the projector's line cord to the AC receptacle at the AC inlet of the projector, then push the wire clip over the plug to retain it. This prevents the line cord from inadvertent disconnection. Plug the 3-pronged plug end into a suitably rated grounded AC receptacle. Switch the projector ON. The switch is located just above the AC receptacle.

⚠ WARNING Do not attempt operation if the AC supply and cord is not within the specified ratings. On power down, wait 5-10 minutes for the fans to turn OFF before unplugging the projector. Always switch off the projector before unplugging the AC line cord.

STEP 5 - Power up

After the AC Power has been switched on, the LCD display above the keypad indicates “Please wait” and the 4 LED status indicators on the top cover window switch on to amber. These indicate that the projector is changing its state from powered down to standby. The message “Standby Mode” appears in the display when the projector has completed its initialization and is ready for power up. The 2 lamp status LEDs will go off to indicate that the lamps are off. The Power status LED will show amber, indicating that the projector is in standby mode. The shutter LED will display amber, indicating the shutter is closed. Press and hold the power button on the keypad or remote for 2 seconds, or press twice quickly. The lamps will power on and the fans will come on. **NOTE:** See [Section 3 Operation](#) for a full description of the status indicators.

NOTE: The default settings for the projector are to perform a lens calibration after the insertion of a new lens. If this is the first time the projector has been powered up with the lens, expect a short period (about 15 seconds) where the lens will move slightly.

STEP 6 - Selecting a Source

Press one of the input keys on the remote or built-in keypad to select and display the image for the source you connected in Step 3.

STEP 7- Adjusting Image

Adjust the image settings, such as Brightness, Contrast, Gamma, Focus, Zoom etc. using the direct keys on the remote or built in keypad. **NOTE:** Refer to [Section 3 Operation](#) for more details.

2.2 Detailed Setup and Installation

⚠ DANGER Always power down the projector and disconnect all power sources before servicing or cleaning.

⚠ WARNING Refer to Safety Warnings and Guidelines in [Section 5 Maintenance](#).

2.2.1 About the Projector

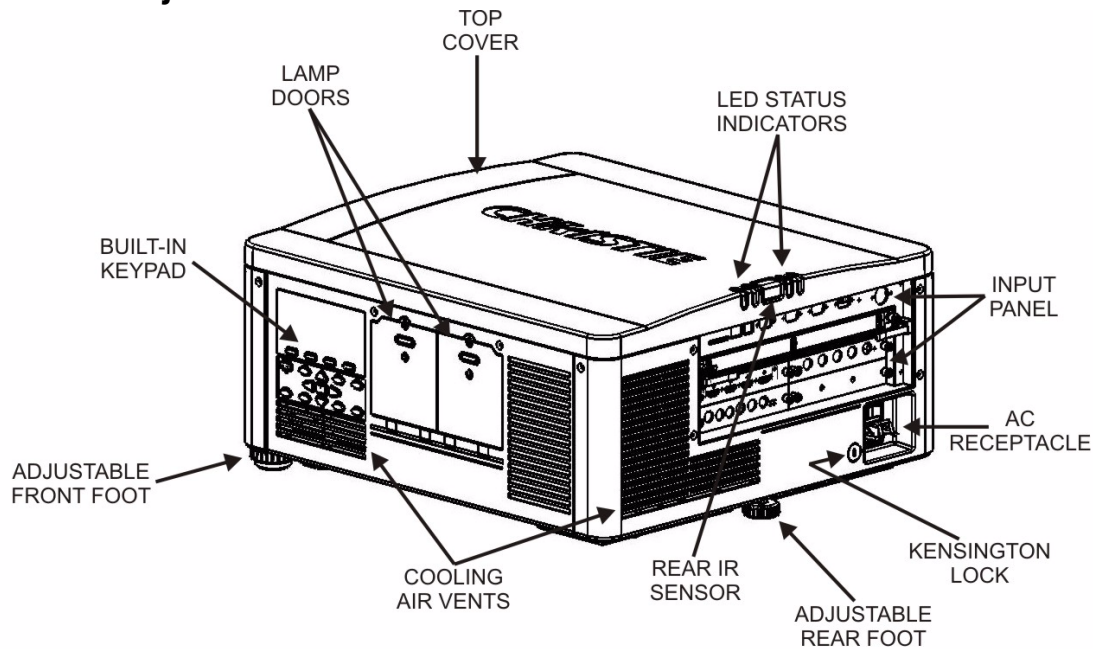


FIGURE 2-4 - ABOUT THE PROJECTOR - REAR/SIDE VIEW

Built-in Keypad

The built-in keypad is located on the side of the projector. Use it similarly to the IR remote to control the projector. An LCD display is located above the keypad for displaying projector status.

AC Receptacle

The AC receptacle is located at the back of the projector. Use this receptacle to plug in an appropriately rated line cord. **NOTE:** The power switch is located above the AC receptacle. Refer to [Section 7 Specifications](#) for details.

Adjustable Feet

Located on the underside of the projector are three adjustable feet. Raise or lower these feet when positioning the projector to ensure it is level on all sides so the displayed image will appear rectangular without any keystone.

Refer to [2.2.5 Adjusting Projector Height/Tilt](#) for instructions on how to adjust the projector's feet.

Input Panel

All source connections are made to the input panel located at the back of the projector. Any of the available optional input cards can be installed in the 4 option card slots. The slots are labelled 1 through 4. All option cards have LEDs to indicate their status.

Cooling and Air Vents

There are numerous air vents located around the projector. It is important these vents remain unobstructed. Adequate airflow through the projector will prevent it from overheating.

Kensington Lock Attachment

Located at the rear of the projector to the left of the AC receptacle, is a Kensington lock attachment point. This provides the ability to secure the projector against possible theft.

Lamp Door

The lamp doors are located at the side of the projector, which provides easy access to the lamp module for replacement. Refer to [Section 5.4 Replacing the Lamps](#). The lamp doors are fitted with safety interlocks which switch the lamp off when the door is opened. The lamp doors are provided with clear windows to indicate when the lamps are on.

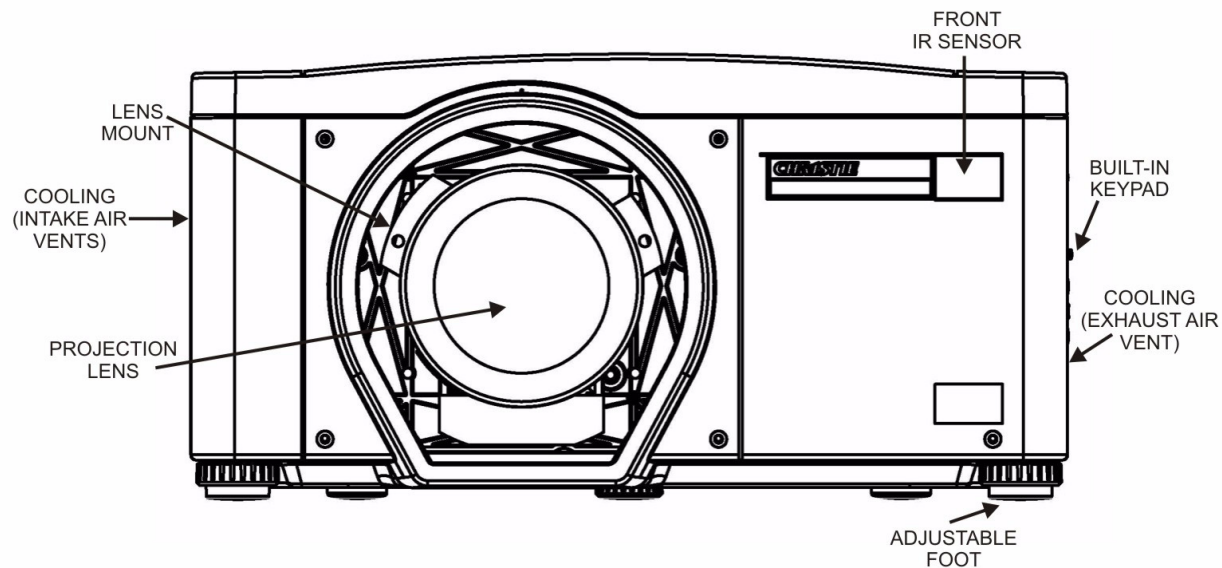


FIGURE 2-5 - ABOUT THE PROJECTOR - FRONT VIEW

Front & Rear IR Sensors

The two IR sensors located on the projector receive transmissions from the IR remote from up to 100 feet away. It is important to keep the transmission path to these sensors unobstructed for uninterrupted communications with the projector. The rear IR sensor is located at the back of the projector between the status LEDs and the front IR sensor is located next to the projector's front nameplate.

Projection Lenses, Lens Mount and Other Features

The projector includes a motorized lens mount that allows automated lens control and adjustment: vertical and horizontal offsets, zoom and focus. The lens mount can be fitted with any one of the available optional lenses – see [Section 7 Specifications](#).

- **Zoom and Focus** – There are two internal lens motors that allow for quick motorized adjustment of zoom and focus. Adjust zoom to fit the displayed image on the screen and adjust focus to improve the clarity of the image.

NOTES: **1)** The projection lens is shipped separately from the projector. **2)** Use the lens cap when transporting the lens to avoid scratching and damaging the lens, which could affect your displayed image. **3)** Motorized lenses should not be adjusted by hand without first setting them for manual operation, otherwise the zoom and focus motors may be damaged. (Set in **Menu>Configuration>Lens Settings>Manual Zoom/Focus**).

- **Lens Offset** – The motorized lens mount allows vertical and horizontal offset of the displayed image.
- **Shutter** – Standard on all models, the shutter allows you to turn the screen absolutely black when in the “Closed” state.
- **Dynamic Iris Contrast Aperture** – Enables adjustment of light output and contrast ratio.

2.2.2 Installation Considerations

Proper installation of your projector will ensure the quality of your display. Whether you are installing a projector temporarily or permanently you should take the following into account to ensure your projector performs optimally. Choose the installation type that best suits your needs: front or rear screen, floor mount or inverted mount.

Front Screen / Floor Mount Installations

<i>Advantages</i>	<i>Considerations</i>
• Easy to set up. • Can be moved or changed quickly. • Easy to access.	• Shares floor space with audience.

Front Screen / Inverted Mount (ceiling) Installation

<i>Advantages</i>	<i>Considerations</i>
• Does not take up audience space. • Projector is unobtrusive. • Projector cannot be accidentally moved.	• Installation is more permanent. • It is more difficult to access the projector.

Rear Screen / Floor Mount Installation

<i>Advantages</i>	<i>Considerations</i>
• Projector is completely hidden. • Projector is easily accessed. • Usually good ambient light rejection.	• Requires separate room or enclosure. • Installation cost is usually higher.

Rear Screen / Inverted Mount (ceiling) Installation

<i>Advantages</i>	<i>Considerations</i>
• Projector is completely hidden. • Usually good ambient light rejection.	• Requires separate room. • Installation cost is usually higher. • More difficult to access projector.

Rear Screen / Floor Mount with Mirror


Advantages	Considerations
• Projector is completely hidden • Usually good ambient light rejection. • Requires less space behind screen than other rear screen installations.	• Requires separate room or enclosure. • Installation cost is usually higher. • More involved to perform setup.

Front Screen Installations

In front screen installations, the projector and audience are positioned in front of the screen, which can be flat or curved.

Flat screens offer a gain of about 1.0 with a viewing angle just less than 180°. This type of screen reflects incident light equally in all directions so the audience can see the display from various angles.

Curved screens have a gain greater than 1.0 with a viewing angle much less than 180°. This type of screen does not reflect incident light equally in all directions; instead it is concentrated in a viewing cone. The audience sitting within the viewing cone area will see a brighter image than those sitting just outside the area.

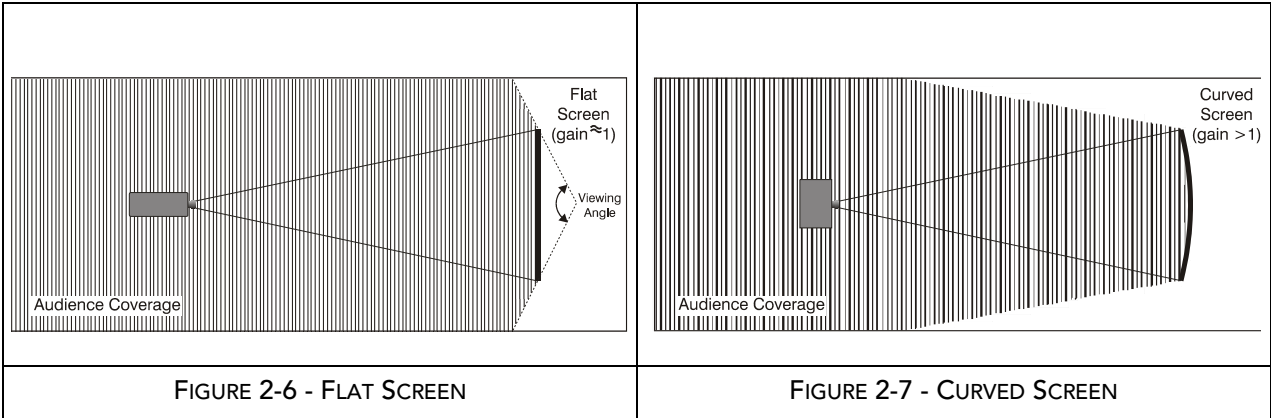

Rear Screen Installations

There are two basic types of rear screens: diffused and optical.

A diffused screen has a surface which spreads the light striking it. Purely diffused screens have a gain of less than 1.0. The advantage of the diffused screen is its wide viewing angle, similar to that of a flat screen for front screen projection. This type of screen is suitable when a wide viewing angle is required but there is low ambient room lightening.

Optical screens take light from the projector and redirect it to increase the light intensity at the front of the screen. This reduces it in other areas. A viewing cone, similar to that of a curved front screen installation is created. This type of screen is better suited for brightly lit rooms where the audience is situated within the viewing cone.

Screen Size

Choose a screen size appropriate for your lens and application. If the projector will be used to display text information, the image size must allow the audience to recognize all text clearly. The eye sees a letter clearly if eye-to-text distance is less than 150 times the height of the letter. Small text located too far from the eye will be illegible at a distance no matter how sharply and clearly it is displayed.

To fill a screen with an image, the aspect ratio of the screen should be equal to the aspect ratio of the image (expressed as the ratio of its width to its height). Standard video from a VCR has a 4:3 or 1.33:1 aspect ratio. For example, to display a VCR output with a 4:3 aspect ratio onto a 10-foot (3m) high screen, the width of the screen must be at least 13.3 feet (4m).

Ambient Lighting

The high brightness of this projector is well suited for locations where ambient lighting might be considered less than ideal. A typical room with ceiling lights and windows rarely requires special attention. Contrast ratio in your images will be reduced if stray light directly strikes the screen. For example, when a shaft of light from a window or floodlight falls on the image. Images may appear washed out and less vibrant. Avoid or eliminate stray light sources directed at the screen.

Ventilation

The projector vents and louvers provide ventilation, both for intake and exhaust. Never block or cover these openings. Do not install the projector near a radiator or heat register, or within an enclosure. To ensure adequate airflow around the projector, allow free air exchange to the projector with a minimum clearance of 25cm (10") on the left, right and rear sides of the projector from any walls or other obstructions. **NOTE:** *Do not obstruct the air exchange to the projector.*

Other Considerations

Other considerations and tips to improve your installation:

- Keep the ambient temperature constant and below 40°C (104F). Keep the projector away from heating and/or air conditioning vents. Changes in temperature may cause drifts in the projector circuitry, which may affect performance.
- Keep the projector away from devices that radiate electromagnetic energy, such as motors and transformers, slide projectors, speakers, power amplifiers, elevators, etc.
- Use a screen size appropriate for the venue but not larger than required. Installing a large screen in a small room is similar to watching television at a close range; too large a screen can overpower a room and interfere with the overall effect. As a rule, be no closer than 1.5 times the width of the screen.

2.2.3 Projector Position and Mounting

Throw Distance

Throw distance is the distance measured from your projector's front feet to the screen. This calculation determines if there is enough room to install your projector with a desired screen size and if the image will be of the right size for your screen.

To estimate the throw distance take the horizontal width of the screen and multiply it by the lens throw ratio. The result determines approximately the distance the projector should be positioned from the screen to project a focused image large enough to fill the screen. For example, using a 0.73:1 lens, throw distance would roughly be 0.73 x screen width.

IMPORTANT: *Use the lens and screen size to calculate the precise throw distance using the tables provided in the Dealer Section of the Christie Website, PN 020-100221-XX. Due to lens manufacturing tolerances for lens focal length, actual throw distance can vary $\pm 5\%$ between lenses with the same nominal throw ratio.*

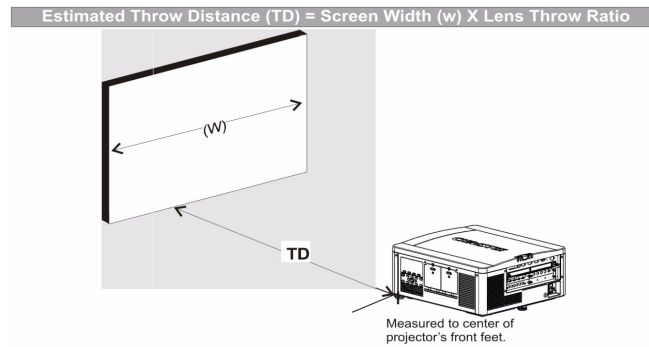


FIGURE 2-8 - THROW DISTANCE

Vertical and horizontal position

The correct vertical and horizontal position of the projector in relation to the screen depends on the lens type and the screen size. Ideally, the projector should be positioned perpendicular to the screen. This way, the image will appear rectangular instead of keystone (trapezoidal).

The vertical position of the image can be offset (that is moved above or below the optical axis) by adjusting the motorized lens mount. The amount of vertical offset available depends on the type of lens installed in the projector and can be limited if horizontal offset has been applied. Vertical offset can be expressed as the percent of half the image height or the number of pixels of shift from lens center. Refer to [Figure 2-9 - Vertical Offset Examples](#) for illustrated examples of vertical offset.

[Table 2.1](#) and [Table 2.2](#) specify the vertical offset of each type of lens.

Table 2.1 - Lens Type and Vertical Offsets, HD 1080p (1920 x 1080 pixels)

Lens Throw Ratio	Fixed	Zoom	Lens Part Number	Minimum Offset Above or Below Lens Center	
CHRISTIE ILS LENS 0.73:1 SX+ / 0.67:1 HD 0.95" 3-CHIP DLP®	X		118-100110-XX	±35%	±189 pixels
CHRISTIE ILS LENS 1.2:1 SX+ / 1.1:1 HD 0.95" 3-CHIP DLP®	X		118-100117-XX	±119%	±643 pixels
CHRISTIE ILS LENS 1.2:1 SX+ / 1.1:1 HD SFL 0.95" 3-CHIP DLP®	X		118-101103-XX	±119%	±643 pixels
CHRISTIE ILS LENS 1.25-1.6:1 SX+ / 1.16-1.49:1 HD 0.95" 3-CHIP DLP®		X	118-100111-XX	±102%	±551 pixels
CHRISTIE ILS LENS 1.5-2.0:1 SX+ / 1.4-1.8:1 HD 0.95" 3-CHIP DLP®		X	118-100112-XX	±119%	±643 pixels
CHRISTIE ILS LENS 2.0-2.8:1 SX+ / 1.8-2.6:1 HD 0.95" 3-CHIP DLP®		X	118-100113-XX	±119%	±643 pixels
CHRISTIE ILS LENS 2.8-4.5:1 SX+ / 2.6-4.1:1 HD 0.95" 3-CHIP DLP®		X	118-100114-XX	±119%	±643 pixels
CHRISTIE ILS LENS 4.5-7.5:1 SX+ / 4.1-6.9:1 HD 0.95" 3-CHIP DLP®		X	118-100115-XX	±119%	±643 pixels
CHRISTIE ILS LENS 7.5-11.2:1 SX+ / 6.9-10.4:1 HD 0.95" 3-CHIP DLP®		X	118-100116-XX	±119%	±643 pixels

NOTES: 1) Offsets are subject to ±7% centering tolerance. 2) % Offset = # of pixels of offset/half vertical panel resolution x 100.

Table 2.2 - Lens Type and Vertical Offsets, SXGA+ (1400 x 1050 pixels)

Lens Throw Ratio	Fixed	Zoom	Lens Part Number	Minimum Offset Above or Below Lens Center	
CHRISTIE ILS LENS 0.73:1 SX+ / 0.67:1 HD 0.95" 3-CHIP DLP®	X		118-100110-XX	±23%	±121 pixels
CHRISTIE ILS LENS 1.2:1 SX+ / 1.1:1 HD 0.95" 3-CHIP DLP®	X		118-100117-XX	±100%	±525 pixels
CHRISTIE ILS LENS 1.2:1 SX+ / 1.1:1 HD SFL 0.95" 3-CHIP DLP®	X		118-101103-XX	±100%	±525 pixels
CHRISTIE ILS LENS 1.25-1.6:1 SX+ / 1.16-1.49:1 HD 0.95" 3-CHIP DLP®		X	118-100111-XX	±73%	±383 pixels
CHRISTIE ILS LENS 1.5-2.0:1 SX+ / 1.4-1.8:1 HD 0.95" 3-CHIP DLP®		X	118-100112-XX	±100%	±525 pixels
CHRISTIE ILS LENS 2.0-2.8:1 SX+ / 1.8-2.6:1 HD 0.95" 3-CHIP DLP®		X	118-100113-XX	±100%	±525 pixels
CHRISTIE ILS LENS 2.8-4.5:1 SX+ / 2.6-4.1:1 HD 0.95" 3-CHIP DLP®		X	118-100114-XX	±100%	±525 pixels
CHRISTIE ILS LENS 4.5-7.5:1 SX+ / 4.1-6.9:1 HD 0.95" 3-CHIP DLP®		X	118-100115-XX	±100%	±525 pixels
CHRISTIE ILS LENS 7.5-11.2:1 SX+ / 6.9-10.4:1 HD 0.95" 3-CHIP DLP®		X	118-100116-XX	±100%	±525 pixels

NOTES: 1) Offsets are subject to ±7% centering tolerance. 2)% Offset = # of pixels of offset/half vertical panel resolution x 100.

Examples of Vertical Offset (SXGA+ pixels represented)

Where:

Shaded area = projected image

Area within solid line = projected image area with no offset applied

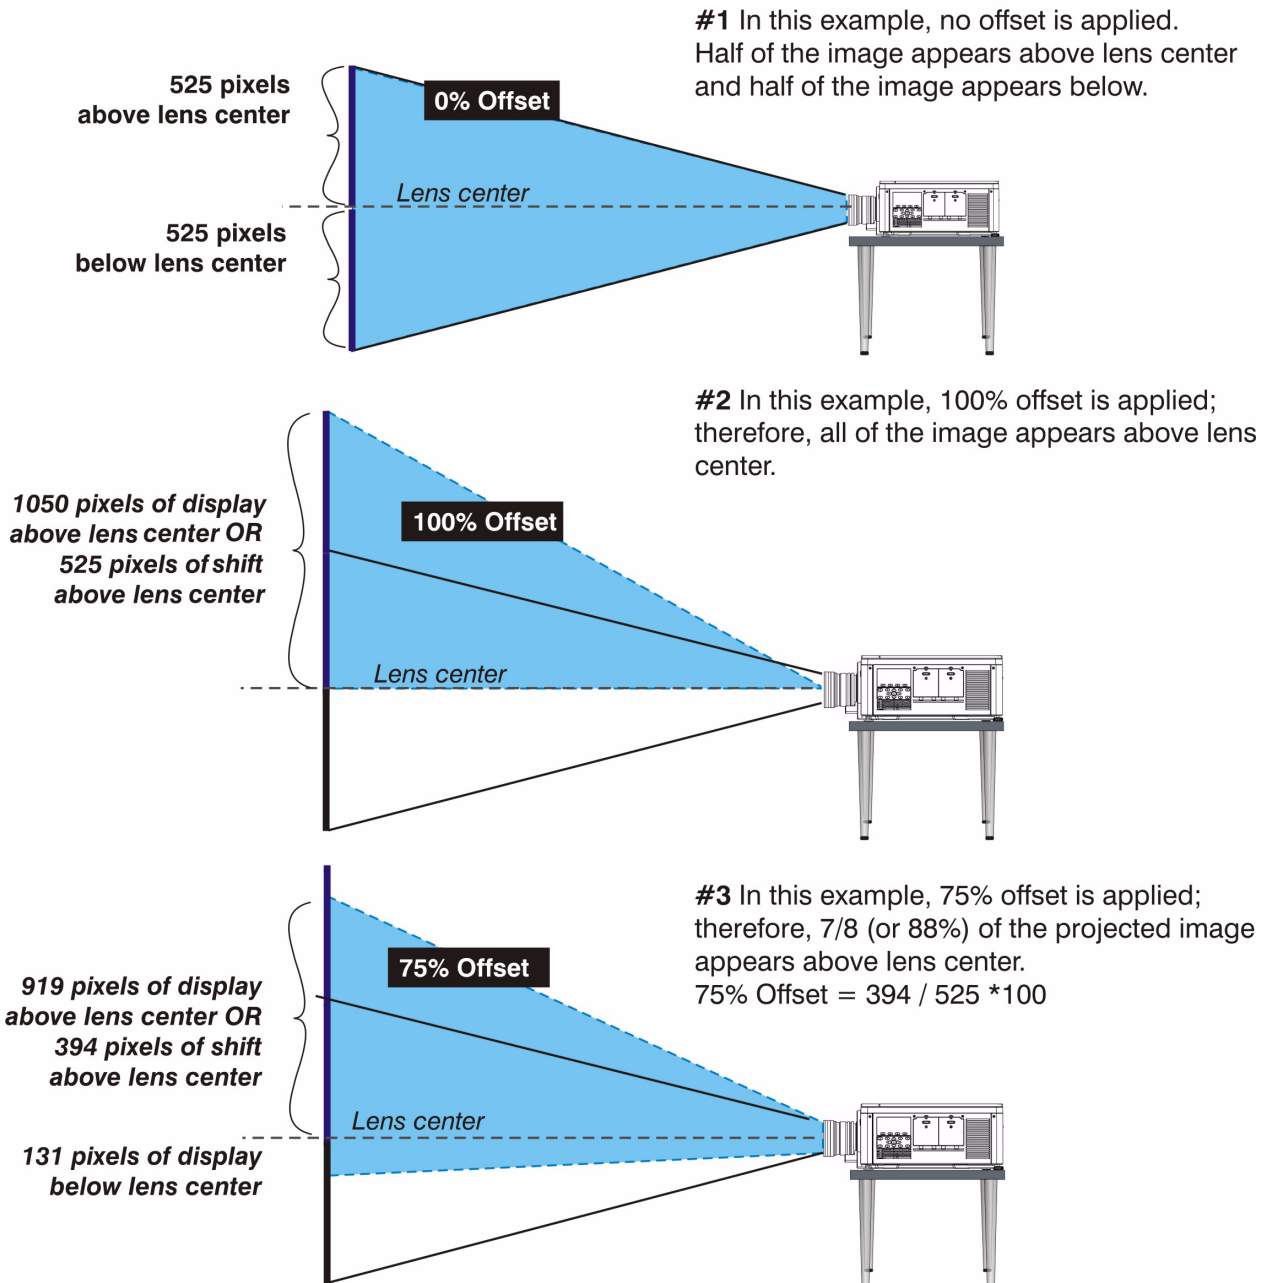


FIGURE 2-9 - VERTICAL OFFSET EXAMPLES

The horizontal position of the image can also be offset; that is moved to the left or right of optical center, by adjusting the motorized lens mount. The amount of horizontal offset available depends on the lens installed and if the image has already been vertically offset. Horizontal offset can be expressed as the percent of half the image width or the number of pixels of shift to one side of lens center. [Table 2.3](#) and [Table 2.4](#), each show the horizontal offset of a lens type. See [Figure 2-10 - Horizontal Offset Examples](#).

Table 2.3 - Lens Type and Horizontal Offsets, HD 1080p (1920 x 1080 pixels)

Lens Throw Ratio	Fixed	Zoom	Lens Part Number	Minimum Offset Left or Right of Lens Center	
CHRISTIE ILS LENS 0.73:1 SX+ / 0.67:1 HD 0.95" 3-CHIP DLP®	X		118-100110-XX	±12%	±115 pixels
CHRISTIE ILS LENS 1.2:1 SX+ / 1.1:1 HD 0.95" 3-CHIP DLP®	X		118-100117-XX	±42%	±403 pixels
CHRISTIE ILS LENS 1.2:1 SX+ / 1.1:1 HD SFL 0.95" 3-CHIP DLP®	X		118-101103-XX	±42%	±403 pixels
CHRISTIE ILS LENS 1.25-1.6:1 SX+ / 1.16-1.49:1 HD 0.95" 3-CHIP DLP®	X		118-100111-XX	±40%	±384 pixels
CHRISTIE ILS LENS 1.5-2.0:1 SX+ / 1.4-1.8:1 HD 0.95" 3-CHIP DLP®		X	118-100112-XX	±42%	±403 pixels
CHRISTIE ILS LENS 2.0-2.8:1 SX+ / 1.8-2.6:1 HD 0.95" 3-CHIP DLP®		X	118-100113-XX	±42%	±403 pixels
CHRISTIE ILS LENS 2.8-4.5:1 SX+ / 2.6-4.1:1 HD 0.95" 3-CHIP DLP®		X	118-100114-XX	±42%	±403 pixels
CHRISTIE ILS LENS 4.5-7.5:1 SX+ / 4.1-6.9:1 HD 0.95" 3-CHIP DLP®		X	118-100115-XX	±42%	±403 pixels
CHRISTIE ILS LENS 7.5-11.2:1 SX+ / 6.9-10.4:1 HD 0.95" 3-CHIP DLP®		X	118-100116-XX	±42%	±403 pixels

NOTES: 1) Offsets are subject to ±7% centering tolerance. 2) % Offset = # of pixels of offset/half horizontal panel resolution x 100.

Table 2.4 - Lens Type and Horizontal Offsets, SXGA+ (1400 x 1050 pixels)

Lens Throw Ratio	Fixed	Zoom	Lens Part Number	Minimum Offset Left or Right of Lens Center	
CHRISTIE ILS LENS 0.73:1 SX+ / 0.67:1 HD 0.95" 3-CHIP DLP®	X		118-100110-XX	±13%	±91 pixels
CHRISTIE ILS LENS 1.2:1 SX+ / 1.1:1 HD 0.95" 3-CHIP DLP®	X		118-100117-XX	±50%	±350 pixels
CHRISTIE ILS LENS 1.2:1 SX+ / 1.1:1 HD SFL 0.95" 3-CHIP DLP®	X		118-101103-XX	±50%	±350 pixels

CHRISTIE ILS LENS 1.25-1.6:1 SX+ / 1.16-1.49:1 HD 0.95" 3-CHIP DLP®		X	118-100111-XX	±45%	±315 pixels
CHRISTIE ILS LENS 1.5-2.0:1 SX+ / 1.4-1.8:1 HD 0.95" 3-CHIP DLP®		X	118-100112-XX	±50%	±350 pixels
CHRISTIE ILS LENS 2.0-2.8:1 SX+ / 1.8-2.6:1 HD 0.95" 3-CHIP DLP®		X	118-100113-XX	±50%	±350 pixels
CHRISTIE ILS LENS 2.8-4.5:1 SX+ / 2.6-4.1:1 HD 0.95" 3-CHIP DLP®		X	118-100114-XX	±50%	±350 pixels
CHRISTIE ILS LENS 4.5-7.5:1 SX+ / 4.1-6.9:1 HD 0.95" 3-CHIP DLP®		X	118-100115-XX	±50%	±350 pixels
CHRISTIE ILS LENS 7.5-11.2:1 SX+ / 6.9-10.4:1 HD 0.95" 3-CHIP DLP®		X	118-100116-XX	±50%	±350 pixels

NOTES: 1) Offsets are subject to ±7% centering tolerance. 2) % Offset = # of pixels of offset/half horizontal panel resolution x 100.

Examples of Horizontal Offset (SXGA+ pixels represented)

Where:

Shaded area = projected image

Area within solid line = projected image area with no offset applied

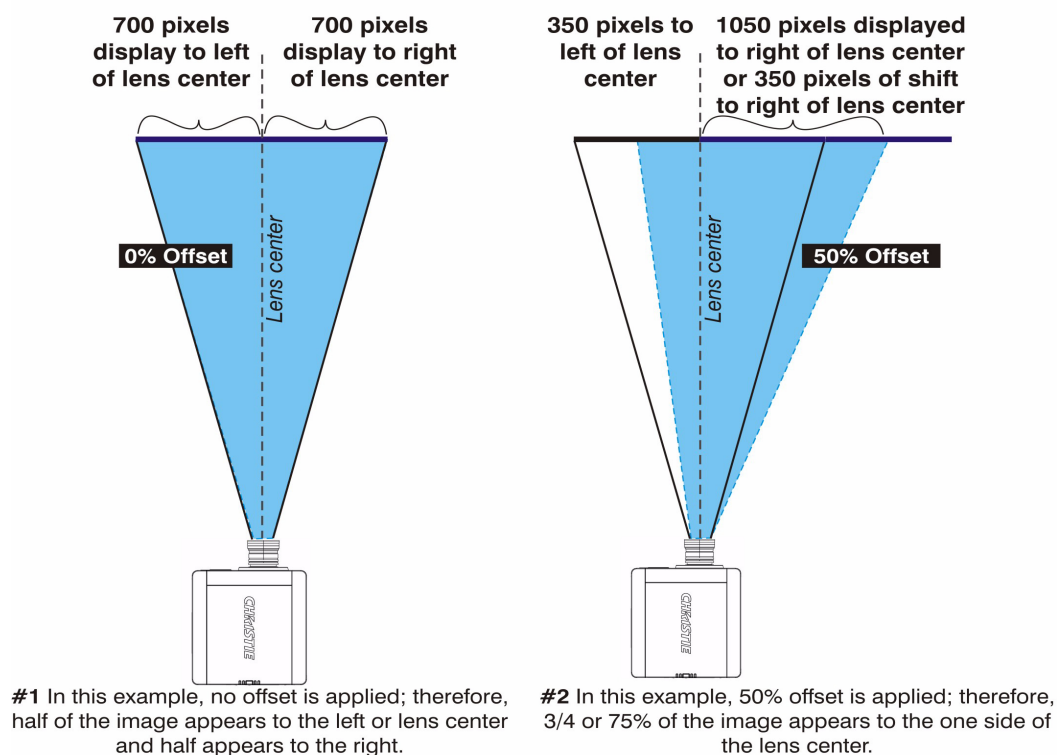


FIGURE 2-10 - HORIZONTAL OFFSET EXAMPLES

2.2.4 Mounting

There are several methods for mounting the projector. In typical front and rear screen installations the projector can be mounted to a secure and level surface, such as a table or cart. Carts are useful when the projector has to be moved often. Lock the wheels on a cart, when it is in position, to prevent accidental movement during a presentation.

Ceiling Mount

The projector can be inverted and suspended from the ceiling using a specially designed ceiling mount fixture 118-100108-XX. This mounting is recommended for those that want the projector out of plain view or have limited amount of space for the projector. For more information, contact your dealer.

⚠ WARNING Use only the CHRISTIE approved ceiling mount kit designed for your projector. Refer to the installation instructions and safety guidelines provided in the kit.

Special Mounting


The projector can also be rotated (front-to-back) up to 360 degrees and fixed in a rotated position without affecting performance. However, the side-to-side tilt limit of the projector must not exceed +/-15 degrees, to ensure optimal performance of the projector.

2.2.5 Adjusting Projector Height/Tilt

Adjusting Height

You can modify the height of the projector to remedy a slightly uneven mounting surface by adjusting the three feet threaded into the bottom chassis. Turn each foot clock-wise or counter-clockwise until the projector is level on all sides.

The front feet are adjusted by turning the collar, see [Figure 2-11 - Front Foot](#). The front feet do not rotate when adjusted. The rear foot is adjusted by turning the entire foot, see [Figure 2-12 - Rear Foot](#).

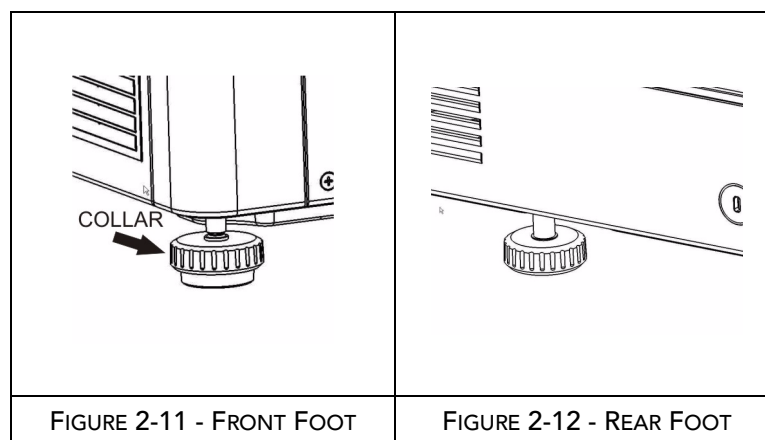

Adjusting Tilt

1. Before adjusting tilt, ensure the projector is centered. **NOTE:** *Check with site personnel for the degree of screen tilt, or measure this incline with a protractor at the screen.*
2. Then tilt the projector to closely match the screen tilt angle by extending or retracting the projector's 3 adjustable feet.

NOTE: 1) *For an ideal installation, the lens surface should be centered and parallel to the screen - this orientation helps to ensure optimized lens performance with minimal offset. Choose a sturdy mounting surface that allows for this. If this position is not possible (such as when the projector is significantly higher than the center of the screen), it is better to rely on offset rather than extra tilt.*

2.2.6 Basic Optical Alignment

Only perform image alignment once the projector is fully assembled and powered up in its final location. Basic image alignment ensures the image reflected from the DMDs is parallel to and well-centered with the lens and screen. This initial optical alignment is the foundation for optimizing images on the screen and must be completed before final boresight adjustments. Before beginning ensure the projector is properly positioned relative to the screen.

Basic Optical Alignment Procedure

1. **Display a test pattern:** Appropriate for analyzing image focus and geometry, such as the “framing” test pattern showing the cross-hair centered across the image. Press the TEST key on the remote keypad or use the built-in keypad and press the soft key that displays Test on the LCD display.
2. **Course focus:** Do a quick preliminary focus and (if available) zoom adjustment with the primary lens. Do not worry about consistency across the image at this point, just center focus. It is good practice to have zoom adjustment color and focus adjustment color in the center of its range.
3. **Center the image in the lens:** Holding a piece of paper at the lens surface, adjust offsets as necessary until the image is centered within the lens perimeter. A full white field works best for this.
4. **If necessary, center the image on the screen:** If the projector is mounted off center to the screen axis, then offset the lens as much as required. Aim the projector over slightly towards the center of the screen, but use caution when doing so, as too much tilt will cause excessive keystone distortion. Lens offset will not.
5. **Re-check side-to-side leveling:** With the framing pattern on screen, double-check projector leveling so the top edge of the image is parallel to the top edge of the screen.
6. **Throw Distance:** Ensure the projector is positioned in the throw distance range for the particular lens.

Folded Optics

In rear screen applications where space behind the projector is limited, a mirror may be used to fold the optical path, see [Figure 2-13 - Folded Optical Path](#) . The position of the projector and mirror must be accurately set - if considering this type of installation call your dealer for assistance.

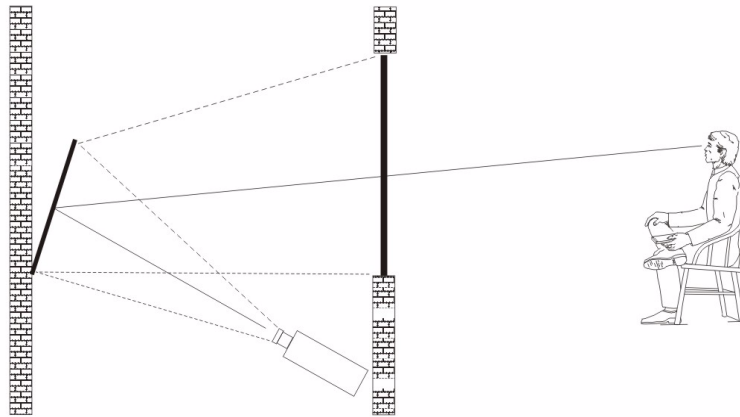


FIGURE 2-13 - FOLDED OPTICAL PATH

2.2.7 Advanced Optical Alignment

Boresight Alignment Procedure

1. Display the Boresight Test Pattern by pressing the TEST key on the remote keypad or use the built-in keypad and press the soft key that displays Test on the LCD display, then UP ARROW KEY to cycle to Boresight, then Enter, see [Figure 2-14 - Boresight Pattern](#).

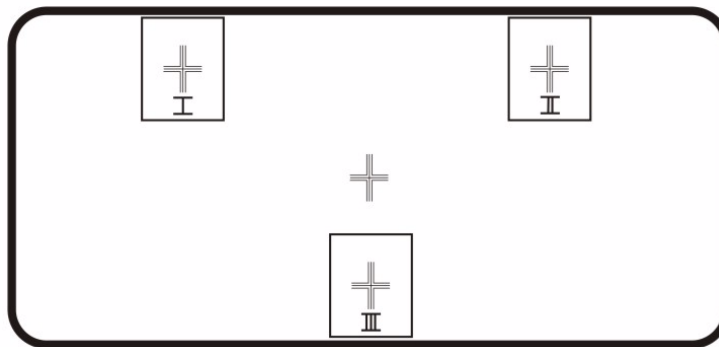
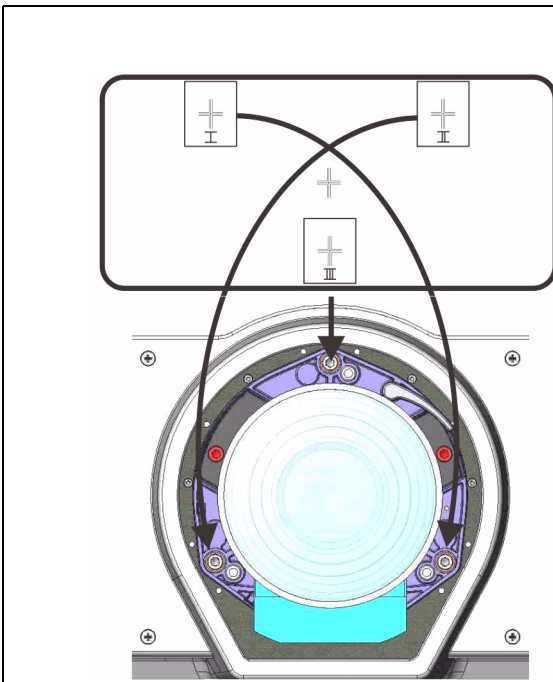
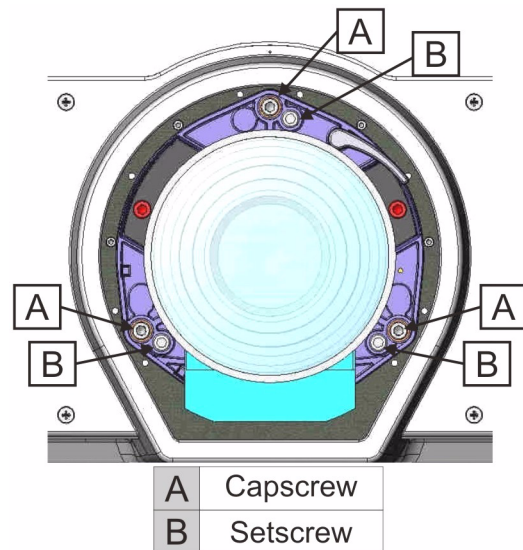


FIGURE 2-14 - BORESIGHT PATTERN

2. Focus the image on cross-hair pattern I. Evaluate the focus on cross-hair image II and III. If all 3 images are in focus, no further action is required. If boresight is required see step 3.
3. If boresight is required, refer to [Figure 2-15 - Cross-Hair Pattern](#) to understand how the adjustment screws on the lens mount affect the corresponding cross-hairs on the test pattern.
4. Use a 5mm Allen™ key to loosen the 3 locking setscrews on the lens mount, see [Figure 2-16 - Screw Locations](#), below. **NOTE:** The setscrews must be backed out several turns, so that they do not contact the inner lens mount plate.


FIGURE 2-15 - CROSS-HAIR PATTERN

FIGURE 2-16 - SCREW LOCATIONS

5. Fine tune the focus of cross-hair pattern I by adjusting the appropriate capscrew, see [Figure 2-16 - Screw Locations](#). Adjust until the cross-hair image is in focus with minimal flare.
6. Adjust cross-hair pattern II, by adjusting the appropriate capscrew, see [Figure 2-16 - Screw Locations](#). Adjust until the cross-hair image is in focus with minimal flare.
7. Adjust cross-hair pattern III, by adjusting the appropriate capscrew, see [Figure 2-16 - Screw Locations](#). Adjust until the cross-hair image is in focus with minimal flare.
8. Repeat step 5, 6, and 7 as required until all 3 cross-hair patterns are in equal sharp focus. If the boresight is acceptable, see step 11. If the boresight does not appear to be converging to an acceptable level of image quality or if the lens will not focus over the correct range of throw distances, then the boresight requires coarse adjustment, see step 9.
9. The original factory boresight can be recovered approximately by positioning the 3 setscrews, see [Figure 2-16 - Screw Locations](#). Position the setscrews flush with the front face of the lens mount plate and in contact with the inner lens mount plate, see below [Figure 2-17 - Position Setscrew Flush](#). This may require adjusting both setscrews and capscrews.
10. If further action is required. Repeat #2.
11. Lock the setscrews, and re-check the boresight quality. Tighten the setscrew enough to ensure they will not shift.

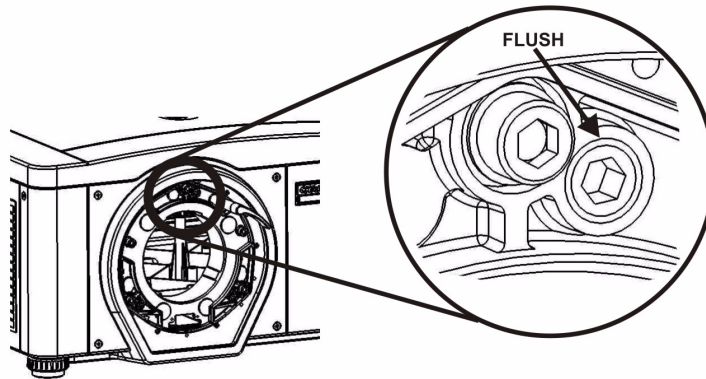


FIGURE 2-17 - POSITION SETSCREW FLUSH

2.2.8 Powering Down

The projector can be powered down by using one of the following methods:

Remote Keypad/Built-In Keypad

1. Press and hold POWER or
2. Press POWER twice,
3. Press POWER once, then immediately press the DOWN key. **NOTE:** For Step 2 and 3, if the second key is not pressed immediately, a confirmation window will appear. The second key press must be pressed within 1 second of the window appearing.

NOTE: After powering down, the Status LEDs cycle and the LCD displays the message “Cooling Down”, until cool down is complete.

WEB USER INTERFACE (UI)

1. From the **Main** Tab, Select **Power>OFF**. **NOTE:** A window will display for confirmation on powering down, see [Figure 2-18](#).
2. Select **Yes**.

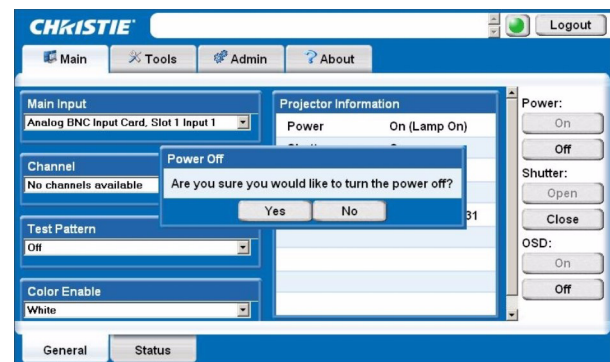


FIGURE 2-18 - POWERING DOWN/WEB USER INTER-

2.2.9 Connecting Communications

Remote Keypads

To control the projector, direct the projector's IR remote towards the display screen or the projector's IR sensors. Alternatively, connect a wired (tethered) version of the remote to the XLR connector labeled as **WIRED KEYPAD** on the projector's input panel. Note that response to a wired keypad must also be enabled in the **Communications** menu—see [Section 4 Menu Tree](#) for more information.

As an alternative to the projector's keypad or remote, you may wish to communicate with the projector using a PC or other controller. Such a device sends commands and receives feedback via serial links (RS232 and RS422), or Ethernet communications to the projector, refer to the *Serial Command document provided in the Dealer Section of the Christie Website, PN 020-100224-XX*.

1.) Serial Port Connections

RS232 and RS422, serial ports available on the projector: You can connect a device with a serial interface, such as a computer to either of these connectors (not both) and control the projector remotely by entering specific serial communication commands, see [Section 3 Operation, Communications - Submenu](#) and the *Serial Command document provided in the Dealer Section of the Christie Website, PN 020-100224-XX*.

2.) Connecting RS232

Two nine-pin D-sub connectors, labeled RS232 IN and RS232 OUT on the input panel, are dedicated to serial communication, see [Figure 2-19 - Connecting RS232](#). Using the appropriate serial communication cables, connect the controlling source, such as a personal computer to the RS232 IN connector. Set the projector baud rate to match that of the computer. See [Section 3 Operation](#) for details on changing the projector's baud rate.

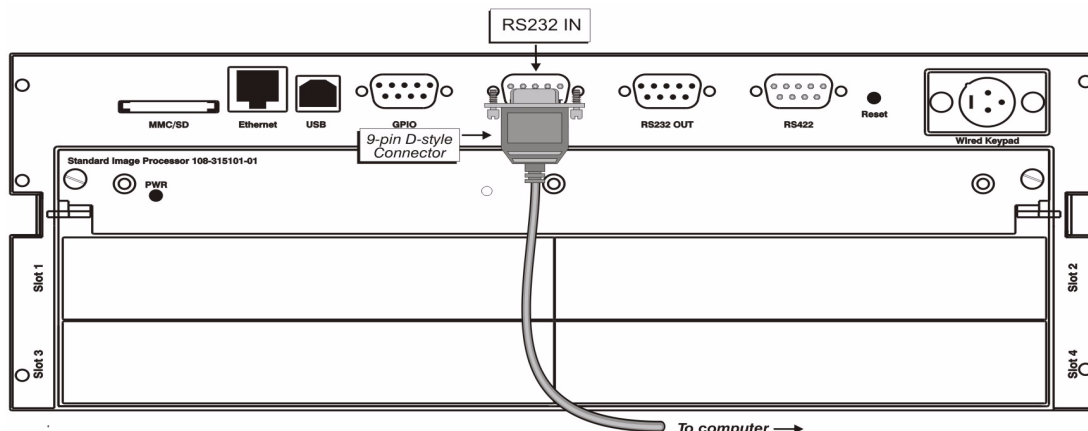


FIGURE 2-19 - CONNECTING RS232

3.) Connecting RS422

To control the projector with a computer or other controlling device with RS422 capability, connect a RS422 serial communication cable between the controlling device and the RS422 port on the projector, see [Figure 2-20 - Connecting RS422](#). RS422 is better suited than RS232 for serial communication over distances greater than 50 feet.

⚠ WARNING Use the RS422 port only if your device had RS422 capability - always consult the literature provided with your equipment before connecting.

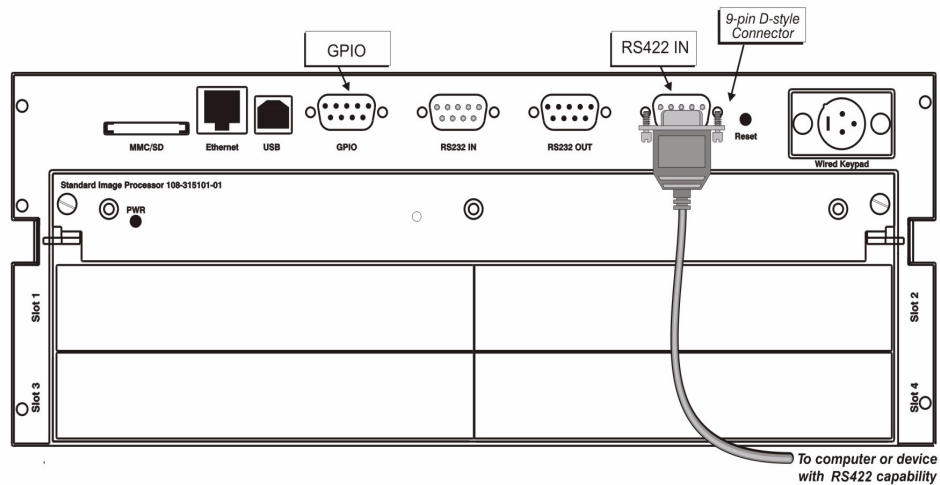


FIGURE 2-20 - CONNECTING RS422

Ethernet Communications

Refer to [Section 3 Operation](#) for further information about setting up and using a projector connected via Ethernet, and the *Serial Command* document provided in the **Dealer Section of the Christie Website, PN 020-100224-XX**.

Connecting Multiple Projectors

RS232 NETWORK: To connect multiple projectors in a network with serial communication:

1. Connect the controlling source to the RS232 IN connector of the first projector in the network.
2. Using another serial communication cable, connect one end to the RS232 OUT connector and the other end to the RS232 IN connector of the next projector.
3. Continue this pattern of connection with all projectors in the network. **NOTE:** The last projector in the network will only have a connection to the RS232 IN connector, see [Figure 2-21 - RS232 Network](#).

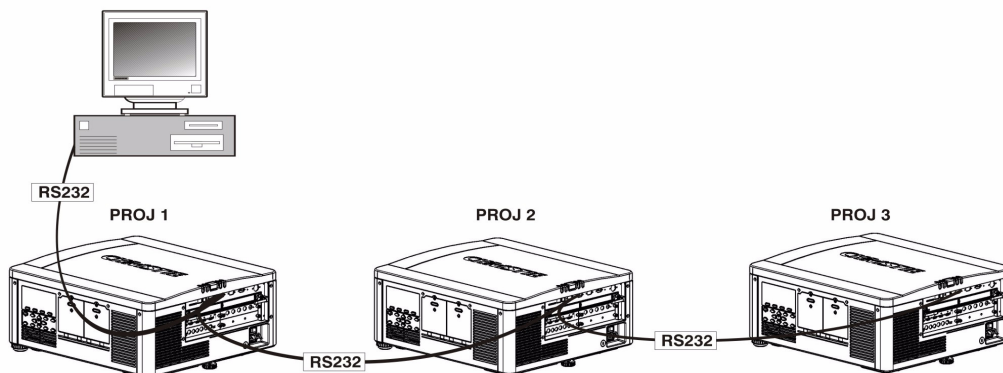


FIGURE 2-21 - RS232 NETWORK

MIXED NETWORK: To control multiple projectors with a computer/controller having an RS422 interface:

1. Set them all to the same baud rate as your RS422 controller. **NOTE:** You must enable this combination of RS422 and RS232 in the **Communications** menu. Set the “**Network Routing**” option to “**RS232 and RS422 Joined**”, see [Section 4 Menu Tree](#).
2. Chain the projectors together by connecting an **RS232 OUT** (Null Cable) of the first projector (already connected to the computer/controller through the **RS422** port straight thru to an **RS232 IN** on the next projector in the chains). Continue connecting projectors in this manner until you’ve reached the last projector in the chain, so that only the last projector has one unused port **RS232 OUT**, see [Figure 2-22 - Mixed Network](#).

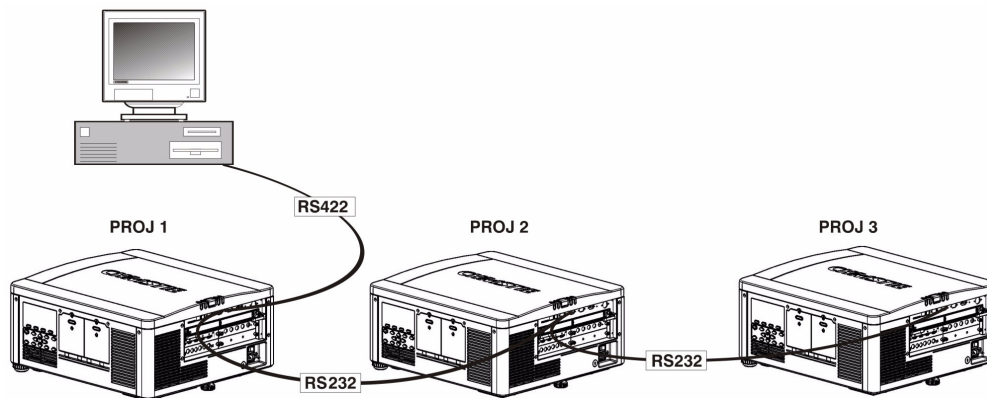


FIGURE 2-22 - MIXED NETWORK

Communication parameters, such as baud rate, must be set to match the particular controlling device, before connecting as a network—refer to the documentation that came with your controlling device to determine the proper baud rate. See [Section 3 Operation](#) for help changing the projector baud rate. To communicate to all projectors, set the Network Routing to “RS232 and RS422 Joined”.

NOTES: **1)** Connect only properly wired serial communication cables. **2)** Each RS232 communication cable should be no more than 50 feet in length. Use high quality cables.

ETHERNET NETWORK SETUP: To add one or more projectors to an Ethernet network, use standard CAT5 cable to connect each projector’s Ethernet port to a hub belonging to the network. A controller or PC must also be connected to the hub, see [Figure 2-23 - Ethernet Network Setup](#). **NOTE:** A wireless router can be used to communicate to the projectors via 802.11b/g.

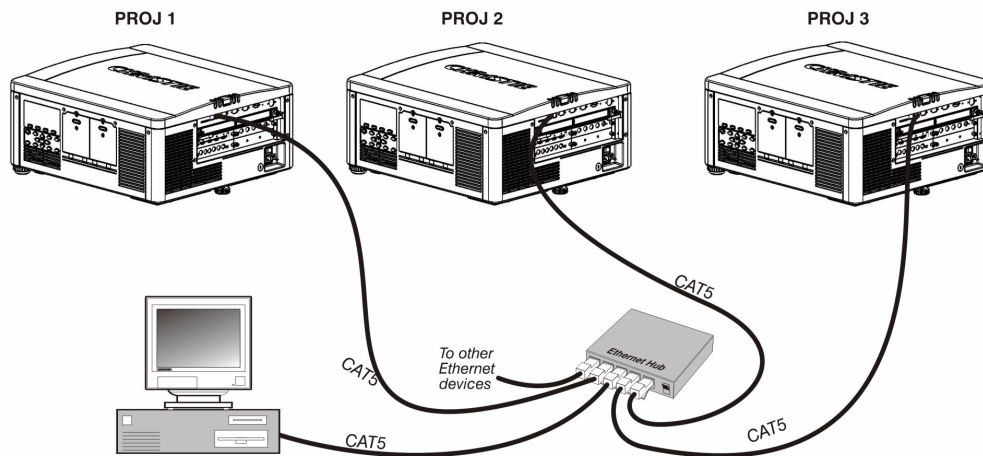


FIGURE 2-23 - ETHERNET NETWORK SETUP

SETTING THE PROJECTOR'S IP ADDRESS, SUBNET MASK AND GATEWAY: See [Section 3.8 Configuration - Adjusting System Parameters and Advanced Controls](#).

CHANGING THE PORT#: On some Ethernet networks, firewall restrictions may require that the port number of the projector be changed from its default of 3002. If so, enter a new port number in the *Ethernet Settings* menu or include the new port#.

Separating Networks

By default, communications originating from one type of serial controller—RS232 vs. RS422 vs. Ethernet—stay on the corresponding network path. A “Separate” setting indicates this separation for “**Network Routing**” in the **Communications** menu, see [Section 4 Menu Tree](#). If you are using an RS422 controller, for example, it will communicate only with the projector to which it is connected unless you change this setting to either “RS232 and RS422 Joined” or “All Joined”.

Communicating to all Ports

To relay all messages to all ports—RS232, RS422, and Ethernet—set the “Network Routing” option in the **Communications** menu for each projector to “All Joined”, see [Section 4 Menu Tree](#). This configuration is useful if you are using a non-RS232 controller with the RS232 linking available between these projectors. For example, you may want to use both an RS422-compatible controller and an Ethernet-connected PC for working with a network of projectors linked via their RS232 in/out ports.

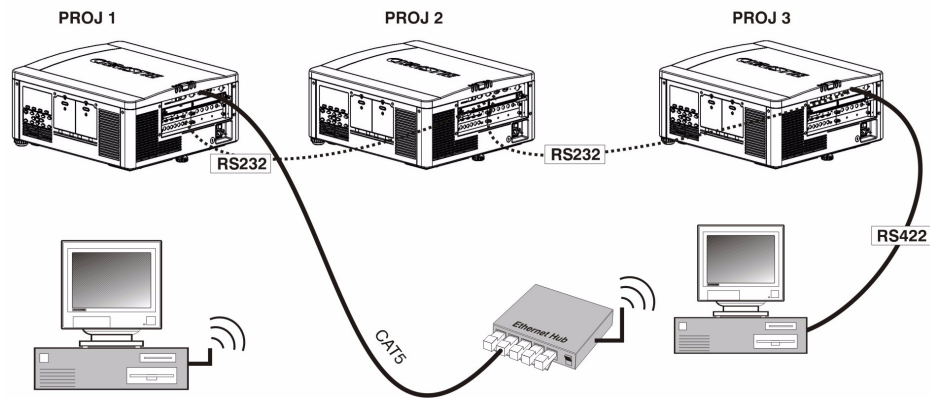


FIGURE 2-24 - COMMUNICATING TO ALL PORTS

To isolate just RS422 communications, select “RS232 and Ethernet Joined”. In [Figure 2-25 - Input Panel](#), only projector #1 will respond to the RS422 controller.

To isolate just Ethernet communications, select “RS232 and RS422 Joined”—only projector #1 will respond via Ethernet.

System Integration - GPIO Connector

The GPIO connector on the input panel interface [Figure 2-20 - Connecting RS422](#), provides a method of interfacing a wide range of external I/O devices.

Refer to [Appendix A, Figure A-1 - GPIO Connector](#) for complete details on pin configuration and how to program the GPIO.

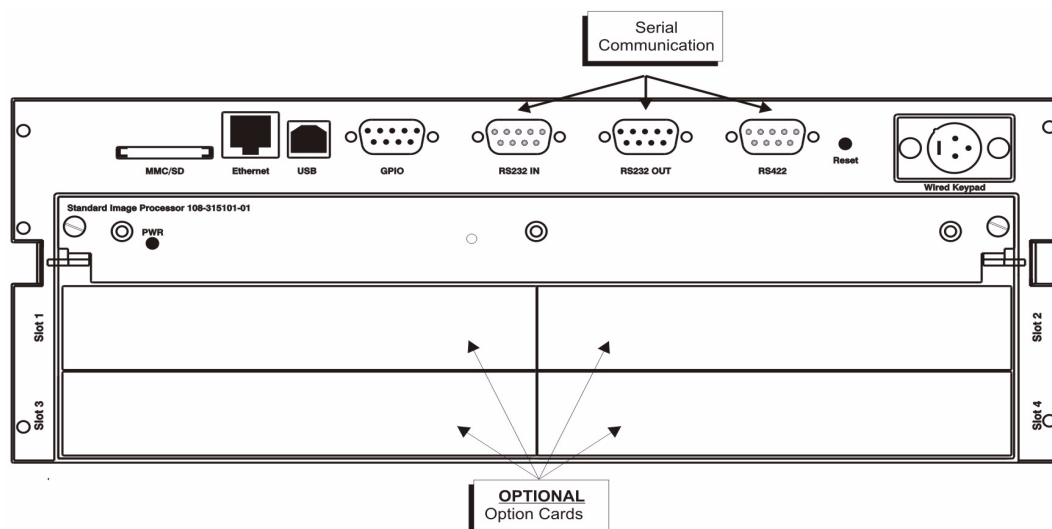


FIGURE 2-25 - INPUT PANEL

Status LEDs

Looking from the back of the projector, the LEDs represent, from left to right; Lamp 1, Lamp 2, Power, and Status. The LEDs will display the colors as shown below:

<u>Projector State</u>	<u>LEDs</u>	<u>LED State</u>
Hard Boot	All	All LEDs amber - means please wait
Standby Mode	Lamp 1 & 2	Off - lamps are off
	Power	Amber - AC is present but projector is off or standby
	Shutter	Green - shutter is open
		Amber - shutter is closed
Warm-up (Powering ON from standby)	All	LEDs cycle green from left to right
Normal Operation	Lamp 1 & 2	Amber - lamp time has expired and lamp should be replaced
	Power	Green - projector is powered up and operating normally
	Shutter	Green - shutter is open
		Amber - shutter is closed
Cool-down	All	LEDs cycle amber from left to right
Error	Lamp 1 & 2	Amber - lamp time has expired and lamp should be replaced
		Flashing Red - lamp has malfunctioned
	Power	Flashing Red - error has occurred. Details are displayed on the status display
Software Upgrade in progress	All	The pattern will alternate between: Amber, Off, Amber, Off and Off, Amber, Off, Amber
Lamp Regeneration in progress	Lamp 1 & 2	Flashing Green - the lamp is being switched off for its regeneration period to extend lamp life (typically 15 minutes every 24 hours)
	Power	Green - on or Amber - standby
	Shutter	Green - shutter is open

2.3 Connecting Sources

Sources are connected to the *Input Panel* located at the back of the projector. [Figure 2-25 - Input Panel](#). The Input Panel allows one image processor board and up to 4 input cards to be inserted. The input cards are hot swappable i.e. they may be plugged in and out while the projector is running. The image processor should only be replaced when the projector is off or when it is in standby mode.

There are 5 option Input cards available:

- High-Definition Multimedia Interface/Twin HDMI (High-Definition Multimedia Interface)
- Analog BNC
- Dual SD/HD-SDI (Serial Digital Interface)
- Dual Link DVI
- Video Decoder

These cards slide into the option slots, shown in [Figure 2-25 - Input Panel](#). The option cards can be used in any slot. One or more of the option slots may be used with any combination of option cards, including multiples of the same card type. There may be up to 2 active inputs being displayed at any time, either from one card or from 2 cards. These 2 inputs can be routed to outputs or to the main or PIP video image. **NOTE:** See [Section 7 Specifications](#) for more details.


LEDs

LEDs are located on the faceplate of each input card and indicate the following:

- Power ON - Green
- Signal Valid - Green
- Signal Invalid - OFF


Twin HDMI Input Card

This card accepts one or two HDMI inputs, and can route one or both inputs to the card's outputs. Any input from any card can be looped out of this card. The output label '1-OUT' loops out the main image being displayed on the projector. The output labelled '2-OUT' loops out the image displayed in the picture in picture (PIP). Any input from any optional input card can be looped out of this card. There are 5 LEDs on the module faceplate. The PWR on the left side indicates power is applied, and that the card is initialized. The LEDs to the right side of the corresponding connectors indicate that a valid signal is detected. In the case of the output's, the LED indicates a signal is currently being looped out.

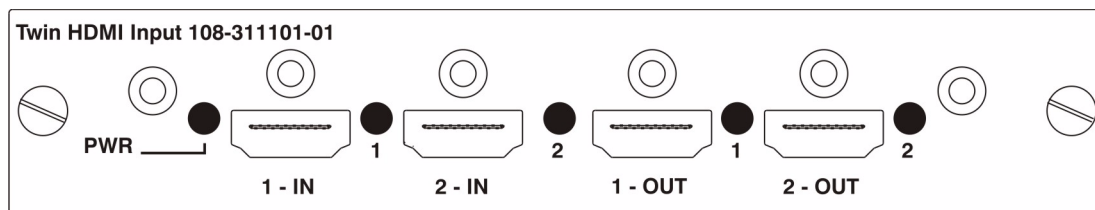


Analog BNC Input Card

This card accepts several types of sync modes. In 5-wire sync mode all 5 BNC connectors are used. If H and V connectors are swapped, this card will still operate normally. An analog graphic source such as a VGA from a PC can be connected. The card can operate in 4-wire sync mode, which accommodates 4-wire RGBC sources. The composite sync cable can be connected to either the H/C BNC or the V BNC. The card supports 3-wire RGB or YPBPr sync modes, sometimes called sync-on-Green(SOG). In this mode the H/C and V connectors are not used. The sync is connected to the Green/Y BNC connector. This card offers no loop out capability. There are 2 LED's on the module faceplate. PWR indicates power has been applied and the card is initialized, signal indicates a valid signal has been detected.

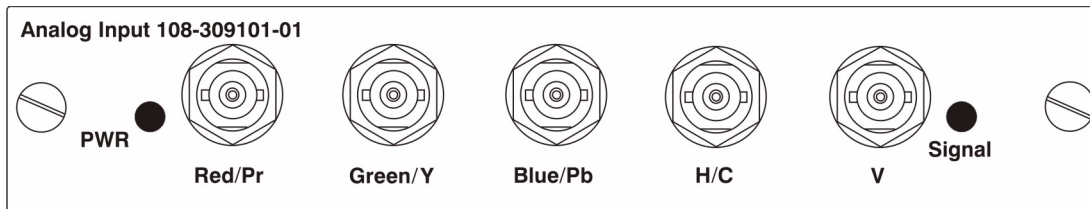


Dual SD/HD - SDI Input Card

This card accepts both standard-definition (SD) and high-definition (HD) serial-digital-interface (SDI) signals from 1 of 2 standard-definition (SD) or high-definition (HD) SDI sources. Both single-link HD and dual-link HD signals are accepted. The card has two SD/HD-SDI outputs, each of which is “loop through” for its respective input. There are 3 LEDs on the module faceplate. PWR indicates power has been applied and the card is initialized, and the two signal LEDs indicate a valid signal has been detected on the respective input.

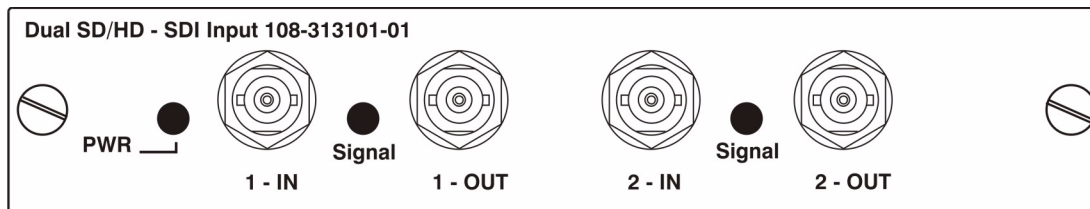

Dual Link DVI Input Card

This card accepts a single DVI signal with or without High-Bandwidth Digital Content Protection (HDCP) video signal over a DVI-I connector and analog video signals over the DVI-I or 15-pin VGA connector. The module can simultaneously support a digital signal on the DVI input and an analog signal on the VGA port, however it does not support 2 analog signals at the same time. There are 4 LEDs on the module faceplate. PWR indicates power is applied and the card is initialized, and the other 3 on the right side of the corresponding connectors indicate that a valid signal has been detected.

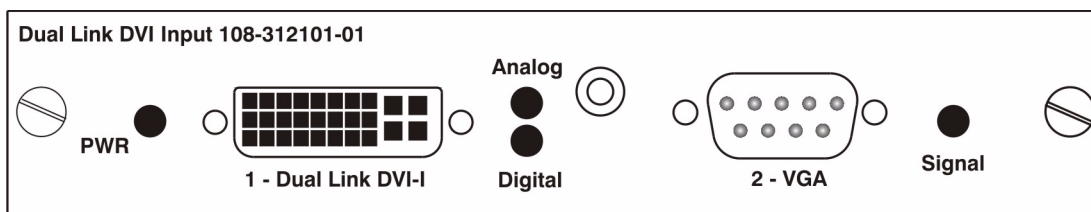


Video Decoder Input Card

This card accepts and decodes standard definition (SD) video. This includes CVBS (composite video), S-Video, and component sources. This card supports as many as 6 video signals, four of them on BNC connectors and two on 4-pin mini-DIN connectors. Each mini-DIN connector accepts 1 S-Video signal. The first BNC accepts composite video (only), while the remaining three BNC's can be grouped to allow one of the following combinations:

- 3 CVBS sources on 4, 5 & 6
- 1 CVBS source, 1 S-Video source: Luma(Y) connected to 4(Sy) and Chroma(C) connected to 6(Sc)
- 1 YPbPr source: component signal on 4(Pr), 5(Y) & 6(Pb)

The video decoder input card has 8 LED indicators. The PWR LED indicates that the module is installed properly, and has been successfully configured. The YPbPr LED indicates that a valid component signal has been detected on inputs 4, 5, and 6 (Component input grouping must also be selected in the projector's menu - see [Section 3 Operation](#)). The remaining LEDs are each associated with one of the inputs, and indicate a valid signal has been detected on that input.

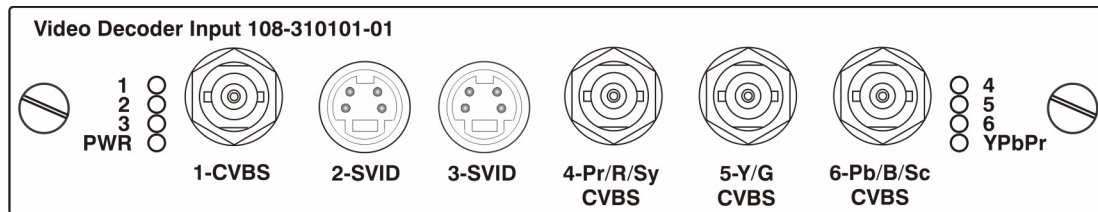

3 Operation

This section describes the controls and switches used for basic projector operation once it is properly installed, aligned and configured by a **CHRISTIE** accredited service technician.

⚠ WARNING Refer to Safety Warnings and Guidelines in [Section 5 Maintenance](#).

3.1 Using the Remote Keypad or Built-In Keypad

The projector is typically controlled using one of the following keypads:

- **Remote Keypad** for wired or wireless control up to 25 feet (8m) away (includes cable for use as a wired remote), see [Figure 3-1 - Remote Keypad](#).
- **Built-in Keypad** located at the side of the projector, see [Figure 3-2 - Built-In Keypad](#).

While each of the keypads provides complete control of the projector, they differ slightly in their arrangement of keys and in what functions can be accessed directly with a key press rather than requiring use of the menu system. You may find one keypad more convenient than another for your specific installation and application.

Guide to Keypads

Keep in mind the following guidelines:

Press keys one-at-a-time; there are no simultaneous key combinations required. **NOTE:** POWER, SHUTTER, and OSD function by: “press-and-hold” (2 seconds), press twice quickly, or press UP ARROW KEY to switch on or press DOWN ARROW KEY to switch off, see [Figure 3-1 - Remote Keypad](#).

Hold arrow keys down for continuous adjustment/movement in one direction. In serial networks, pause briefly between adjustments to ensure that more distant projectors can “keep up” with the commands.

If you press a key while the projector is still responding to the previous action, such as during power-up, the second key press may not take effect. These are toggle keys, which require you to press and hold or press twice or press and use the up/down arrow keys.

The remote keypad controls the projector by way of wireless communications from a battery-powered infrared (IR) transmitter. Use the remote keypad the same way you would use a remote keypad supplied with a TV or VCR. When making key presses, direct the keypad toward the projector front or rear IR sensor. One of the two IR sensors on the projector will detect the signals and relay the commands for internal processing. A laser pointer is included in the remote keypad.

Refer to the key descriptions provided for the remote keypad, see [Figure 3-1 - Remote Keypad](#).

⚠ WARNING Laser radiation is emitted from the laser diode in the remote. Do not look directly into the beam of the laser.

Remote Keypad

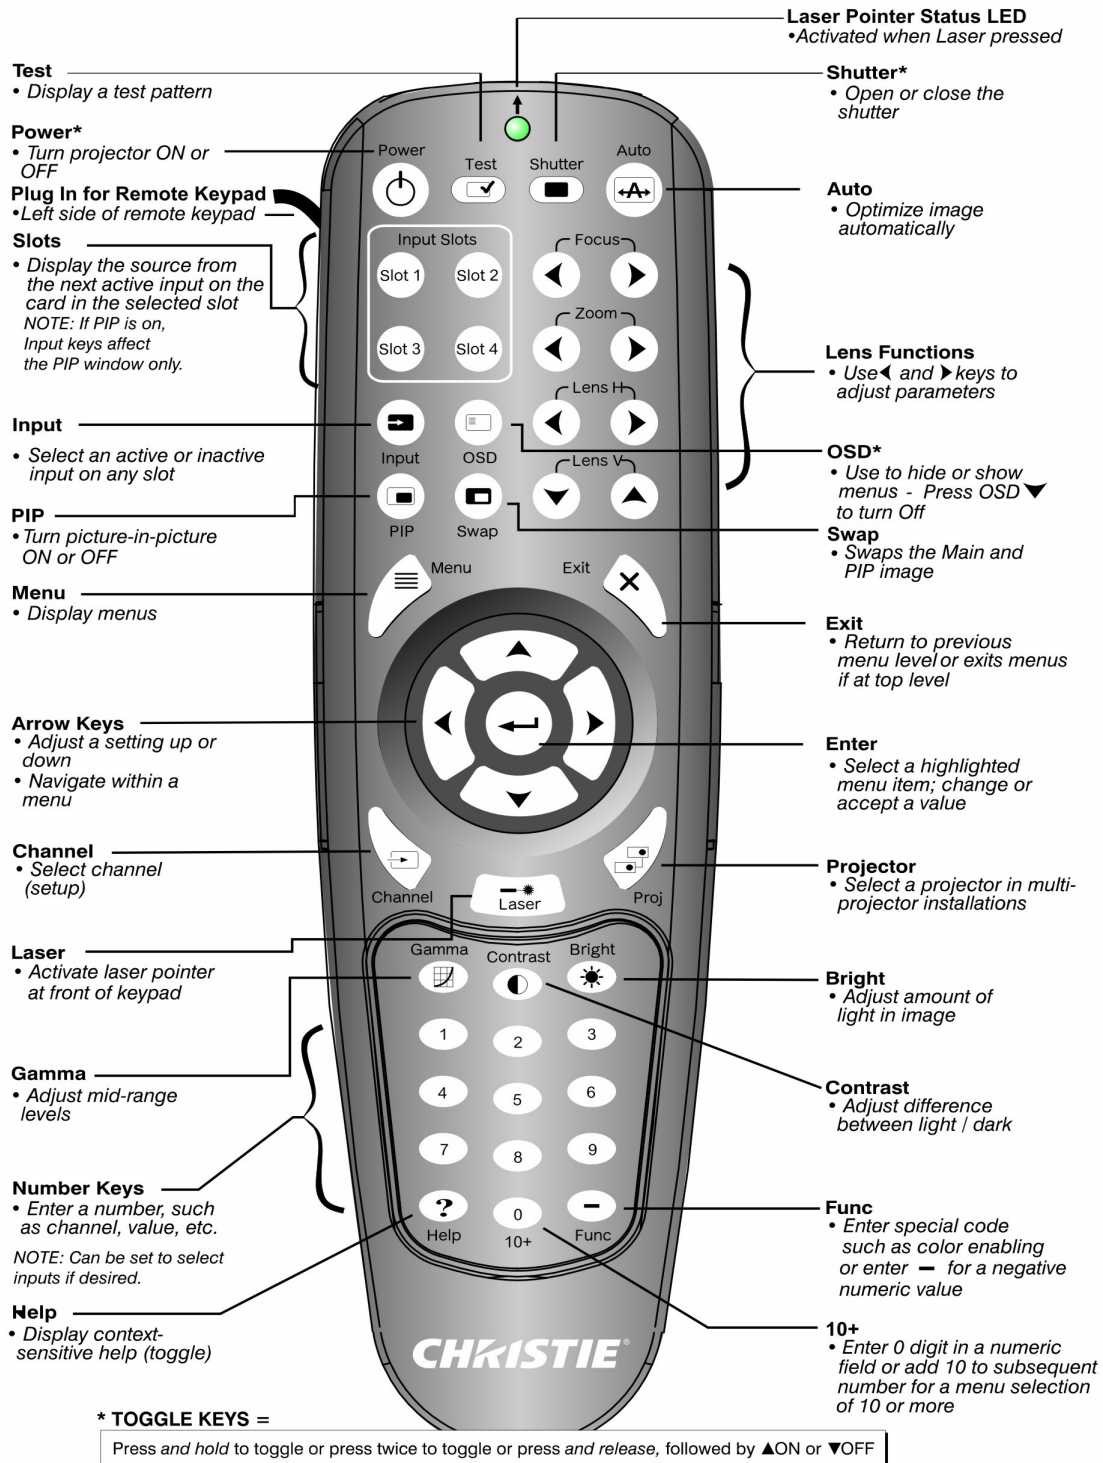


FIGURE 3-1 - REMOTE KEYPAD

Wired Remote

You can convert the remote keypad into a wired remote keypad using the cable provided with the projector. Connect one end into the remote and the other to the XLR connector on the input panel labeled as wired keypad. The wired remote is recommended when:

- The built-in keypad is inaccessible
- The lighting conditions are unsuitable for proper IR transmission

NOTE: Leave the batteries in the wired remote for the laser pointer key to work.

Built-in Keypad

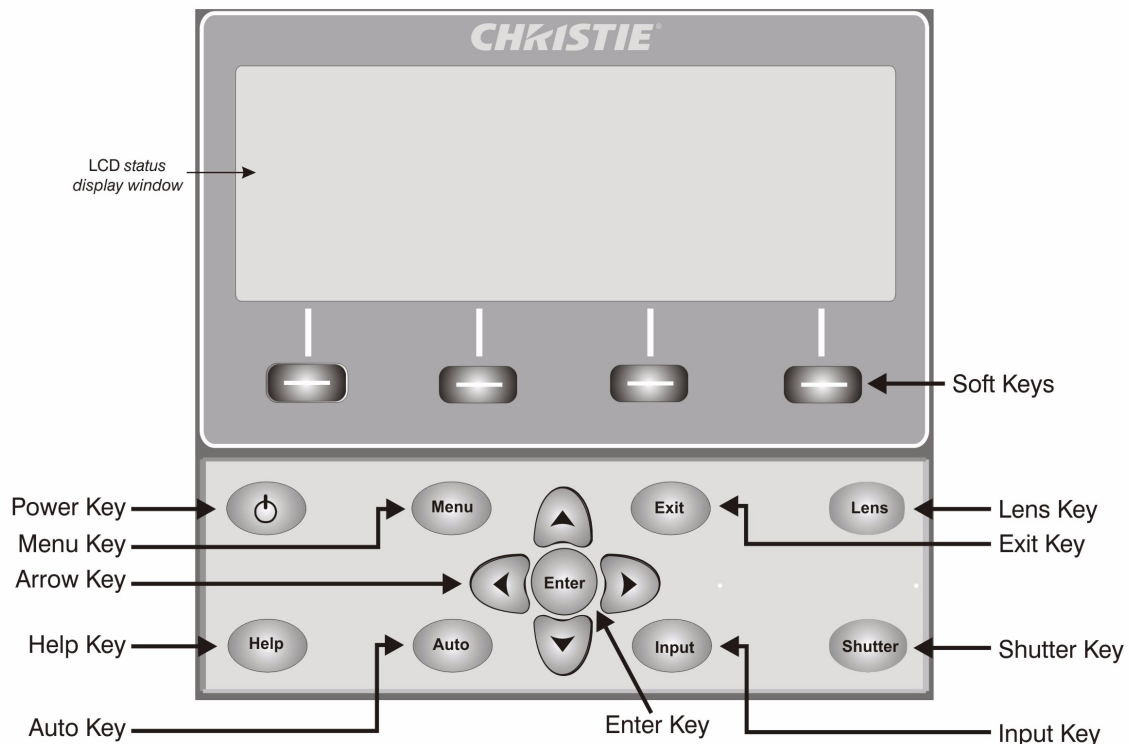


FIGURE 3-2 - BUILT-IN KEYPAD

The built-in keypad has a LCD status display window which displays all states of the keypad controls. The LCD displays status information when the projector is powering up “Warm up: Lamp is warming up” and when the projector is cooling down “Cool down: Lamp is cooling down.” The display shows the state of the keys, menu structure, and menu items.

Overview of LED and Key States

The LED color of the keys indicates that the key is in one of these states:

- **Amber**, a functionality is available that will affect the displayed image of the projector
- **Blue**, a functionality is available that is relevant to the built-in LCD only and will not affect the displayed image from the projector
- **Off**, the key is disabled in the current context

- **Power Key**, used to switch from Standby mode to ON, and from ON to Standby mode; LED always remains Amber
- **Help Key**, only available in the On Screen Display (OSD) context; LED is Amber when the menu is being displayed on the projected image display; when no menu is being displayed, the Help key is still enabled if the OSD is enabled. It is only disabled when the entire OSD is set to OFF.
- **Auto Key**, enabled state when the power is on and there are no test patterns on the screen. If the power is off or a test pattern is displayed the Auto key is disabled.
- **Exit Key**, is determined in the specific context of the screen being displayed.
- **Input Key**, enabled when the power is on. Disabled if the power is off.
- **Lens Key**, enabled when the power is on. Disabled if the power is off.
- **Shutter Key**, enabled when the power is on. Disabled if the power is off.
- **Menu Key**, always remains in the enabled state when the power is on. If the power is off the Menu key is disabled.
- **Soft Key**, used to select an action indicated by text above the key on the LCD. If no text is shown, the associated key is disabled.

3.1.1 Remote Keypad Commands

Specific keypad commands are explained, see [Figure 3-1 - Remote Keypad](#):

Power ON/OFF

Press and hold POWER for two seconds or press twice quickly to action the projector ON or OFF. Or press and release POWER followed immediately by UP ARROW KEY (ON) or DOWN ARROW KEY (OFF) to guarantee the correct action (useful if you are unsure of the present state). **NOTES: 1)** *After powering down, the lamp cooling fan remains on for approximately five minutes to cool the lamp.* **2)** *Avoid turning the projector back on until it has been off for a few minutes. Hot re-strikes of the lamp will reduce lamp life.*

Test

Steps forward through all internal test patterns. After stepping past the last test pattern, you will return to current input.

Press TEST and then cycle by using the UP ARROW KEY and DOWN ARROW KEY arrow keys, to cycle in either direction through the test patterns. Press EXIT to return to the current input.

Auto

Initiates an automated process in which the projector optimizes critical display parameters such as size, position, pixel tracking, etc., for the current source. These parameters are listed in [Table 3.1 - Auto Setup](#). An auto setup can save time in perfecting a display and you can modify the adjustments as desired.

Table 3.1 - Auto Setup

OPTIMIZES:	SETS TO DEFAULT:
Pixel Tracking	Contrast
Pixel Phase	Brightness
Size and Blanking	Auto Input Level (off)
Vertical Stretch	Detail (if video source)
Position	Filter
Input Levels	Luma Delay

NOTE: *You must have an unlocked channel present to use Auto Setup.*

The best auto setup will be obtained under the following conditions:

- Input levels, it is best to have an image with saturated (very bright) colors.
- Phase, high contrast edges are needed.

To determine active window size:

- Video images should have whites and blacks in the image.
- Wide range video images should have content (including white) that extends to all edges of the image.

Channel

Select a specific source setup (channel) defined and stored in projector memory. Once you enter a two-digit channel number (or, if there is a list displayed, highlight it and press ENTER), the display will automatically change and update according to the numerous setup parameters defined for that channel. **NOTE:** *A new channel is automatically created if you adjust an image from a new source.*

NOTE: CHANNEL key behavior during a presentation depends on whether or not the Display Channel List option is enabled in the **Menu Preferences** menu. You can choose to use a scrollable list of channels when you press CHANNEL, or you may prefer to enter the desired channel number “blind”, i.e., without on-screen feedback. See **Menu Preferences** later in this section.

Slot 1, 2, 3, 4

Press to display the next active input on the card in the slot.

Input

Displays all inputs in all slots, both active and inactive. Scroll through the list to select an input for the main image. Press Input again to show the list and select the picture-in-picture (PIP) image.

PIP

Turns PIP ON or OFF.

Swap

Swaps the main and PIP images.

Contrast

Changes the level of peak white in your images. Use LEFT/RIGHT ARROW KEY until you reach the desired level of contrast—for best results, start low and increase so that whites remain bright but are not distorted or tinted and that light areas do not become fully white (i.e., “crushed”). Conversely, low contrast causes dim images.

Bright

Increases or decreases the black level in the image. Use LEFT/RIGHT ARROW KEY until you reach the desired level of brightness. For best results, start high and decrease so that dark areas do not become fully black (i.e., “crushed”). Conversely, overly high brightness changes black to dark gray, causing washed-out images.

Gamma

Determines how gray shades are displayed between minimum input (black) and maximum input (white) for a given amount of signal. The proper setting helps maintain optimized blacks and whites while ensuring a smooth transition for the “in-between” values utilized in grays. Unlike brightness and contrast controls, the overall tone of an image can be lightened or darkened without changing the two extremes and your images will be more vibrant yet with good detail in dark areas when using the Gamma control.

The nominal setting for Gamma Correction of 0 is correct for most signals and conditions. If excess ambient light washes out the image and it becomes difficult or impossible to see details in dark areas, increase the gamma correction setting to compensate. Note: The range for this control has changed. After an upgrade from version 1.2 or earlier to version 1.3 or later, the setting for Gamma Correction must be set again.

Number Keys

Press 1 to 9 to enter a value in a text box or to select a menu item.

10+

Press **0** before pressing another number to enter a number greater than 9, e.g. press **0** then 2 to enter the number 12 as a menu selection. **NOTE:** *When entering numbers in a text field, this button acts as 0.*

Help

Press HELP to display context-sensitive help. Press HELP again to toggle the help window OFF.

Menu

Press MENU to enter or exit the projector’s menu system.

OSD (On-screen display)

Press OSD then DOWN ARROW to hide the projector’s menu system during use. To see the menus again, do one of the following:

- Press and hold OSD for two seconds.
- Press and release OSD followed immediately by UP ARROW.
- Press OSD, OSD.

Invisible menus are fully functional, enabling “hidden” access to numbered features and image adjustments by entering the corresponding sequence of key presses on the keypad.

NOTE: *With OSD “on”, you can still hide error messages and slide bars by disabling these options in the Menu Preferences menu.*

Shutter

Press and hold SHUTTER for two seconds to toggle the internal mechanical shutter blade closed or open with a single keystroke. Or press and release SHUTTER followed immediately by UP ARROW KEY (closed) or DOWN ARROW KEY (open) to guarantee the correct state (useful if you are unsure of the present state). Alternatively, press SHUTTER, SHUTTER to toggle from the present on/off state. A closed shutter blanks the display (turns it to



black). Close the shutter to block the displayed image while maintaining access to projector functions. Opening the shutter restores the image. **NOTES: 1)** *The LCD display shows the current state of the shutter.* **2)** *The shutter is open upon power-up.*






Function Key

IF WITHIN A NUMERIC FIELD IN A MENU: Use FUNC to enter a negative number.

IF WITHIN A TEXT FIELD: Press FUNC followed by the UP ARROW KEY or DOWN ARROW KEY to convert between capital and lower case letters. Press FUNC followed by the LEFT ARROW KEY or RIGHT ARROW KEY to insert or delete a character. Press FUNC followed by ENTER to delete all characters.

IF WITHIN A PRESENTATION: Press FUNC followed by two numeric numbers to enable a specific color or colors in the display (see right). For

example,  will display only red, and  will display green data. Eliminating one or more colors can help with certain diagnostics and setups, such as when accurately overlaying one image on top of another from stacked projectors. **NOTE:** *Color enabling can also be implemented from numerous locations within the menu system.*

	= Red
	= Green
	= Blue
	= Yellow
	= Cyan
	= Magenta
	= White (all colors)

Press FUNC followed by HELP to disable **Keystone**, **Edge Blending** and **Brightness Uniformity** settings. This will disable the features without changing the settings associated with them.

FIGURE 3-3 - FUNCTION KEY

Projector

Press PROJ to access a specific projector within a group of projectors or to confirm if the local projector is listening. The number in the “Enter Number” window indicates which projector is currently listening to commands, and will match the projector number that has been defined in the **Menu Preferences** menu.

The PROJ checkbox (read-only) shows whether or not the projector physically connected to a keypad is listening to commands from that keypad. A checkmark means that connected projector is listening; if there is no checkmark, you are communicating with a different projector.

To control a specific projector with the keypad, press PROJ and then enter the three-digit number assigned to the projector you want to use. If you switch to a projector other than the one you are currently using, the checkmark will disappear.

To broadcast to multiple projectors, press PROJ and then PROJ again without entering a projector number. Keypad commands will then effect all projectors present. **NOTE:** *There is no method of controlling a group of projectors within the same wired configuration using the wired keypad exclusively, since there is only one wired protocol available.* **NOTE:** *The projector's address can be set in the **Configuration Menu**>**Communications Submenu**.*

Enter

Press ENTER to select a highlighted item, to toggle a checkbox, or to accept a parameter adjustment and return to the previous menu or image.

Exit

Press EXIT to return to the previous level, such as the previous menu. **NOTE:** *EXIT does not save changes within text editing boxes (including number editing of a slide bar value) or within pull-down lists. It acts as a “cancel” in these cases.*

Arrow Keys

Use the LEFT/RIGHT ARROW KEY to change a slide bar value or to select a different option within a pull-down list without having to first scroll through options or navigate within a menu, pull-down list or text box.

Lens H and Lens V

When adjusting the image for focus, zoom or horizontal and vertical positioning, use the specific arrow keys (LEFT/RIGHT ARROW KEY or UP/DOWN ARROW KEY) related to each function. A small window will appear to indicate the type of adjustment taking place. For example,


- Use the FOCUS and the LEFT ARROW or RIGHT ARROW KEY to improve image clarity as desired.
- Use the ZOOM and the LEFT ARROW or RIGHT ARROW KEY to achieve a desired image size.
- Use the LENS H and the LEFT ARROW or RIGHT ARROW KEY to position the image horizontally.
- Use the LENS V and the UP ARROW or DOWN ARROW KEY to position the image vertically.

Press EXIT to return to a presentation level. **NOTE:** Use the LENS key (built-in keypad) with the general UP/DOWN ARROW KEY to get the same effect as if using the arrow keys related to “Lens V” or “Lens H” on the Remote Keypad. All 4 lens settings can be adjusted by using the soft keys.

Laser

Press LASER to activate the laser pointer on the remote. Point the remote at the screen to highlight an area of your presentation.

NOTE: Leave batteries in the wired remote keypad for the LASER key to work.

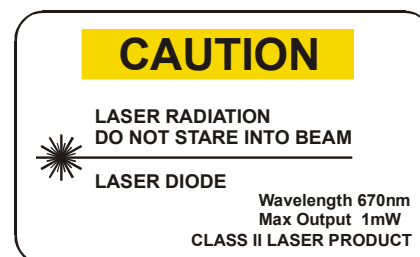

3.2 Navigating the Menus

Main Menu

Most of the projector controls are accessed from within the projector's menu system. There are several groups of related *functions*, with each group selectable from the **Main** menu as shown at right. Press MENU at any time to display this **Main** menu.

On the remote keypad, enter the number corresponding to the function menu you wish to access, such as 2 for the **Image Settings** menu. Or use the UP/DOWN ARROW KEY on any keypad to highlight the desired option, then press ENTER. The corresponding function menu or pull-down list of further options will appear.

With a function menu displayed, enter a menu option number for any numbered option, or use the UP/DOWN ARROW KEY to highlight the desired option and then press ENTER. Long menus have a scroll bar on the right—use the arrow keys to access the remainder of the menu. Locked items or items that do not pertain to the current action or condition appear dimmed and cannot be selected.

When finished with a function menu:

- Press EXIT to return to the previous screen.

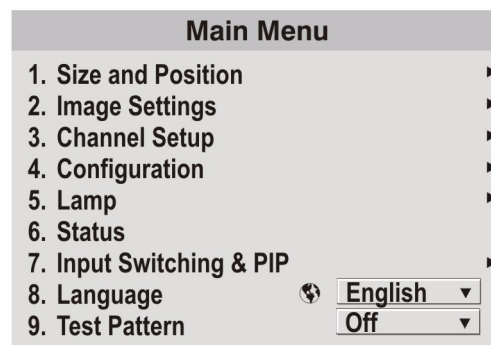


FIGURE 3-4 - MAIN MENU

OR

- Press MENU to leave the menu system and return to the presentation.

NOTES: 1) *If there is no signal present, all source-dependent adjustments are disabled.* **2)** *After 15 minutes of inactivity, the projector leaves the menu system and returns to the presentation.* **3)** *The **Status** menu is read-only.*

On-line Help

Press HELP to display summary information about the current menu or highlighted option. Press HELP again to exit.

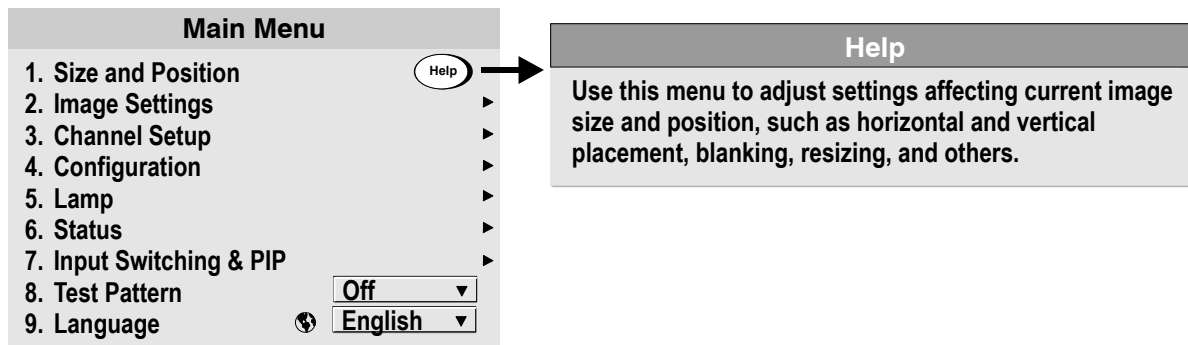


FIGURE 3-5 - ON-LINE HELP

The Global Icon



Menu options that include this icon apply universally. Menu options without this icon apply to the selected channel only.

Using Slide bars and Other Controls

Most of the function menus allow you to change settings by using slide bars, checkboxes, and pull-down lists. Navigating options:

- Enter the menu option number corresponding to the setting you wish to change (for example, press MENU 1 3 to select “Vertical Stretch” in the **Size and Position** menu).
- Move the highlight to the option desired and press ENTER.
- Move the highlight to the option desired and press LEFT/RIGHT ARROW KEY to adjust immediately.
- You can bypass the menus entirely and use a single key to immediately access an adjustment during your presentation (applies only to options having their own key, such as Contrast, Brightness, Gamma, etc.).
- For “blind” access, hide the entire menu system (see OSD key, above) and access using the proper sequence of key presses.

Slide bars in menus – The current value for a given parameter, such as size or vertical stretch, appears to the left of its slide bar icon (adjustment window). This number often expresses a percentage, or it may have units associated with it (such as pixels), depending on the specific option. Press LEFT/RIGHT ARROW KEY to gradually adjust the setting up or down—both the number and the length of the bar change accordingly. Hold for continuous adjustment. Or press ENTER to activate a slide bar text box for specific number entry via the keypad and then press ENTER to save (or press EXIT to cancel).



FIGURE 3-6 - EXAMPLE OF SLIDE BAR

“Direct” slide bars - For quick access, to Gamma, Brightness, and Contrast slide bars without traveling the menu system. Press Gamma, Brightness, or Contrast to display the contrast slide bar.

Use the arrow keys to adjust a direct slide bar, or press ENTER and enter a specific number from the keypad, then ENTER or LEFT ARROW KEY or RIGHT ARROW KEY to save (or EXIT to cancel). When you are done, press EXIT to save and return to your presentation.

NOTES: 1) *You can still adjust a direct slide bar as usual if the display is turned off (see OSD or Menu Preferences menu) — the slide bar just won't be visible. 2)* *A direct slide bar disappears if it is not used within five seconds.*

Checkboxes - Conditions are present if its adjacent checkbox contains a checkmark. To toggle the checkbox, highlight and press ENTER, or highlight and use RIGHT ARROW KEY to check and LEFT ARROW KEY to uncheck. If a checkbox is numbered, enter its number to immediately toggle the checkbox.

Pull-down lists – To see a pull-down list of options available for a given parameter:

- Highlight the list and press ENTER; or
- Enter the menu option number

Use the UP ARROW KEY or DOWN ARROW KEY to navigate up and down within the list. Press ENTER to choose an option from the list.

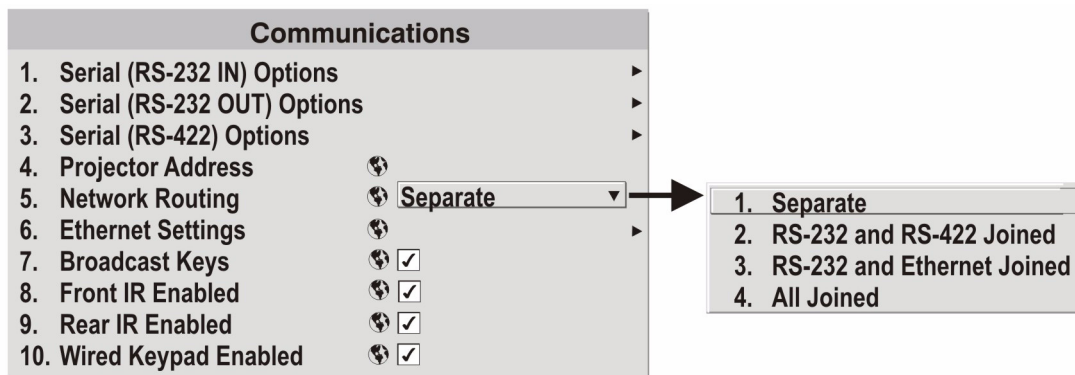


FIGURE 3-8 EXAMPLE OF PULL-DOWN LIST

If you prefer to quickly scroll through a list without first pulling it down, highlight the option and use LEFT ARROW KEY or RIGHT ARROW KEY. Press ENTER when the desired choice appears. **NOTES: 1)** *Press LEFT ARROW KEY or RIGHT ARROW KEY to jump between pages in an extra long pull-down list. 2)* *Press EXIT while in a pull-down list to cancel any change.*

Editing Text

Activate the Edit Window: To enter or edit text, highlight the desired parameter (such as a channel name) and press ENTER to activate its adjacent edit window. Any previously entered text is displayed with its first character highlighted in a square cursor, signifying that this character is ready for editing.

5. Broadcast Keys ☒

FIGURE 3-7 - EXAMPLE OF A CHECKBOX

Navigate Within the Edit Window: Press RIGHT ARROW KEY to move the cursor forward or LEFT ARROW KEY to move the cursor backwards as desired.

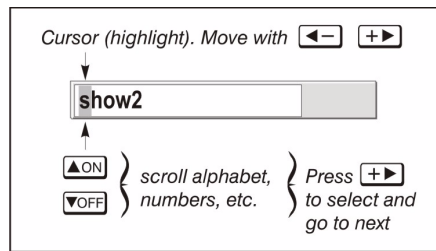


FIGURE 3-9 - ENTERING TEXT

Edit a character: To edit a highlighted character, use UP ARROW KEY and DOWN ARROW KEY to scroll through the alphabet, numbers, spaces and punctuation available. When the character you need appears, press RIGHT ARROW KEY to select it—the cursor will move to the next available character of current text. To convert a lower case letter into a capital letter, position the cursor on the letter and press FUNC followed by the UP ARROW KEY. To convert a capital letter into a lower case letter, position the cursor on the letter and press FUNC followed by the DOWN ARROW KEY. **NOTE:** Also enter numbers directly from the keypad.

To convert a lower case capital letter, position on the letter and press FUNC followed by the UP ARROW KEY, To convert a capital letter into a lower case letter, position on the letter and press FUNC followed by the DOWN ARROW KEY.

Add or Delete a Character or Space: To insert a space at the cursor location, press FUNC then the RIGHT ARROW KEY. To delete a highlighted character (or space), press FUNC then the LEFT ARROW KEY.

Delete all Characters: Press FUNC followed by ENTER.

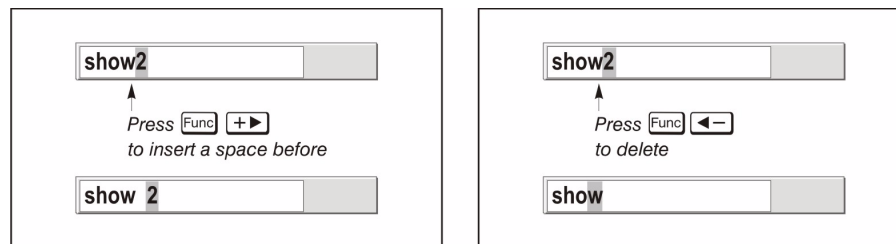


FIGURE 3-10 - ADD/DELETE CHARACTER OR SPACE

Press Enter When Finished: To accept edits and leave the edit window, press ENTER.

NOTE: Press EXIT at any time to cancel changes and return to the previously defined text.

Edit numerical values:

Enter numbers directly from the keypad to specify numbers representing projectors channels (source setups), or slots. As each digit is entered, it is inserted on the right of the field, and the numbers already in the field are shifted on the left. The channel numbers are defined with two digits—for example, if you enter only a single digit (such as “7”) for a channel number, the channel will automatically be defined as “07”. Enter “07” to utilize this channel. If you press any non-numbered key, the number entered up to that point is accepted and updated as the new value. Press EXIT to cancel editing of numerical values.

3.3 Using Inputs and Channels

The projector stores and recalls up to 99 different channels (source setups) for a variety of inputs. This memory feature allows you to define and use a variety of customized setups. Depending on what you have defined, each physical source connection (i.e., input at the projector) can have several different channels associated with it.

NOTE: See [Section 2 Installation and Setup](#), for a full explanation of how to connect sources to the projector.

How Do I Select an Input Or A Channel?

INPUT – An input is a source physically connected to the projector. INPUT describes the source signal and which input slot it is connected to.

CHANNEL - A channel is a collection of measurements, locations and settings that tailor the display of a signal to your specific needs. Since source types and applications can vary greatly, you will likely want to adjust and define a wide variety of parameters, such as brightness, contrast, size, etc., in order to customize and optimize the display from or for a particular source. For example, the display settings you choose for a VCR source may be very different from those you choose for a high-resolution computer source.

Once you have adjusted a display parameter, such as pixel tracking or contrast, all current settings are collectively stored in the projector's memory as a unique two-digit channel, such as 09. You can have numerous distinct channels available for the same input, any of which can be selected by using the CHANNEL key on the keypad followed by the two-digit channel number.

Shown in [Figure 3-11](#) is a sample channel list available from CHANNEL. **NOTE:** The CHANNEL key may display a channel list or not, depending on what you have defined for "Display Channel List" (see **Menu Preferences** later in this section).

SWITCHING INPUTS – There are 4 methods for selecting an input:

1. Press the INPUT key. This will display a list of the 4 slots, with the card type and input signal type in each slot. The currently selected input for the main image will be highlighted. Scroll up or down through the list and press ENTER to make a new selection. Press the INPUT key again to show the list and allow the selection for the PIP image. Repeatedly pressing the INPUT key will toggle between the main and PIP image.
2. Press the appropriate direct SLOT key to quickly display one of the inputs on the selected slot to the main image. This will not bring up any menu selection, and is only applicable for the main image.
3. Use the menu options **Menu > Input Switching & PIP > Main Input** and **Menu > Input Switching & PIP > PIP Input** to select the source of the image for the main or PIP image. The image will be displayed according to the following:

Main Channel: 01					
01.	1,2	iSVid	15.73kHz-	i59.94-Hz-	
02.	4,1	pDig	33.72kHz+	p29.07-Hz+	

FIGURE 3-11 - CHANNEL LIST

If it is the first time you have used the source/input (or if you used the input but did not define a channel by adjusting anything), the projector will recognize the new input signal based on its frequencies and polarities, automatically displaying an image according to default settings for that signal. In general, the image from the new source will be as large as possible without losing its aspect ratio. This and other default image settings depend on the incoming source.

If you used the source once before and changed a display parameter, such as contrast, V-Position, etc., then a channel was automatically created and still exists in projector memory (see **CHANNEL** below). Using one of the input or slot keys will automatically recall this channel—and all its setup parameters—and update the display accordingly.

If more than one channel exists for the input, the image will be displayed according to the setup parameters for the first channel with matching characteristics.

Creating a New Channel

To use a new source with the projector, a new channel must be created so that the projector will respond to an input signal from that source. A new channel can be created automatically, or it can be copied from an existing channel and then edited as necessary, refer to [Figure 3-14](#) and [Figure 3-15](#).

When you select a direct input (SLOT 1, SLOT 2, SLOT 3, or SLOT 4), any existing channels in the projector are searched for matching input and signal parameters – this only occurs if Auto Source is enabled on these channels. If no match to the incoming input signal is found in currently defined channels, a new channel is temporarily created based on factory-defined defaults for this type of signal. The channel number assigned is the lowest available number from 01-99. **NOTES: 1)** *An automatic channel will be discarded unless one or more of its parameters are changed and will not appear in the channel list (see below).* **2)** *If 2 channels have the same distinguishing source characteristics except for the reversal of sync connectors (i.e., H-sync and V-sync, are switched), they are still defined as distinct channels.* **3)** *You cannot define a new channel without an incoming signal.*

USING A CHANNEL: You can normally select a channel at any time by pressing CHANNEL (see below). If you want to hide a channel from appearing in this list, you must edit the channel refer to [Figure 3-16](#). Such a channel can still be selected by entering its number as shown below.

NOTES: 1) *The current channel is highlighted in the channel list, or, if the current channel is hidden, the first channel in the list is highlighted.* **2)** *Channels created automatically do not appear in the channel list unless a parameter for the channel has been changed.*

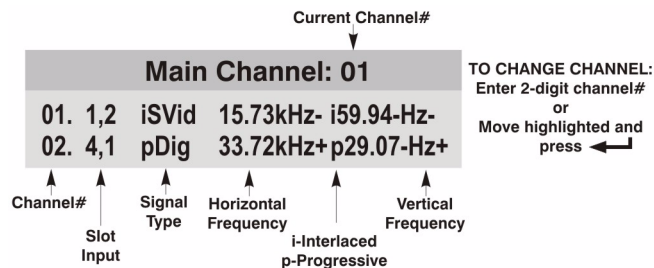


FIGURE 3-12 - USING A CHANNEL

3.4 Channel Setup Menu

All available channels are listed in the **Channel Setup** menu, which describes how each channel can be accessed and provides access for editing, copying and deleting channels.

Press MENU from the presentation level to display the **Main** menu. To display the **Channel Setup** menu, press 3, or move the highlight to the **Channel Setup** option and press ENTER. The **Channel Setup** menu will appear (see sample below).

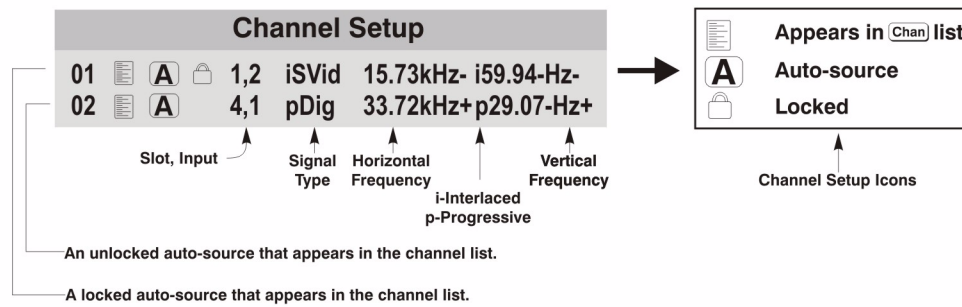


FIGURE 3-13 - CHANNEL SETUP MENU

The channel setup icons list all defined channels. The far left column lists channel numbers defined. The values in the far right columns indicate horizontal and vertical frequencies or if there is a defined name for a channel, it appears here. The H & V frequencies will not appear if a name has been defined for the channel; instead the name is only seen. The H & V frequencies are inserted as the name when the channel is first created. The vertical frequency is displayed with the sync polarity. The remaining columns pertain to each signal type; such as, input number, slot location, a variety of icons indicating access to each channel, and an abbreviated description of each signal type. **NOTE:** Use UP ARROW KEY and DOWN ARROW KEY to see the remaining channels not visible in the initial display of channels.

SIGNAL TYPE — The channel list or the **Channel Setup** menu, identifies signal types abbreviations as defined below in [Table 3.2 - Abbreviations for Signal Type](#). Composite Sync on the H/C input or the V input (4-wire). These abbreviations are preceded by either an 'i' (interlaced signals) or 'p' (progressive signal).

Table 3.2 - Abbreviations for Signal Type

The first 5 items in this table is analog RGB with various sync combinations indicating Sync Source when editing the channel:

Abbrev.	Signal Type
--	No Sync
4WH	Composite (4 wire) on HC input
4WV	Composite (4 wire) on V input
SG	Sync-on-green (4 wire)
5W	Separate H,V (5-wire)
5WR	Separate H,V swapped (5-wire)
SVid	S-Video
CVid	Composite Video
Dig	Digital
DSDI	Digital Dual Link HD-SDI
DVI	Digital DVI
HDMI	Digital HDMI
HSDI	Digital HD-SDI
SDI	Digital SDI

TO COPY A CHANNEL, highlight the desired channel in the **Channel Setup** menu, then press ENTER to go to the **Select Channel Operation** submenu. Select "Copy" and press ENTER—a new channel will be created. It is identical to original, which still remains, but it is identified with the next available number from 01-99. If you change your mind and do *not* want to copy the current channel, press EXIT to cancel and return to the previous menu. Copying channels is a quick method for creating numerous channels, each of which can then be edited and adjusted for a variety of presentations in the future.

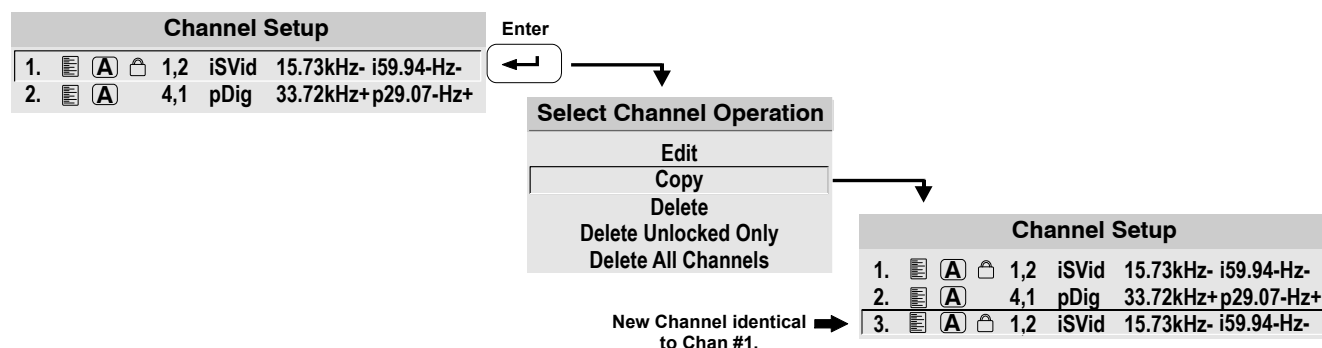


FIGURE 3-14 - COPY A CHANNEL

TO DELETE A CHANNEL, highlight the desired channel in the **Channel Setup** menu, then press **ENTER** to activate the **Select Channel Operation** submenu. Select **Delete** and press **ENTER**—a window will appear to confirm the deletion of this channel.

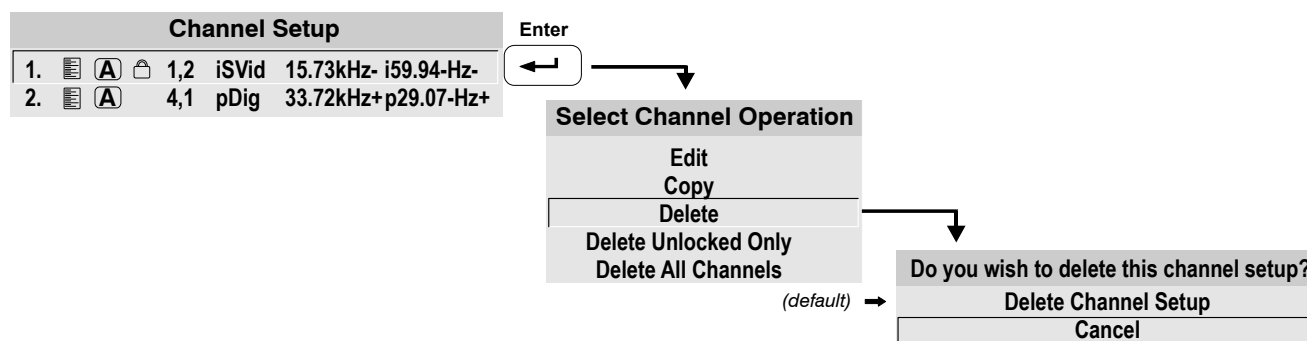


FIGURE 3-15 - DELETE A CHANNEL

TO DELETE MULTIPLE CHANNELS highlight any channel in the **Channel Setup** menu and press **ENTER** to go to the **Select Channel Operation** submenu. Select **Delete Unlocked Only** and press **ENTER** to delete all unlocked channels. Select **Delete All Channels** to delete all channels, even those that are locked. In either case, the current channel will remain but will be redefined from projector defaults. **NOTE:** For any deletion, a window will appear to confirm the deletion of the desired channel. Select **CANCEL** (default) if you don't want to delete after all.

CHANNEL EDIT — STEP 1

Press **MENU** from the presentation level to display the **Main** menu. To display the **Channel Setup** menu, press **3** or move the highlight to the **Channel Setup** option and press **ENTER**. The **Channel Setup** menu will appear.

CHANNEL EDIT — STEP 2

To edit parameters shown in the **Channel Setup** menu, select the relevant channel and press **ENTER**. The **Channel Edit** menu will appear similar to the sample shown below.

Channel Edit: 01		
Card Type	Video Decoder Input Card	
H-Frequency	15.73 kHz-	
V-Frequency	59.94 Hz-	
Interlaced	Yes	
Sync Source	S-Video	
1. Name	15.73kHz-	i59.94Hz-
2. Channel	1	
3. Slot	1	
4. Input	1	
5. In Menu	☒	
6. Auto Select	☒	
7. Locked	☒	
8. Previous Channel		
9. Next Channel		

FIGURE 3-16 CHANNEL EDIT

CHANNEL EDIT — STEP 3

If desired, review and/or edit the following channel setups in the **Channel Edit** menu:

- **NAME:**

An alphanumeric label can be defined and/or changed here. Channel names can be up to 12 characters in length. The default name is the horizontal and vertical sync frequencies.

- **CHANNEL:**

A two-digit channel number can be changed here. **NOTES: 1)** *If you enter a channel number that already exists, a dialog message appears indicating that this number is already in use—assign a different channel number. 2)* *You can define up to 99 channels.*

- **SLOT:**

1-4, corresponding to which slot in the projector's input panel the source is connected:

- **INPUT:**

1-6, corresponding to which input on the selected slot the source is connected to.

- **IN MENU:**

If checked (default, except for automatically defined channels with unchanged parameters), this defined channel will then appear in the list available when CHANNEL key is pressed. If unchecked, the channel must be accessed via CHANNEL on the keypad or via the Auto Source function. **NOTE:** *On-screen display of the channel list is an option that must be set in the **Menu Preferences** menu.*

- **AUTO SELECT:**

If checked, (default), the projector can automatically locate this channel when an incoming input signal matches. If not checked, the projector can locate the selected channel only when it is directly selected via CHANNEL on the keypad—and a change in input signal will not result in a channel change.

- **LOCKED:**

If checked, all of the image settings for this channel are locked. If unchecked (default), all available image settings can be adjusted as desired. You cannot use Auto Setup with a locked channel.

- **PREVIOUS CHANNEL:**

Select this option to see or change **Channel Edit** settings for the previous channel in the **Channel Setup** list.

• **NEXT CHANNEL:**

Select this option to see or change **Channel Edit** settings for the next channel in the **Channel Setup** list.

3.5 Adjusting the Image

The most commonly used options for image adjustments are accessed through two menus: **Size and Position** (MENU 1) and **Image Settings** (MENU 2), both of which appear in the **Main** menu. From either of these two menus. You can change settings affecting the image from the current channel by working with the appropriate slide bars, checkboxes and pull-down lists. EXIT will return to the previous menu (or to the presentation, if from the **Main** menu) and accept any changes you may have entered. Settings are saved with the current channel.

From your presentation, you can access any of the individual options in these menus by pressing MENU followed by the appropriate two-digit number representing their location in the menu system. For example, press MENU 23 to quickly access the “Gamma” option in the **Image Settings** menu.

NOTES: 1) For certain options, preference may be to use a “direct key” from presentation level to go directly to a particular option without traveling through the menu system (available for certain display parameters only). For example, press CONTRAST to access the “contrast” slide bar immediately. Press EXIT to return to your presentation. **2)** To hide “direct” slide bars, disable the **Display Slide bars** checkbox in the **Menu Preferences** menu. **3)** To hide the entire menu system from view, turn off the on-screen display by pressing OSD then the DOWN ARROW KEY.

For a good and efficient first step in perfecting the image, press the auto setup button, AUTO. This optimizes critical display parameters such as size, position, pixel tracking, etc., based on the type of incoming source. An Auto Setup can save considerable setup time, and you can still adjust the image as described below.

The best auto setup will be obtained under the following conditions:

- Input levels, it is best to have an image with saturated (very Bright) colors.
- Phase, high contrast edges are needed.

To determine active window size:

- Video images should have whites and blacks in the image
- Wide range video images should have content (including white) that extends to all edges of the image.

3.6 Size and Position Menu

Increase or decrease the size of your image, change its proportion (aspect ratio), move the image to a specific area of the screen, and refine other related parameters. Use **Size and Position** controls to match the image precisely to the screen used at the site.

Refer to if you need help using any of the options and controls. Changes made in the **Size and Position** menu are applied immediately and are saved when you exit the menu (press EXIT or MENU).

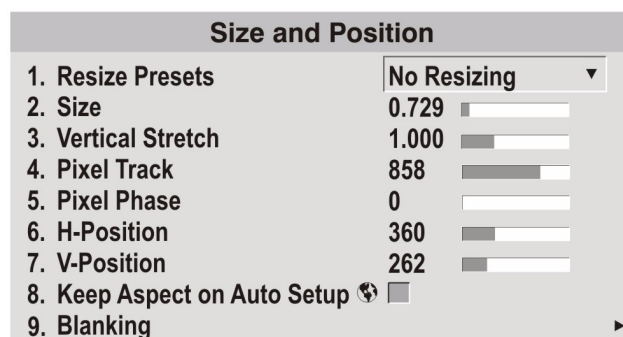


FIGURE 3-17 - SIZE AND POSITION MENU

- **RESIZE PRESETS:**

NOTE: The same resize presets are available to all HD and SXGA+ screen models. However, the graphics used to describe each preset in this section are of the SXGA+ models only.

Resize Presets will display an image in its native resolution (no resizing) or will resize the image by maximizing either the height, width or both height and width, or will resize to the maximum size possible while keeping the original aspect ratio.

Size, Position and Blanking parameters will automatically adjust accordingly or, if Blanking is set first, which defines an Active Input Area; **Resize Preset** scaling will occur in this region of interest only. Resizing options are explained below.

Resize Presets	
1. Default	= maximize for current source
2. No Resizing	= display in native resolution
3. Full Size	= fill the screen (regardless of source)
4. Full Width	= fill display width & keep aspect ratio
5. Full Height	= fill display height & keep aspect ratio
6. Anamorphic	= retain 16:9 aspect ratio

Custom (not selectable) = non-preset values for
Size, Vertical Stretch, H-Position,
V-Position and/or Blanking

FIGURE 3-18 - RESIZE PRESETS

WHAT IS THE RESIZING DEFAULT? By default when displaying a new source, your image will utilize as much of the projector's display area as possible for the type of incoming source data, but with minimal or no changes to aspect ratio. See *Select "Default"* below.

WHEN "CUSTOM" APPEARS: The "Custom" re-size descriptor automatically appears in the **Size and Position** menu when any of the values for *Size*, *Vertical Stretch*, *H-Position*, *V-Position* or *Blanking* do not correspond to those for a preset. This option is not offered in the *Resize Presets* pull-down list.

- Select **"DEFAULT"** for most sources (factory default). The image will be centered and displayed as large as possible *depending on the type of source*.

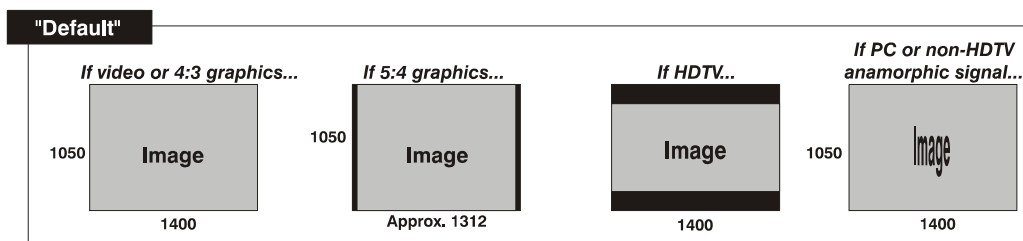


FIGURE 3-19 - RESIZING DEFAULT

- **"NO RESIZING"** displays the image in its native resolution, which may or may not match the projector's resolution. For example, for a source with a native resolution of 800 x 600, "No Resizing" in an SXGA+ projector will use the central 800 x 600 pixels and have a black border—the black border areas are unused areas, see below.

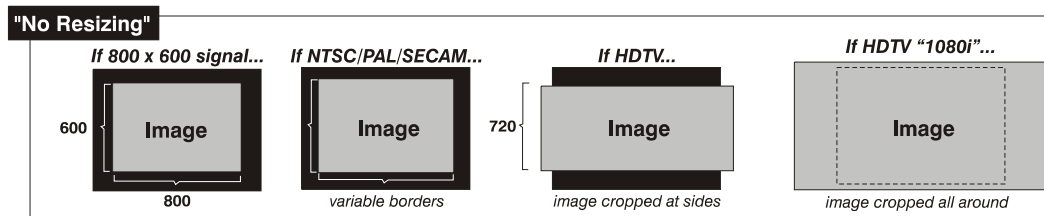


FIGURE 3-20 - NO RESIZING

- **“FULL SIZE”** uses *all pixels* for displaying the image, regardless of source or original aspect ratio. Incoming source material having a different aspect ratio than the projector will be stretched for display.

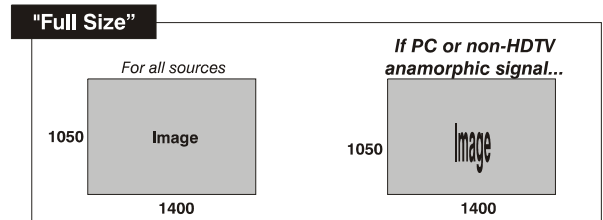


FIGURE 3-21 - FULL SIZE

- **“FULL WIDTH”** fills the projector’s display from left-to-right without changing the original aspect ratio of the image. Depending on the source, data at the top and bottom may be discarded (cropped), or the display may have black borders at the top and bottom (called “letterboxed”).

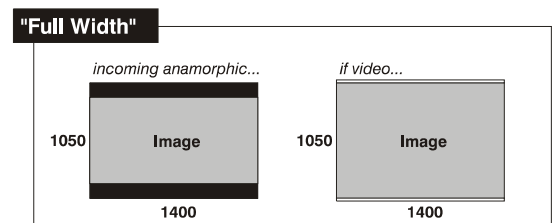


FIGURE 3-22 - FULL WIDTH

- **“FULL HEIGHT”** fills the display from top-to-bottom. Depending on the source, this may create borders.

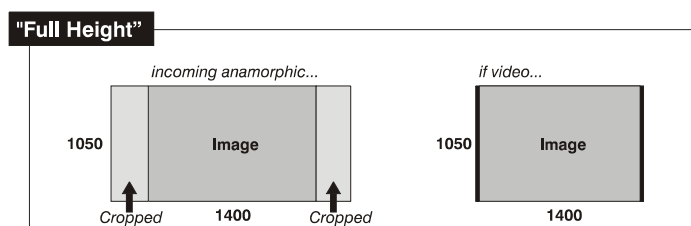


FIGURE 3-23 - FULL HEIGHT

- **“ANAMORPHIC”** displays an anamorphic image in its native 16:9 aspect ratio. The image will fill the screen from side-to-side and be centered between black bars at top and bottom.
- **SIZE:**

Controls both the image *width* and *height* in tandem, maintaining the current aspect ratio of the displayed signal data.

- **VERTICAL STRETCH:**

Adjusts the *height* of the image while keeping the width constant. Use “*Vertical Stretch*” to change the aspect ratio of the display.

- **PIXEL TRACK:**

Steady flickering or several soft vertical stripes or bands across the entire image indicates poor pixel tracking. Proper pixel tracking ensures that the image quality is consistent across the screen, the aspect ratio is maintained, and that the pixel phase can be optimized (described below). Tracking determines the frequency of the pixel-sampling clock, indicated by the number of incoming pixels per line, so that all pixels generated by a particular source are sampled.

NOTE: *By default, the projector samples at the correct frequency for most sources.*

For best results, use a test pattern such as a smooth gray consisting of a clear pattern of black and white pixels, or a similar “half on, half off” graphic image, such as the *Windows 2000* shutdown screen. adjust the slide bar until the vertical stripes broaden to the point where one large stripe fills the image. If the image still exhibits some shimmer or noise, adjust *pixel phase* (below).

- **PIXEL PHASE:**

NOTE: *Adjust “Pixel Phase” **after** “Pixel Tracking”.*

Adjust pixel phase when the image (usually from an RGB source) still shows shimmer or “noise” after pixel tracking is optimized. Pixel phase adjusts the phase of the pixel-sampling clock relative to the incoming signal.

Adjust the slide bar until the image stabilizes and each pixel is clearly defined. You may notice that you can stabilize the image at more than one point—i.e., you may find that the image appearance at “11” is identical to the image appearance at “38”, thus you can use either setting.

If some shimmer from a video or HDTV source persists, use the “Filter” control to remove high-frequency noise from the signal.

- **H-POSITION:**

Moves the image right or left within the area of available pixels.

NOTE: *The value shown represents where the approximate center of the image lies in relation to the total number of pixels available horizontally. This varies widely according to the signal—watch the image while adjusting.*

- **V-POSITION:**

Moves the image up or down within the area of available pixels.

NOTE: *The value shown represents where the approximate center of the image lies in relation to the total number of pixels available vertically. This varies widely according to the signal—watch the image while adjusting.*

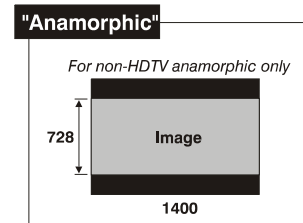


FIGURE 3-24 - ANAMORPHIC

- **KEEP ASPECT ON AUTO SETUP:**

Ensures that auto setup for any source will maintain the input aspect ratio when the default size is calculated. If disabled and the source is not a special case video source where a default stretch is defined, the source is scaled to fit the platform.

Blanking - Submenu

This submenu consists of the following options:

- **ACTIVE INPUT WINDOW:**

This read-only value indicates the current size of your displayed data or “region of interest” as defined by the blanking controls. By default, the projector automatically determines what portion of its full resolution to use, and pixels in the surrounding borders are turned off. To specify a specific active input window size by adjust one or more “Blank” settings. For example, if you have blanked (cropped) 100 pixels from both the left and right edges of an incoming source of 1400 x 1050, the remaining active input window will be reduced to 1200 x 1050.

BLANKING (TOP, BOTTOM, LEFT, and RIGHT): Crop the image so that unwanted edges are removed from the display (changed to black). Blanking defines the size of the *Active Input Window*, or area of interest. Range of adjustment depends on the source resolution and other factors.

NOTE: *Blanking a PIP image resembles zoom. For example, left Blanking zooms the right side of the PIP image; Right Blanking zooms the left side. There are no black bars.*

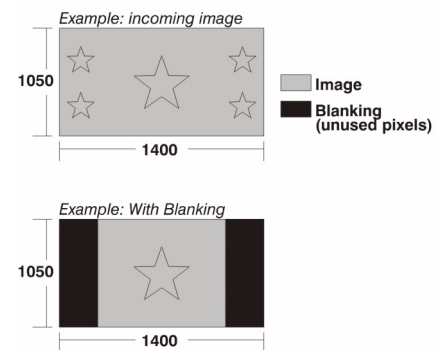


FIGURE 3-25 - BLANKING OF A PRIMARY IMAGE

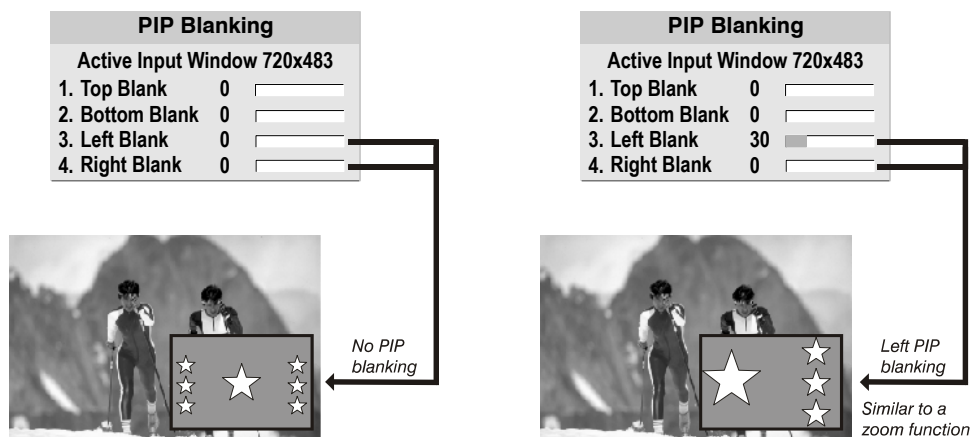


FIGURE 3-26 - BLANKING OF A PIP IMAGE

3.7 Image Settings Menu

Use the **Image Settings** menu to alter your main image without affecting its size or position. Changes made are applied immediately and are saved when you exit the menu (press EXIT or MENU). Options not available for the projector model or source are disabled and appear dim (gray).

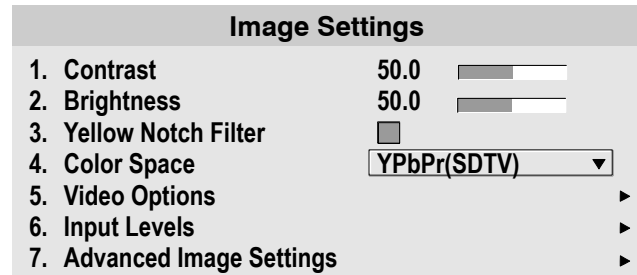


FIGURE 3-27 - IMAGE SETTINGS MENU

- **CONTRAST:**

“Contrast” increases or decreases the perceived difference between light and dark areas of your image (0-100). For best results, keep close to 50. For best results, start with a low value and increase so that whites remain bright but are not distorted or tinted, and that light areas do not become white. **NOTE:** *If the environment lighting changes, an adjustment of Gamma is recommended (see below).*

- **BRIGHTNESS:**

Increases or decreases the amount of black in the image (0-100). For best results, keep close to 50. Start with a high value and decrease so that dark areas do not become black. Conversely, high brightness changes black to dark gray, causing washed-out images.

- **YELLOW NOTCH FILTER (YNF):**

YNF is a channel based control with an additional global control. It works on a “last request gets served” basis. i.e. Enable YNF in the global control, YNF will be enabled. Thereafter; switch to a channel which does not use YNF, the YNF filter will be removed (or disabled). Then change the global control, the YNF filter will do whatever is requested; last request is honored.

- **COLOR SPACE:**

Determines how the color components of an analog input signal are decoded for accurate color in the display. Useful only for analog signals and certain digital sources. Although color space for these analog signals is automatically determined by the projector. You may wish to override this and manually set a specific color space. **NOTE:** *For some signals, the color space function is entirely automatic and the pull-down list is disabled.*

The current color space appears in the **Image Settings** menu. Press ENTER to select a different option:

- Select **RGB** unless you are using component video
- Select **YPbPr (Video)** with a standard definition televised signal (SDTV).
- Select **YPbPr (HDTV)** with a high definition televised signal (HDTV).

NOTE: *When certain RGB signals are first connected, the projector may not recognize them as RGB and will incorrectly decode their color information as YPbPr (video). These signals can include:*

- *RGB signals in NTSC, PAL, SECAM frequency ranges.*
- *Scan-doubled sync-on-green.*
- *Scan-quadrupled sync-on-green.*

For these signals, change the color Space to RGB, and then define a new channel for future use.

Video Options - Submenu

This submenu is used with video sources only.

• ENABLE DECODER (AGC):

AGC affects decoded video images only. Enter a checkmark (default) in most instances. Activate the decoder's AGC circuit to ensure properly bright images. Delete the checkmark if a decoded video image exhibits strange color artifacts such as stripes in highly saturated colors, indicating an incompatibility between this source and the AGC.

• VIDEO STANDARD:

For most video standards available in the world, the projector automatically detects the incoming horizontal and vertical frequencies and sets the projector's processing of this signal to the corresponding standard. The current video standard name appears in the **Video Options** submenu, and includes an "A" if it is auto-detected. Press ENTER to view or select a different video standard from those available to the projector—any that are disabled have frequency characteristics that differ from those of the incoming signal. Selecting a specific standard forces the projector to process the signal according to this standard. **NOTE:** *Best results are obtained with defined channels. Otherwise, switching from one video source to another can sometimes cause slight disturbances in the display, indicating that the Auto function is struggling. Recover by briefly selecting a different video standard, then going back.*

Table 3.3 - Regions and Video Standards: Summary

STANDARD	WHERE USED (Subject to Change)
PAL	Most of Europe, China, Australia, some of S. America, some of Africa
NTSC	N. America and Japan
SECAM	France, Eastern Europe, most of Africa
NTSC 4.43	A tape-only standard for partially-translated hybrid signals
PAL-M	Brazil
PAL-NC	Argentina, Chile, other Latin American countries
PAL 60	

NOTE: *Generally, use "Auto" for all instances EXCEPT: a poor quality input signal or a black-and-white video signal. In order to detect and display such signals, select the relevant standard from the list.*

• INPUT VIDEO BLACK:

This control compensates for incoming elevated black levels present in certain video signals, and ensures that blacks in the display are neither crushed (i.e., where dark grays appear black) nor excessively elevated (i.e., where blacks appear dark gray). By default, the projector automatically determines the best setting according to the type of incoming video signal:

If grays are black, select → **1. 0 IRE**
 If blacks are gray, select → **2. 7.5 IRE**

- **0 IRE** – Used for DVD output with "enhanced black", SECAM, most PAL standards, and Japanese NTSC.
- **7.5 IRE** – Used for most NTSC video signals.

For some types of video, you can override the setting. The control is disabled for other types of video (and all graphics sources). Generally, if black appears crushed when brightness = 50, choose "0 IRE". If black appears excessively elevated, use "7.5 IRE".

• COLOR:

This slide bar adjusts the color saturation level. Lower settings produce less saturated colors, for example a setting of "0" produces a black and white image. If the color level is too high, colors will be overpowering and unrealistic.

- **TINT:**

Adjusts the red/green color hue for true color reproduction of video and HDTV signals. For best results, adjust tint while displaying an external test pattern—it is recommended that tint remain at its default setting.

- **FILTER:**

The proper filter setting is automatically set for virtually all signals, and rarely needs to be changed. Override only if standard pixel tracking and phase adjustments do not adequately clear up a “noisy” video signal, or if a graphics signal appears overly “soft”. Both instances indicate that “Filter” may be set to the wrong option.

- **SAMPLING MODE:**

Sets the color sampling mode for a digital signal to either YCbCr 4:4:4, RGB or YCbCr 4:2:2. The proper sampling mode is determined automatically by the projector; you can override this setting.

- **FILM MODE DETECT:**

Enable or disable film motion detection. Only available for interlaced or segmented frame sources.

- **CHROMA/LUMA DELAY:**

Affects any incoming composite or S-video signal, delaying the luma signal (intensity) in relation to the chroma (color). In the image, increasing the luma delay will move luma (seen as a shadow where colors overlap) to the right slightly, with colors remaining in place. Decreasing this delay will move the shadow slightly to the left. If necessary for your current source, adjust so that no shadows occur with adjacent colors.

- **ADAPTIVE CONTRAST:**

Dynamically expands the contrast of the output image producing vibrant images with seamless response to scene changes and fades. The slide bar adjusts the amount of adaptive contrast to apply, with a setting of “0” producing no change. Adaptive contrast is disabled when the Dynamic Iris is operating in Dynamic mode.

- **SPLIT SCREEN:**

This control allows a snap shot of the main image to be presented on the right side or lower part of the screen, to allow evaluation of advanced image processing features. All resizing controls are honoured on both images. However, image processing controls (such as, Detail, Sharpness, Noise Reduction and Adaptive Contrast) only happen on the left side or top image. Changing inputs, channels or test patterns will disable this control. PIP operation must be disabled prior to enabling this control.

- **RGB QUANTIZATION RANGE:**

This control defines the RGB quantization levels for digital DVI and HDMI inputs using the RGB colorspace. Typically, graphics sources use the full range of levels for the given bit depth (i.e. 8-bit, 10-bit, 12-bit) and consumer electronics (CE) products typically use a limited range of data within the given bit depth. This control must be set to limited to correct the levels for those CE products that use the limited space. This adjusts what is considered black and white levels in the image. As an example for 8 bit space, full range RGB uses levels 0(black) to 255(white). A limited CE range is 16-235 for 8-bit video sources.

Input Levels - Submenu

NOTES: 1) Because the projector automatically optimizes input levels for all but the most unusual of sources, it is recommended that only experienced users use the **Input Levels** submenu. 2) Before beginning, check that overall contrast and brightness settings are near 50 **and** that color temperature is properly set up on an internal grayscale test pattern. 3) Refer to 3.1.1 [Remote Keypad Commands](#), “Auto”.

Input Levels		
1. Auto Input Level	☐	
2. Red (Pr) Blacklevel	256	
3. Red (Pr) Input Drive	256	
4. Green (Y) Blacklevel	256	
5. Green (Y) Input Drive	256	
6. Blue (Pb) Blacklevel	256	
7. Blue (Pb) Input Drive	256	
8. Auto Color Enable	☒	
9. Clamp Location	Back Porch	▼
10. Input Peak Detector	☒	
11. Color Enable	White	▼

FIGURE 3-28 - INPUT LEVELS

Good RGB or input levels—that is, the *drives* and *black levels* for each of the three colors, red, green and blue—ensure that images from analog sources other than decoded video have maximum contrast without crushing black or white. By default (and in an “Auto Setup”), the projector automatically determines the best input levels by monitoring image content and adjusting the controls appropriately—further adjustment is typically not required to obtain proper blacks or whites. **NOTE:** This automatic adjustment requires at least **6-12 consecutive white pixels** in the image. Without these pixels, input levels may produce skewed colors, particularly in non-video images.

For a source exhibiting overly high black levels (typically caused by a noisy source causing black level spikes) use the **Input Levels** menu (shown above). These adjustments, serve as a calibration process compensating for differences in sources and cabling, to perfect the source image input levels and eliminate the “overshoot” and “undershoot”. **NOTES:** 1) *Input Levels* are of limited use with digital signals, but do offer some ability to tweak poorly mastered source materials. 2) Input levels apply for the current source only, but for any color temperature used. 3) Assuming that color temperature has been set up based on the internal test patterns, you can then set up input levels for a given source so that it matches the color temperature of the internal test patterns.

• AUTO INPUT LEVEL:

Use only if you are an experienced user and you have an unusual source that you feel needs further color temperature and/or input level adjustment. This compensates for incoming out-of-range drives (white) and black levels (black) that would cause “crushing” of light and dark colors in the image. After entering a checkmark, wait for the six slide bar values to stabilize, then delete the checkmark and exit. The Auto Input Level is automatically turned off upon exit from the **Input Levels** Menu.

• BLACK LEVELS AND DRIVES:

To check your image levels and adjust these controls:

1. Ensure overall “Contrast” and “Brightness” settings are both set to near 50. **NOTE:** Not required for “Auto” adjustment.

CONTRAST = 50 (approx.)

BRIGHT = 50 (approx.)

2. Check the color temperature setup using an internal grayscale test pattern, making sure to obtain a neutral grayscale. **NOTE:** Not required for “Auto” adjustment.
3. Confirm that you are using input on an Analog BNC card or a Dual Link DVI card. Input Levels are not applicable for sources going through the decoder. A grayscale is recommended.
4. If black levels are too high (and/or whites are too low, which is rare), you likely have a noisy source that is producing skewed input levels. Enable “Auto” in the **Input Levels** menu. Wait for all six values to

stabilize. Alternatively, do not use “Auto”—reduce black levels manually instead. Judge by eye and change one or more of the six levels as necessary to obtain proper blacks and whites. You may want to see only a certain color while adjusting—use the **Auto Color Enable** option (described below).

5. Delete the “Auto” checkmark and leave the **Input Levels** menu.

IMPORTANT: Do not use Input Levels to adjust color temperature. This will distort contrast and brightness functions as well as color temperature.

- **AUTO COLOR ENABLE:**

When a checkmark is present, selecting a specific black level or drive to adjust will automatically enable the corresponding color in the display. Delete the checkmark to see all colors, or to enable a different specific color through the Color Enable control.

- **CLAMP LOCATION:**

Brightens the image produced from certain high-resolution high-frequency graphic sources. The projector automatically selects the best clamp location for most sources. Use the normal **Back Porch** location if the image is either sufficiently bright or overly bright. Select **Sync Tip** if the image appears unusually dim, if there are horizontal streaks across the image, or if there is significant color drift. This moves the clamping pulse from the normal back porch location (which is likely too short) to the tip of the horizontal sync pulse. **Tri Level** is typically needed for an HDTV source.

- **INPUT PEAK DETECTOR:**

A tool to assist with defining individual input levels, enabling you to accurately set the Input Levels for any particular source with the appropriate image. Enabling the Peak Detector activates a special operating mode for detecting *only* pixels that are considered black or white—all other levels are displayed as a mid-level gray. When used with a smooth grayscale pattern in which black and white are known to be at opposite edges of the image, you can watch these isolated areas while adjusting individual black levels and input drives until both black and white edges are *just* visible and distinguished from neighboring pixels. Images from this source will then display correct blacks and whites without crushing. See [Figure 3-29 - Adjusting Input Levels Using the Peak Detector \(RED EXAMPLE SHOWN\)](#).

1. Display a 16 level grayscale test pattern from the desired external source, and enter a checkmark in the **Input Peak Detector** checkbox. **NOTE:** *The Input Peak Detector will initially render the grayscale as a uniform gray field before adjustment or extreme crushing.*
2. Display one primary color. **NOTE:** *Select Auto Color Enable to ensure the correct color is displayed for each setting.*
3. For the current color, adjust its corresponding **Black level** slide bar just until a single band of black appears at one edge of the screen. This band represents the first band of the grayscale pattern, which should be 100% black.
4. With the same color still active, adjust its corresponding **Input Drive** slide bar *just* until a single band of color appears at the opposite edge of the screen. This band represents the last band of the grayscale pattern, which should be 100% white (or the current color, if a certain color is enabled).
5. Check the black band and adjust the black level slide bar if necessary. **NOTE:** *Adjusting the black levels affects the gain. Only adjust when necessary.*
6. Repeat Steps 3-5 with the two remaining primary colors. When each primary color shows one optimized black band and white (or colored) band, the input levels for this source are correctly set. Upon exiting the **Input Levels** menu, the Peak Detector checkbox will clear.

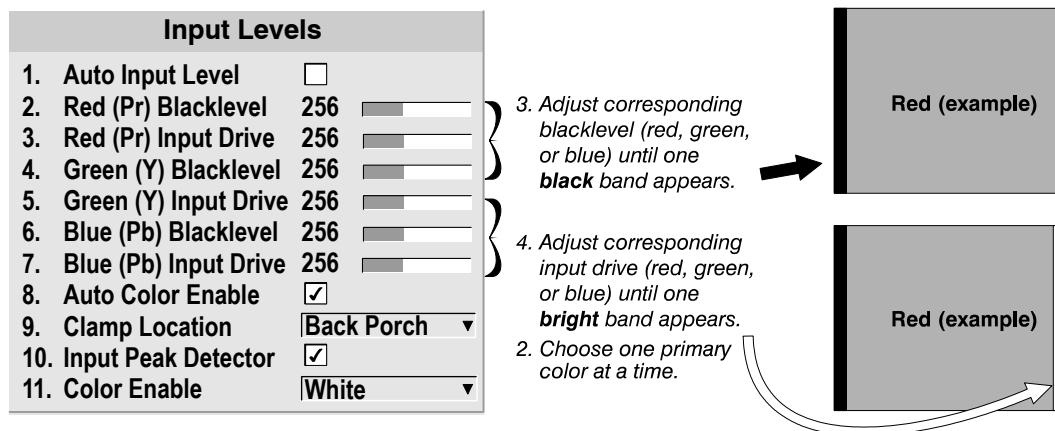


FIGURE 3-29 - ADJUSTING INPUT LEVELS USING THE PEAK DETECTOR
(RED EXAMPLE SHOWN)

• **COLOR ENABLE:**

Select which color or colors you want to see in the display, useful while working with color temperature white levels or input levels. **NOTES:** **1)** *Input levels apply for the current source only, but for any color temperature used.* **2)** *If color temperature is set up based on the internal test patterns, you can set up input levels for a given source so that it matches the color temperature of the internal test patterns.*

Advanced Image Settings - Submenu

Use the **Advanced Image Settings** submenu to make the adjustments necessary for lesser-used but more specialized applications on your projector.

GAMMA SETTINGS:

The system offers two types of gamma correction. Gamma correction can be applied to a specific source to correct for luma encoding. This is a channel setting and reapplied every time the same signal is detected. This is the 'Gamma' control. On the other hand the system also provides a global **Gamma Correction** control. The global control offers an offset applied to all channels. This offset is used to compensate for changes in ambient conditions such as ambient light in the room and projected material.

• **GAMMA CORRECTION:**

Applies a global offset to all gamma settings for each channel. It affects the shape of the curve by performing a linear transform toward a gamma curve of 1.0 while the control is increasing and likewise a linear transform toward a gamma of 3.0 as the control is decreasing. The control should only be adjusted to compensate for ambient conditions. To correct a particular source only, use the **Gamma** control.

- **GAMMA:**

Select the base gamma table for a given source. Select from one of the standard tables, a custom gamma function, or select an arbitrary gamma table that has been downloaded to the projector.

NOTE: A separate PC utility is needed to do this.

The 2.22 curve is a power curve typically used to encode graphics and video sources, see [Figure 3-30 - Gamma Curve](#). The 'standard' curve (auto setup default) is a modified 2.22 curve with a small linear section in the black that enhances the detail in darker areas of the projected content. Typically standard or 2.22 is used for all sources. Alternatively, if neither default is ideal, apply a simple gamma curve by defining a custom power function and slope. Select **Custom** to enable the function and slope controls. For more complex non-standard gamma curves, a user-defined curve created externally and downloaded to the projector can be used (requires separate PC-based Arbitrary Gamma software application to create the table and the Web UI to download it). **NOTE:** If any of these special user curves have been installed, their names will appear in the Gamma Table pull-down list.

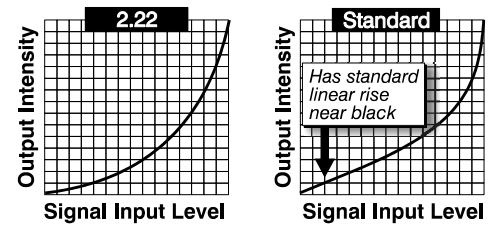


FIGURE 3-30 - GAMMA CURVE

- **GAMMA FUNCTION:**

Defines the base gamma power curve used when the base gamma table value is set to “custom”. This value, combined with gamma slope setting determines the base gamma table to be used as the custom base table. The curve is generally a power curve with a small linear segment at the bottom defined by the slope.

- **GAMMA SLOPE:**

This control defines a slope to be used for the base custom gamma table for a small section at the bottom of the curve. This slope can be used to bring in or out the low level blacks in the image. This slope combined with the gamma function, define the custom gamma table.

DETAIL SETTINGS:

Adjusts the sharpness of the image. Setting detail above the halfway point can introduce ‘noise’ in the image. Lower settings can improve a noisy signal.

- **DETAIL:**

Adjust the sharpness of the image. Setting detail above the halfway-point can introduce noise in the image. Lower settings can improve a noisy signal. This command does not take effect unless the minimum change required in the **Detail Threshold** control is reached.

- **TEXTURE ENHANCEMENT:**

Applies texture detail enhancement based on adaptive horizontal, vertical, and diagonal large edge and small edge enhancement processes.

- **DETAIL THRESHOLD:**

Selects a filter sensitivity to noise. A higher value may improve noisy sources especially for higher settings of detail.

- **DETAIL OVERSHOOT:**

Minimizes ringing on the enhanced edges detail and texture effects.

- **SPLIT SCREEN:**

Allows a snap shot of the main image to be presented on the right side of the screen to allow evaluation of advanced image processing features. All resizing controls are honoured on both images;

however, image processing controls only happen on the left side image. Changing inputs, channels or test patterns will disable this control. **NOTE:** *PIP operation must be disabled prior to enabling this control.*

NOISE REDUCTION SETTINGS:

- **NOISE REDUCTION:**

Selects a filter sensitivity to noise. A higher value may improve noisy sources, but it will soften the image.

- **BLOCK ARTIFACT REDUCTION:**

Locates and reduces block edges produced by discrete cosine transform (DCT) based compression processing.

- **MOSQUITO NOISE REDUCTION:**

Reduces mosquito artifacts around sharp edges in DCT based compression by dynamically adapting to image content.

COLOR SETTINGS:

- **SELECT COLOR ADJUSTMENT:**

Select the output color adjustment most suited to this input signal. The options include the following:

Max Drives - All color adjustments are turned off allowing the projector to run at maximum brightness.

Color Temperature - Allows you to specify a color temperature between 3200 and 9300 based on the setting of the color temperature slidebar.

Expressed in degrees Kelvin [3200K, 5400K, etc.]. Lower numbers appear reddish white and higher numbers appear bluish.

Standard settings are:

- ☐ 9300K, is close to the white of many computer monitors
- ☐ 6500K, is the standard for color video, in both standard and high definition forms
- ☐ 5400K, is a standard for graphics and black and white video
- ☐ 3200K, is useful if the projected image is to be filmed or shot as part of a studio set illuminated with incandescent lights

For all color temperatures the color primaries; red, green, and blue are unchanged and reflect the native colors of the projector.

SD Video and HD Video - Sets the output color to a specific standard value. Adjusts the colors; red, green, blue, and white.

User# - Select 1 of 4 user defined sets of color adjustments; defined in the **Configuration** menu.

DYNAMIC IRIS

The **Dynamic Iris** adjusts the aperture to allow more or less light through. This will allow for deeper blacks in dark scenes.

- **ENABLED:**

Enable either **Manual** or **Per Channel** operation of the Dynamic Iris. If set to **Manual**, set the **Iris Position** control to set the iris to a fixed position, as a percentage of fully open. If set to **Off**, the position of the iris will be fixed at fully open. If set to **Per Channel**, the iris will operate as selected by the current channel, which may be **Off**, **Manual** or **Dynamic**. This control is a global setting. All other Dynamic Iris controls are applied to channels. **NOTES 1)** *Dynamic iris should not be used on blends, as this could result in image distortion. 2)* *Dynamic mode is only permitted in Dual lamp mode. If the global setting is set to "Per Channel" while in*

Dual lamp mode, then switching to Single Lamp Mode will ignore the channel settings and will grey out the “Per Channel” option and set the iris to 100% open. If the Dynamic Iris mode is not changed, then when switching back to Dual Lamp mode, the iris setting will return to “Per Channel”. If the Dynamic Iris mode is changed, then when switching back to Dual Lamp mode, the iris setting will remain at the current setting. The user will have to specifically go and set it back to “Per Channel”.

- **IRIS POSITION:**

Set the fixed manual iris position as a percentage of fully open.

- **MODE:**

Set the Dynamic Iris Mode for the current channel. **Off** will place the iris in a fully open position. **Manual** mode allows the user to adjust the level of light to statically increase the black levels. **Dynamic** mode allows the iris to open/close based on the frame content and Dynamic Iris Settings control. This will produce optimal black levels.

- **DYNAMIC IRIS SETTINGS:**

There are 3 predefined settings: ‘Dark Scenes’, which produces high contrast ratios, is for movies primarily consisting of dark content, i.e. thriller or horror scenes. ‘Medium Scenes’ is for video content containing a moderate level of dark scenes, i.e. action movie. ‘Light Scenes’ is for movies containing only a few dark scenes, i.e. animation or a PC source. The 4 User settings allow you to fine tune the dynamic iris and save your own settings.

- **SENSITIVITY:**

Adjusts how sensitive the iris control algorithm is to small bright objects entering and leaving an image, such as stars or candles. With a lower sensitivity value these small bright objects are more likely to be ignored, producing a more stable light level for the image, with the side effect that some detail in those bright objects will be lost. It is often best to adjust the sensitivity and white compression together to find the optimal settings.

- **OPEN SPEED:**

The open speed of the iris represents the maximum iris change per frame. Increasing this value will allow the iris to travel further in a frame. Decreasing this value will allow for a more gradual change. A slower value will reduce any flicker in the image, but it will also mean that the iris will not react quickly to a scene that suddenly becomes much brighter; resulting in a image that will show a significant loss of detail for several frames.

- **CLOSE SPEED:**

The close speed of the iris represents the maximum iris change per frame. Increasing this value will allow the iris to travel further in a frame. Decreasing this value will allow for a more gradual change. A slower value will reduce any flicker in the image, but it will also mean that the iris will not react quickly to a scene that suddenly becomes much darker, resulting in an image that does not have as much contrast as it could for several frames.

- **WHITE COMPRESSION:**

The level of white compression adjusts amount of detail in bright parts of dark scenes. It does not eliminate the detail in affected areas (as the sensitivity control does) but merely reduces it. The amount of detail reduction depends on the average level of brightness in the scene, and the setting of this control. The brighter the scene the less impact this control will have. It is often best to adjust the sensitivity and white compression together to find the optimal settings.

- **COPY FROM:**

This control allows you to copy the Dynamic Iris Settings from an existing profile to the current profile.

3.8 Configuration - Adjusting System Parameters and Advanced Controls

Use the **Configuration** menu to define general operating parameters and communications with other projectors and equipment, and to access other advanced processing and image adjustments affecting overall performance. The **Configuration** menu provides access to diagnostics, calibration tools and the Service submenu (password-protected).

*The first six options in the **Configuration** menu are explained below:*

- **LANGUAGE:**

Choose the available language to use in the projector's menus. The change will take effect immediately.

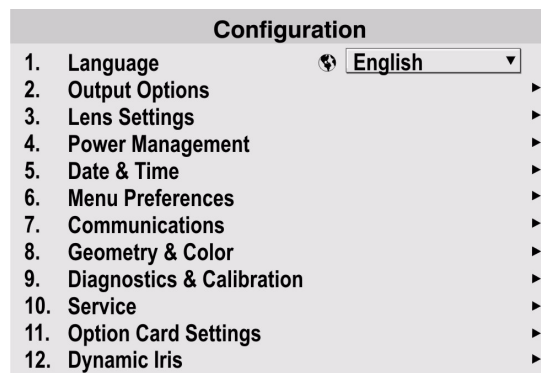


FIGURE 3-31 - CONFIGURATION MENU

Output Options - Submenu

- **SCREEN IMAGE ORIENTATION:**

Select the on screen image orientation from Front, Rear, Front Inverted, and Rear Inverted.

- **OUTPUT RESOLUTION:**

Sets the output pixel resolution; default is the native resolution of the projector.

- **FRAME LOCKING:**

Select how the projector controls the output frame timing based on the input signal. When set to **Framelock**, output image frames are locked to the input if possible. When Locked, the output is always locked to the primary input, never the PIP image. **Free Run** sets the output to close to 60Hz for all sources. **NOTE:** *When switching to a new input with framelocking enabled, the image will appear black for a short duration while the system locks onto the new input.*

- **FRAME DELAY:**

This control delays the output signal timing relative to the input signal timing by a fraction of a frame, and up to several frames. The minimum latency can vary based on the amount of scaling applied to the image. When using keystone or warping, an additional latency is required, depending on the amount of warp. The control is only available when the input signal is frame locked. In free run mode, or in cases where the signal cannot be frame locked, the minimum latency defined by the scaling and keystone/warp is applied to the signal.

- **FREE RUN FREQUENCY:**

This control sets the output video vertical frequency.

Lens Settings - Submenu

- **INTELLIGENT LENS SYSTEM:**

Check this box to enable the **Intelligent Lens System** (ILS). When enabled, the lens position (horizontal, vertical, focus, and zoom offsets) are stored per channel. If you change channels, the lens position will change as the new signal is being displayed. When ILS is not enabled, the lens is controlled independently of channels or input signals.

- **MANUAL ZOOM/FOCUS:**

When this control is selected, the holding current is removed from the zoom and focus motors so that they can be changed manually. **NOTE:** *Zoom and Focus should not be adjusted manually when this control is not selected, as this will result in damage to the motors.*

- **CALIBRATE:**

The lens calibration procedure is needed each time a new lens is installed in order for the ILS feature to perform reliably. This procedure calibrates; horizontal, vertical, focus, and zoom offset movements.

- **LOCK ALL LENS MOTORS:**

Select this checkbox to prevent all lens motors from moving. It will disable the Zoom, Focus, Horizontal and Vertical Position settings, effectively locking out any changes and overriding all other lens features. This feature is particularly useful to prevent accidental lens position changes in multi-projector installations.

- **CALIBRATE ON NEW LENS:**

Check this box to prompt for a lens calibration each time a lens is inserted. The user will always be prompted before starting the calibration.

- **CALIBRATE ON STARTUP:**

Check this box to initiate a 'Lens Reset' procedure on every power-up. This is useful if the lens is subject to manual movement between power sessions.

- **HOME POSITION:**

Return the lens to the horizontal and vertical home position. Focus and zoom are unaffected.

- **CALIBRATION STATUS:**

This control displays the current lens calibration status.

Power Management - Submenu

- **LCD BACKLIGHT:**

The backlight for the LCD has 3 states. **Always On**, **Always Off**, or **Timer**. The backlight will turn on again when any key on the LCD is pressed or if an alarm is raised.

- **LCD BACKLIGHT TIMER:**

Set how long the LCD backlight stays on (in seconds) when in timer mode.

- **LCD BACKLIGHT LEVEL:**

Sets the LCD backlight brightness level. Maximum 25/Minimum 0.

- **AUTO POWER UP:**

If there is an AC power interruption, while Auto Power Up is enabled, the projector will resume operation in the same state as it left off. If the lamps are on and an image showing when AC power is lost, the projector will automatically power back up with the lamps on and an image will show when AC is restored.

- **AUTO SHUTDOWN ENABLE:**

When Auto Shutdown Mode has been selected, and no projector activity has been seen for the activation time-out period, the projector will enter a power saving mode in which the lamps will dim and the shutter will close. If this condition persists for an additional time-out period, the projector will automatically go to Standby mode. The presence of any activity within this combined interval will cancel Auto Shutdown and return the projector to normal operation.

- **TURN OFF IMAGE AFTER (min):**

This sets the activation interval (in minutes) for Auto Shutdown. If all activity (input signals, web or serial port activity, key presses) is lost for this length of time, and Auto Shutdown is enabled, an Auto Shutdown cycle will begin.

- **ENTER STANDBY AFTER (min):**

This sets the interval (in minutes) between starting Auto Shutdown and entering Standby mode. Once Auto Shutdown has been entered, and all activity continues to be absent for this interval, the projector will automatically enter power Standby mode.

- **LAMP REGENERATION START TIME:**

For 24/7 operation, the lamp regeneration cycle is required or lamp life will be reduced. This control allows you to set the time of day (in 24 hour format) when the regeneration cycle will start. In Dual Lamp mode, the cycle will be performed on each lamp separately. The second lamp will wait for the first lamp to come back on before it begins the cycle. In single lamp mode, the projector will go into Standby mode for the regeneration cycle. The regeneration cycle will run for 15 minutes for each lamp. The lamp(s) must run for a minimum of 24 hours or the regeneration cycle will be skipped.

- **OVER-TEMP FAN ASSIST:**

When enabled, this option will cause all fans to come on at full speed if any enabled thermal sensor has an over-temperature fault. This may help to prevent an emergency shutdown if the extra cooling can bring the temperature within limits before the shutdown occurs. The fan assist will cause increased noise levels due to the simultaneous full speed operation of all the fans. Normal operation will resume when all over-temperature conditions are removed or fan assist is turned off.

Date & Time - Submenu

The current year-month-day, hour-minute-second, and timezone. Changes here reset the projector's real-time clock.

Menu Preferences - Submenu

Adjust the appearance, content and/or location of on-screen menus and messages.

- **LARGE MENU FONT:**

Enter a checkmark to enlarge menus and their text. To adjust Menu Location to accommodate the increased menu area.

- **MENU LOCATION:**

Use the pull-down list to choose a pre-defined default or customized location for the display of all on-screen menus.

To create a custom menu location:

1. Choose a preset that is closest to the desired location.
2. Adjust **Horizontal Shift** and **Vertical Shift** slide bars to move the menu to the desired location. **NOTE:** *Avoid locations too close to a corner or edge to prevent cropping of larger menus.*

- **HORIZONTAL SHIFT AND VERTICAL SHIFT:**

Shift your menus as desired, creating a customized menu location.

- **DISPLAY CHANNEL LIST:**

Enter a checkmark to see a scrollable channel list whenever you press CHANNEL from your presentation.

Channels marked with a list icon  in the **Channel Setup** menu will appear here. The **Display Channel List** option also enables on-screen feedback when using the CHANNEL key. To hide the channel list and input dialog box while switching channels and sources during a presentation clear the checkbox. **NOTE:** *The Channel List and input dialog box cannot be hidden during use of the menus.*

- **DISPLAY SLIDE BARS:**

Access directly from the presentation level to enable. This option does not affect slide bars in menus.

- **DISPLAY ERROR MESSAGES:**

Choose how you want to be notified of errors detected in either the incoming signal or projector. Select **Screen** or **All** (default) to see brief on-screen messages. This is recommended during setup or testing of the projector. Or select “**Serial Ports**” to receive messages via RS232 or RS422 serial communication only. To hide error message displays, such as during shows and presentations, select **Off** or **Serial Ports**.

- **SPLASH SCREEN SETUP:**

Choose when to display a special introductory splash screen image, such as your company logo, graphic or message.

- **Always Off** – A splash screen never appears
- **Start-up Only** – The splash screen logo appears at projector start-up only.
- **Start-up And No Signal** – A splash screen appears at start-up and at any time when there is no signal.

To add your own splash screen in addition to the default “Christie logo” splash screen, use the Web UI to download the desired bitmap (.bmp) file to the projector. This will overwrite any other user splash screen that has been downloaded. **NOTE:** *Only one user splash screen can be saved in the projector.*

- **OSD TRANSPARENCY:**

Check this box if you want the OSD menu backgrounds to be transparent.

- **MENU TYPE:**

Select the **Basic** or **Advanced** menu type from this list box. The **Advanced** menu setting will give the menu options. The **Basic** menu setting will give a small number of the most frequently used menu items.

- **SPLASH SCREEN:**

Choose which splash screen is to be used; the default or user downloaded splash screen.

Communications - Submenu

Defines and controls how single or multiple projectors are linked with each other and with a controlling device. For detailed information refer to the *Serial Command document provided in the Dealer Section of the Christie Website, PN 020-100224-XX.*

SERIAL OPTIONS:

Baud Rate

Determines the speed of communication to and from the projector on the RS232 or RS422 links. The maximum rate for the RS232 is 115200; for RS422 it is 19200. Set the baud rate to match that of your controlling device, such as your PC. Refer to the documentation for the controlling device to determine the baud rate. In an existing network of projectors, if you discover that a projector has a different baud rate, use the pull-down list and select the correct baud rate using the ENTER key. Do not scroll this control with LEFT ARROW KEY or RIGHT ARROW KEY. Serial communication is always eight data bits, no parity.

Serial Flow Control - Determines whether software flow control or no flow control is used when transmitting and receiving data on the serial port.

• **PROJECTOR ADDRESS:**

Enter a three-digit number (such as “001”) to assign or change a number to the projector currently in use. If the current projector already has a number assigned, that number will appear here (for example “004” in the menu shown below. Numerical identity for projectors enables you to communicate with a single projector within a multiple-projector application (see also PROJ key in, [3.1 Using the Remote Keypad or Built-In Keypad](#)). If you make a mistake in assigning or changing the projector number, press EXIT to cancel. **NOTE:** *When multiple projectors are being used and you want to adjust the color for individual projectors to create one seamless image, you must assign different numbers for each projector to allow switching back and forth between projectors while adjustments are being made.*

• **NETWORK ROUTING:**

NOTE: *Not applicable for stand-alone projectors or simple serial networks with only one type of controller and linking.*

1. Separate	= Networks do not communicate with one another
2. RS-232 and RS-422 Joined	= Serial networks are joined, but Ethernet is isolated
3. RS-232 and Ethernet Joined	= RS-232 and Ethernet are joined but RS-422 is isolated
4. All Joined	= Network communications travel all networks

FIGURE 3-32 - NETWORK ROUTING LIST

Separate - Select “**Separate**” (factory default) to keep RS232, RS422 and Ethernet messages on their respective paths instead of being broadcast to the other types of ports, refer to [Section 2 Installation and Setup, Figure 2-19 - Connecting RS232](#) to [Figure 2-24 - Communicating To All Ports](#).

RS232 and RS422 Joined - Messages originating from an RS232 or RS422 controller will be relayed to all RS232or RS422 ports. Any Ethernet communication, however, will not.

RS232 and Ethernet Joined - Messages to and from the RS232 ports will also be relayed to the Ethernet port, and vice versa. Any RS422 communications will be isolated. In the case of multiple Ethernet sessions over the single Ethernet connector, input on the RS232 port will be relayed to all Ethernet sessions; however, input from any Ethernet session will only be relayed to the RS232 ports.

All Joined - All messages reach all ports, regardless of type in the case of multiple Ethernet sessions, input on one Ethernet session will be relayed to all other Ethernet sessions as well as to the RS232 and RS422 ports.

ETHERNET SETTINGS:

NOTE: *Recommended for network administrators only.*

• **IP ADDRESS:**

Enter a valid and unique IP address for use on the network to which the projector is currently connected. This address will overwrite any previous IP address such as the projector’s factory-defined default. It takes approximately 10 seconds for the projector to respond at its new address.

• **TCP PORT:**

On some Ethernet networks, firewall restrictions may require that the port number of the projector be changed from its default of 3002. If so, enter a new valid port number here. It is highly recommended not to use a port # below 1000, as these ports are typically reserved for and used by common IP applications.

- **SUBNET MASK:**

Subnet Mask determines the subnet for the IP address and must be set manually.

- **DEFAULT GATEWAY:**

This is the IP address of the gateway used to reach any non-local IP addresses; it must be set manually.

- **HOST NAME:**

Set the hostname for the device.

- **DOMAIN NAME:**

Set the domain for the device.

Geometry & Color - Submenu

In the **Configuration** menu, select the **Geometry and Color** submenu when you need to modify overall color performance and/or image geometry for all sources.

- **TEST PATTERN:**

Choose the desired internal test pattern, or select OFF to turn off a test pattern. Alternatively, use the TEST key for cycling through test patterns.

- **GEOMETRY CORRECTION:**

Keystone is typically caused by tilting the projector in relation to the screen, so that the lens surface and screen are no longer parallel to each other. Vertical keystone is used to correct a keystone image shape in which the top and bottom borders of the image are unequal in length, and both sides of the image are inclined toward the top or bottom edge, see [Figure 3-33 - Vertical Keystone](#).



FIGURE 3-33 - VERTICAL KEYSTONE

Horizontal keystone is used to correct a keystone image shape in which the left and right borders of the image are unequal in length, and the top and bottom are slanted to one of the sides, see [Figure 3-34 - Horizontal Keystone](#).

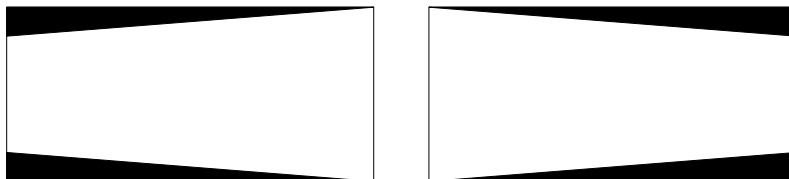


FIGURE 3-34 - HORIZONTAL KEYSTONE

All settings to adjust keystone are in the **Geometry Correction** submenu. **Brightness Uniformity**, **Edge Blending** and **Black Level Blending** should be disabled before performing Keystone adjustments.

ADJUSTING AN IMAGE FOR KEYSTONE CORRECTION

1. Enable keystone adjustments by selecting **Keystone** from the **Geometry Correction** drop down list. **NOTE:** *This will enable the controls for performing 1D or 2D keystone adjustments.*
2. Select a **Test Pattern**. **NOTE:** *It is recommended to use the **Grid** test pattern.*
3. Perform coarse keystone adjustment by using the Horizontal or Vertical Adjust setting. Use the left and right arrow keys to make the adjustment. **NOTE:** *The corner cursors are a guide as to how the image will be adjusted. The outside edge of a cursor will be the outside edge of the image. It may not be possible to exactly match the screen dimensions with the Horizontal and Vertical Keystone controls, but these settings can be refined when the 2D keystone settings are adjusted.*
4. When adjustment of the corners is complete, select **OK**. **NOTE:** *A message will be displayed indicating that the projector is “Processing request”. The settings are applied to the displayed image, and will take approximately 10 seconds. If Vertical Keystone adjustments have been made, starting to do any Horizontal Keystone adjustments will erase the Vertical settings, and vice versa.*
5. After the Horizontal or Vertical adjustments have been made, selecting 2D Keystone adjustments will retain these settings. Fine adjustment can now be made by moving any single corner separately.
6. Use the arrow keys to move to the required corner. **NOTE:** *The current corner will be displayed in red.*
7. Press ENTER to select the corner. **NOTE:** *The current corner will be displayed in green.*
8. Use the arrow keys to move the selected corner to match the screen.
9. Press ENTER again, to save that position for the corner.
10. Repeat Steps 6 to 9 to adjust all 4 corners until they match the screen.
11. Select **OK** to apply the new corner positions to the image. **NOTE:** *A message will be displayed for approximately 10 seconds indicating that the projector is “Processing request”.*

Under certain combinations of extreme keystone co-ordinates and specific signal frequency, a keystone image may result that is outside the bandwidth limitations of the projector. When attempting to apply the keystone settings, a message will pop up on the OSD, indicating that the bandwidth has been exceeded and the keystone cannot be applied. The cursor co-ordinates for keystone adjustment will remain at the failed keystone position. This will allow the user to make minor changes and attempt to reapply the corner settings. Either the co-ordinates must be adjusted, or the free run frequency must be changed to fall within the allowed bandwidth.

The FUNC+HELP key combination will immediately disable the **Keystone**, **Brightness Uniformity**, **Edge Blending** and **Black Level Blending** features. This is helpful when, in some extreme keystone configurations, some image corruption may appear and/or the menus may not be readable. Although FUNC+HELP disables these features, it will not overwrite their settings. If keystone is simply enabled again, the same image corruption may occur. After pressing FUNC+HELP, it is recommend to immediately “Reset Keystone Settings”, which will set all keystone co-ordinates to zero.

• BRIGHTNESS UNIFORMITY:

Brightness Uniformity provides further refinement of displays already matched for their primary colors and overall light output. Use **Brightness Uniformity** to create an exceptionally smooth image in which no area appears brighter than another. In the **Brightness Uniformity** menu, enable the **Brightness Uniformity Enable** checkbox to access a multitude of adjustments for light output control in specific areas throughout the image. Your settings apply as long as the **Brightness Uniformity Enable** checkbox is enabled. While making adjustments, enable the **Coarse Adjustment** checkbox to apply **Brightness Uniformity** settings with a large granularity. **Coarse Adjustment** helps identify brightness changes and accelerates projector response time while adjusting settings. To disable the **Brightness Uniformity** function, delete the **Brightness Uniformity Enable** checkmark.

WHAT IS BRIGHTNESS UNIFORMITY?

When used to refine screens already matched for their primary colors, see [3.12 Using Multiple Projectors: Matching Colors in Multiple Screens](#) and overall light output, proper adjustment of **Brightness Uniformity** can create an exceptionally smooth screen in which:

- No area of the screen appears more red, green or blue than another
- No area of the screen appears brighter than another
- Color and light output from one screen closely matches adjacent screens

Although the **Brightness Uniformity** control can be used for a stand-alone projector, it is particularly useful for setting up and maintaining tiled images that form a cohesive display wall in which the color “cast” and light output appear uniform throughout each image as well as throughout the entire wall. The procedure provided here assumes a multiple-screen application.

IMPORTANT! Before You Begin

Read through the entire procedure before attempting to adjust Brightness Uniformity controls, and keep in mind the following checklist of prerequisites and guidelines:

- ☐ **ADJUST COLORS FIRST**—Always adjust the primary colors as described in [3.12 Using Multiple Projectors: Matching Colors in Multiple Screens](#) procedure, before attempting to work with **Brightness Uniformity**. This ensures that primary colors, color temperature, and maximized light output are all well matched from one screen to another. These matches are needed before you can achieve good brightness uniformity results.
- ☐ **RUN LAMP FOR 100 HOURS**—Light output and brightness uniformity can vary significantly during the first 100 hours of lamp use. For best results with new lamps, either set up brightness uniformity after this period, or do an initial setup and re-check at 100 hours.
- ☐ **SET LAMP POWER**—Ensure that each **Lamp Power** setting is as high as possible for your application while still maintaining a good overall match of light output from screen-to-screen. By nature, achieving a uniform brightness will require a slightly reduced overall brightness—this reduction will help ensure that you have enough range of adjustment when examining brightness variables more closely from screen-to-screen, and will help prevent premature “maxing out” when trying to match to a certain color, zone or projector.
- ☐ **USE A “USER” COLOR TEMPERATURE**—Always adjust brightness uniformity for a User color temperature defined when you matched primary colors, and continue to use it for all sources displayed on the wall. Your other color temperatures will not necessarily be matched from screen-to-screen.
- ☐ **WHITE UNIFORMITY SLIDE BARS**—**White Uniformity** slide bar values may not reduce to “0”. Each slide bar adjusts overall light output in a specific screen zone, but the value shown represents the current setting for green in this zone. When other “hidden” values (red or blue) are lower than green, during adjustment in the **White Uniformity** menu their values will reach “0” first, causing the slide bar to stop earlier than expected.
- ☐ **JUDGE BY EYE OR USE A METER**—Good brightness uniformity can be achieved with either.

Step 1: General Setup

- a. Adjust primary colors see [3.12 Using Multiple Projectors: Matching Colors in Multiple Screens](#) to ensure matched overall color temperatures and light output between screens.

IMPORTANT! Double-check that all WHITES and LIGHT OUTPUT are well-matched.

- b. Enable the **Brightness Uniformity** checkbox. This will enable access to the uniformity controls and will apply the settings to your image.

- c. Select the 13-Point test pattern for display. This pattern provides nine screen “zones” with 13 targets, see [Figure 3-35](#).

FOR BEST RESULTS: Rather than examining the CENTER of each zone when assessing Brightness Uniformity adjustments focus on extreme EDGES as indicated in the illustration at right.

- d. In either *Color Adjustments* menu, select a “User” color. Then:
 - **If you have created a “User 1” color gamut** (recommended) for a well-matched wall, continue to Step 1e.
 - **If you prefer maximum brightness** rather than a particular color temperature, select **Max Drives**.

IMPORTANT! Do not change User 1 Color Adjustment in color-matched applications!

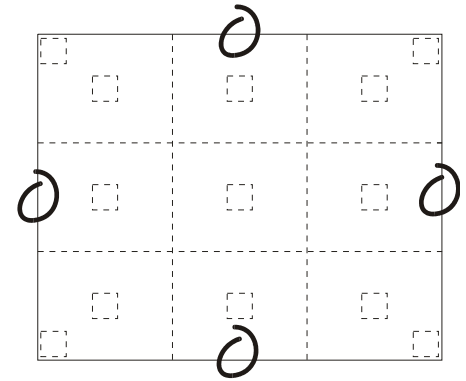


FIGURE 3-35 -13-POINT TEST PATTERN

- e. In the **White Uniformity** menu, and set the “Overall” output level to **50.0** and all remaining slide bars to **0.0**. This decreases the light output just enough throughout the screen so that any color level can then be increased later as necessary for matching light output from zone-to-zone. Do not exceed **50.0** for “Overall”—a higher level will likely interfere with achieving brightness uniformity and is not recommended.

Ensure that overall light output remains well matched from one screen center to the next. Where necessary, increase or decrease Lamp Power slightly to recover center matches.

Step 2: Adjust Color (level of red/green/blue) in Eight Zones

NOTES: 1) At this point, ignore the brightness of individual zones. **2)** Always ignore menu colors.

- a. On each screen, compare the color temperatures in the eight target zones (four edges and four corners) to that of the color temperature of the center. Compare using a white field only, and take note of any areas that do not match the center. Also decide if any screen exhibits a more obvious color shift than other screens—begin with this screen in Step 2b.
- b. Return to the **Brightness Uniformity** menu. Beginning with the screen that exhibits the most obvious color shift(s), for each edge that exhibits a noticeably different color temperature from the center, select the corresponding **Uniformity** adjustment menu—**Left, Right, Top** or **Bottom**. For example, if any part of the left side is too blue, too red or too green, go to the **Left Uniformity** menu and adjust the colors (i.e., change their light output) until all portions of the left side closely match the center color temperature. Adjust an edge first (focusing on its center), and then adjust its corners.

Repeat the color adjustment of sides and corners for each edge of the screen that does not yet match the center (note that each corner is adjustable in either of its two adjacent “side” menus). When done, all areas of a given screen should match. Repeat Steps 2a & 2b for all remaining screens.

Step 3: Adjust Light Output in Eight Zones

- a. For each screen, compare the light output of each edge and corner to that of the center. If any of the areas differ, use the **White Uniformity** menu to match edges and corners to the center as described below. Begin with the screen exhibiting the most obvious variations in light output.
 - Adjust **edge White Uniformity** first—note that each edge adjustment also affects the rest of the screen slightly. Keep all edges just slightly *lower* than the center light output rather than matching light output precisely. Otherwise, it may not be possible to brighten the corners (typically the dimmest areas of the screen) enough. i.e., the best uniformity is a compromise between the brightest and darkest areas of the screen.
 - Adjust **corner White Uniformity** last—each corner adjustment affects only this quadrant.

- Repeat for each screen.

Step 4: Readjust Color Temperature (level of red/green/blue) in Eight Zones

- Return to Steps 2a & 2b and, if necessary, fine-tune the zones so that they all still exhibit a single color temperature.

Cancelling Brightness Uniformity

If you do not want to use or apply Brightness Uniformity settings, delete the checkmark from the **Uniformity Enable** checkbox at the top of the **Brightness Uniformity** menu.

• EDGE BLENDING:

The **Edge Blending** submenu provides a range of controls for smoothing together the overlapping bright edges of multiple adjacent projected images to create a single larger “seamless” image. These controls, which primarily affect white levels, are typically used in conjunction with mechanical lens blinders (optional), which are installed on the front of the projector and which primarily affect black levels. Brightness uniformity adjustment, if desired, should be performed first. The **Edge Blend** or **Grid** test pattern is useful for the mechanical setup of the projectors. If necessary, adjust **Black Level Blending** first with the **Black** test pattern, then use the **White** test pattern to blend the white levels on the blend edges. The final step is to check the blended image with an external source. There is a centerline (both horizontal and vertical) in the Edge Blending test pattern. The intersection of these lines is the true center of the projector’s display area.

The **Show Blending Overlap** control enables or disables edge blending overlap. When enabled, this will make the size of the Edge Blending regions obvious. This control should only be used during setup.

What is a Blend?

In simple terms, a blend appears as a gradient strip along an edge of a projected image. It is darkest along the extreme edge of the image, and lightens nearer to the rest of the image (see right).

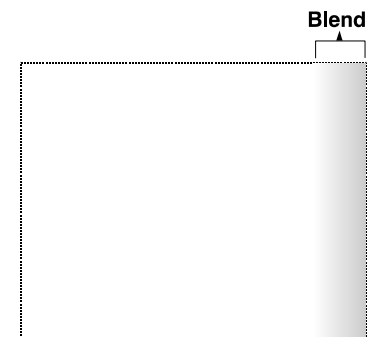


FIGURE 3-36 - EDGE BLENDING

How Are Blends Used?

In multiple-projector walls, complementary blends between neighboring images can compensate for the extra “brightness” or intensity where these edges overlap. By controlling blend width and other properties, you can achieve uniformity across the group of images. Visible overlaps will disappear, *Figure 3-37 - Edge Blending Concept*:

For best results, use the same projector model and type throughout your display wall. In addition, avoid high-gain screens whenever possible—the optical performance of such screens demands minimal image offset, thus projectors must be located very close to one another.

Edge blending software controls are located in the two-page **Edge Blending** submenu—access via **Configuration** menu, then go to the **Geometry and Color** menu and select **Edge**

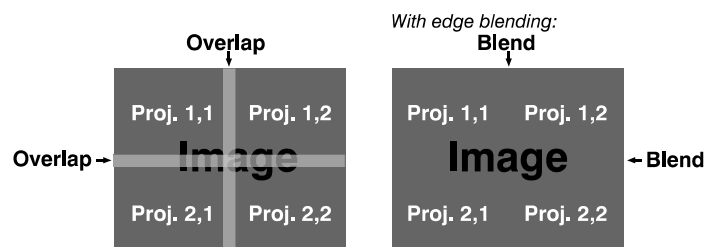


FIGURE 3-37 - EDGE BLENDING CONCEPT

Blending. The **Advanced Edge Blending** option opens the second page of the **Edge Blending** submenu.

ADVANCED EDGE BLENDING:

Use Edge Blending controls to set the precise *width*, *shape* and *midpoint* you need to blend overlapping edges together smoothly.

- **Blend Width** determines how much area is used for blending along an overlapping edge. Slide bar values represent the number of eight-pixel steps used for the blend. For example, a setting of “eight” creates a blended edge 24 pixels wide.
 - A setting of “0” signifies no blending. For best results in most applications, use a blend width of 16-48 steps (128-384 pixels). **NOTE:** *Ranges: 0-80 horizontal, 0-60 vertical.*
- **Blend Shape** determines the rate of roll-off across the blend width, i.e. how quickly the white levels across the blend change from light and dark. Increasing the **Blend Shape** setting accelerates the rate of change at both extremes so that *less* of the region appears mid-gray (see Figure 3.20). Decreasing the **Blend Shape** setting slows the rate of change so that *more* of the region appears mid-gray. For most applications, this subtle control is best left close to 50.
- **Blend Midpoint** determines the white level at the blend midpoint (the point equidistant between the beginning and end of the blend). Increasing the **Blend Midpoint** setting creates a blend that appears brighter than the rest of the image. Decreasing the **Blend Midpoint** setting creates a blend that is darker than the rest of the image. A setting of 50 means the midpoint is approximately 50% black—for best results in most applications, keep fairly close to this default.
- **Show Blending Overlap** turns your defined blend width area to solid gray so that, if needed, simply overlapping the gray bars can seamlessly align two adjacent images. Toggle the **Show Blending Overlap** off to reactivate the blend effect. **NOTE:** *Blending Overlap appears as **Reserved** when ChristieTWIST is installed.*

Other Functions:

For convenience, the **Edge Blending** submenu also includes related options for enabling a specific color and/or test pattern, or for working with colors or the lamp. Such functions duplicate those provided elsewhere in the menu system.

Edge Blending Procedure

NOTES: 1) Before attempting to work with edge blending software functions, align the projectors/images by correctly overlapping the displays from your intended external source. **2)** Match colors and the brightness uniformity.

IMPORTANT! For a shared edge, all blend procedures and settings should be identical on both projectors.

1. Start with two projectors. Display full white field test pattern from both.
2. In the **Edge Blending** submenu, enable **Edge Blending** by entering a checkmark in the top checkbox.
3. **SET STARTING POINTS FOR ADJUSTMENT:**
 - a. Set all blend widths to 0.
 - b. Go to **More** and set everything in the **Edge Blending** menu to 50.
4. **SET BLEND WIDTH:** On one projector, increase the **Blend Width** for an overlapping edge (for example, if the projector’s image is on left, its right edge overlaps the adjacent image—adjust **Right Blend Width**). Use the same setting on the second projector for this shared edge.
5. Re-adjust width (both projectors) until the overly bright band at the midpoint of the overlapping blends disappears or *just* changes to very light gray. For the shared edge, use the same **Blend Width** setting on

each projector. **NOTE:** *If the best blend appears to be between two settings, choose the wider setting for both projectors.*


6. **CHECK BLEND:** If the blended region appears too dark or light in relation to the rest of the image:
 - a. Increase **Blend Midpoint** in both projectors to “lighten” the overall blend, decrease to “darken” the overall blend.
 - b. Adjust **Blend Shape** in both projectors to fine-tune change the amount of mid-gray intensity (as opposed to black/white) in the blend.
7. Repeat with remaining projectors / overlaps.
8. Check completed display wall with the desired external signal.
9. If necessary, adjust the mechanical alignment to maintain perfect pixel-on-pixel alignment over time.

In applications where you are projecting only white or light images, the **Blend Width** may be slightly higher—set according to how much overlap you have between images. Use the following as a guide (examples show overlapping width only—values for overlapping height will differ). **NOTE:** *Recommended overlap is 12.5% - 25%.*

• COLOR ADJUSTMENTS BY X/Y:

Enter known x/y coordinates from the chromaticity graph

NOTES: **1)** *For defining or changing a User 1, 2, 3, or 4 color performance or “gamut”. Sometimes known as Comprehensive Color Adjustment™.* **2)** *Factory-defined primary color levels, which ensure a specific color performance from projector-to-projector; can be calibrated in the **Service** menu only. The factory settings can be recovered with selection of “Reset to Factory Defaults?” in the **Color Primary Settings** submenu accessed via the **Service** menu (password-protected).*

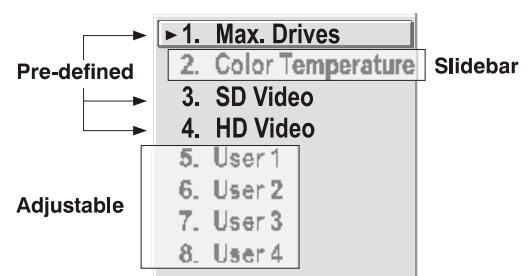

From the factory, the projector can utilize any of the three pre-defined color performance settings identified at right (default=Max Drives), or colors can be driven on the basis of color temperature. For most applications, one of these gamuts will produce accurate and realistic colors from a variety of sources. They can be applied at any time in the **Advanced Image Settings** menu (“Select Color Adjustment”), and are not adjustable.

DEFINING “USER” COLOR GAMUTS: You may find the pre-defined “Select Color Adjustment” options do not suit your needs. For example, you may require a unique color gamut (range) for a single projector or application, or you may need to precisely match colors across multiple adjacent displays. In such cases, use the **Color Adjustments by X,Y** or **Color Saturation** submenu to define the precise *hue* of each primary color component (red, green, blue, and white) used to generate the millions of colors produced in displays. You can create up to four custom color gamuts (User 1, 2, 3, or 4) with these adjustments.

NOTE: *The two menus differ only in their user interface, so use whichever menu best suits your needs and application. A color meter can help with adjustments.*

Use this submenu to create, alter or copy a color gamut (i.e., “color adjustment”). Controls in this menu define the precise hue of each primary color component (red, green, blue, and white) used to generate the millions of colors produced in displays. The x/y coordinates for each color define its location on the standard CIE chromaticity graph, see [Figure 3-38 - CIE 1931 Chromaticity Diagram \(without Yellow Notch Filter\)](#). Changing either or both of these numbers will change the hue of the color, and relocate the “triangle” for possible colors. For example, changing the x/y coordinates for red may move the color closer to orange or closer to violet, which will in turn affect all displayed colors having a red component. Adjust the slide bars or

enter new specific coordinates as desired to define or change up to four “User” color gamuts needed for your environment and applications. Apply at any time in the **Advanced Image Settings** menu.

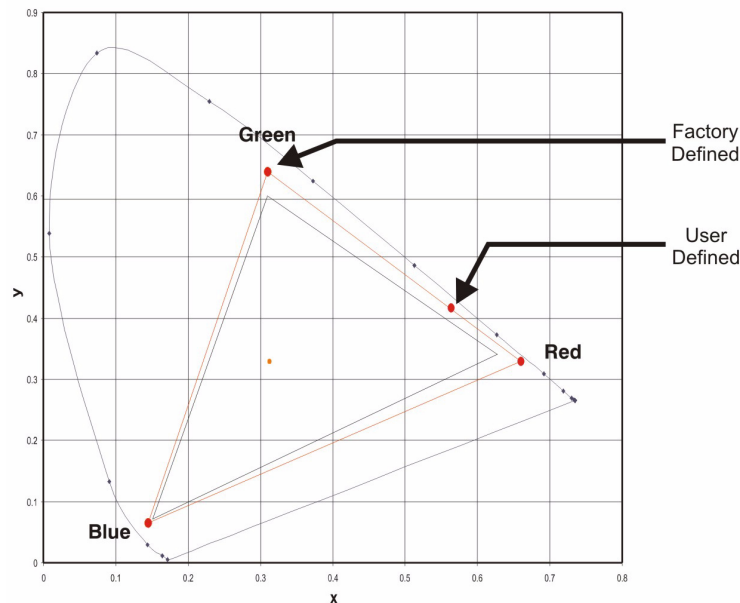


FIGURE 3-38 - CIE 1931 CHROMATICITY DIAGRAM (WITHOUT YELLOW NOTCH FILTER)

NOTE: Keep new x,y coordinates within the original color gamut triangle shown here.

- **COLOR SATURATION:**

Adjust color slide bars and judge image color by eye or meter. A user-defined color “adjustment” can be applied by selecting it in the **Advanced Image Settings** menu (select ‘Color Adjustment’).

Use this submenu if you do not have specific color coordinates in mind and will judge color performance by eye or meter. Like the **Color Adjustment by X,Y** submenu, each color control actually defines new x/y coordinates for that color and changes its hue.

Adjust the hue of each primary color (red, green, blue, and white) by using more or less of it in relation to the other colors.

NOTE: A Color Saturation adjustment defines the corresponding x/y coordinates shown in the **Color Adjustment by X,Y** submenu. These x/y coordinates will remain stable for this User gamut until they are changed again via either menu. Values displayed in the **Color Saturation** menu, will fluctuate as you use the projector, and will be different when you return to this menu in the future. These floating changes do not affect the x/y coordinates or gamut.

- **BLACK LEVEL BLENDING:**

Eliminates the differences between black levels when edge blending multiple projectors. The **Black Level Blending** submenu provides many controls to allow the edges of adjacent images to be smoothly overlapped creating a “seamless” image. (Edge blending smooths white levels, and if edge blending is not in use, **Black Level Blending** is disabled.)

NOTES: 1) Adjust white levels before adjusting black levels. **2)** Blinders are recommended for fixed installations.

Similar to **Edge Blending**, **Black Level Blending** allows you to adjust the black level hues of multiple adjacent projected images to create one large seamless display. **Edge blending** must be enabled in order to use the **Black Level Blending** features.

The use of **Black Level Blending** feature and the use of Christie Twist module are mutually exclusive. If Christie Twist is installed and **Black Level Blending** is desired:

1. Disable use of warps or 2D Keystone.
2. Enable edge blending; if not enabled.
3. Enable **Black Level Blending**.
4. Power down the projector then power up again.

Adjustments can now be made to black level controls.

To restore the use of Christie Twist:

1. Disable black blending.
2. Power cycle the projector.
3. Begin using the Twist controls.

Black Level Blending Procedure

NOTES: 1) Adjust white levels before adjusting black levels. **2)** The zones in BLB menu correspond to the Edge Blend zones. If a given Edge Blend zone width is set to 0 (i.e. no blend on that side) then the corresponding BLB zone is disabled. It only becomes accessible when that Edge Blend zone is active.

1. Start with two projectors. Select the black test pattern for both projectors from the **Geometry and Color** submenu.
2. In the **Black Level Blending** submenu, enable black blending by putting a checkmark in the checkbox for each projector.
3. Working with one projector at a time, use the center brightness slide bar to adjust the center brightness (brightness of the non-blended region) so that the center intensity matches that of the brightest blended region (the center of all images when blending a 2 x 2 display is the target area).
4. Use the following three color slide bars, **Black Red Level**, **Black Green Level** and **Black Blue Level**, so the black hue of each projector matches.
5. You can choose which of the next four options, Top, Bottom, Left, Right, to use depending on which edge of the projector you are working with has been edge blended. The blend width can be adjusted to line up properly but by default it corresponds to the edge blending setting determined for that edge.
6. The brightness and black hues of the blended region can be adjusted in more detail in case fine-tuning is needed (may be only necessary for blending a 2 x 2 projector display because of blending differs for the sides and center).

NOTES: 1) The menu options vary depending on the edge blending parameters. **2)** You may need to re-adjust the black level hues following the overlap adjustments on each blended edge. **3)** When adjusting six or more projectors, you need to ensure that the hue and brightness of each target area is matched as closely as possible.

• DEFAULT COLOR ADJUSTMENTS & DEFAULT COLOR ADJUSTMENT WITH YNF:

Select the default values for the color adjustment without the Yellow Notch Filter. The value selected is the default to be used by the system during auto setup or initial detection of a new source. Refer to [3.8 Configuration - Adjusting System Parameters and Advanced Controls](#) > [Geometry & Color - Submenu](#), **Color Adjustments by X,Y** for description.

Diagnostics & Calibration - Submenu

• **TEST PATTERN:**

Choose the desired internal test pattern to display, or select **OFF** to turn off a test pattern. Alternatively, use the **TEST** key for cycling through test patterns.

• **GREY LEVEL:**

Set the level of grey for displaying in the full gray field test pattern.

• **FREEZE IMAGE:**

Enter a check mark to freeze (stop) an image on a single frame. Use this diagnostic tool to examine in detail a still version of an incoming image that cannot be “frozen” at the source. For example, in moving images it is sometimes difficult to observe artifacts such as external de-interlacing/resizing and signal noise. Remove the checkmark to return to normal.

• **COLOR ENABLE:**

Select which color(s) you want to see. Use this while working with color temperature, input levels or other special setup parameters. Colors can be enabled/disabled by entering the corresponding function code listed on the back of the standard remote keypad.

• **INPUT PEAK DETECTOR:**

A fast method for defining individual input levels, and improving the accuracy of input levels set by the Auto Input Level function. Enabling the **Peak Detector** activates a special operating mode for detecting *only* pixels that are considered black or white—all other levels are displayed as a mid-level gray. When used with a 16-step grayscale pattern in which the two black and white bands are known to be at opposite edges of the image, you can watch these isolated areas while adjusting individual black levels and input drives until both bands are just visible. Images from this source will then display correct blacks and whites without crushing or washing out. **NOTE:** *If using Peak Detector with PIP, both images must have the same color space.*

• **INPUT LEVEL DETECTOR:**

The **Input Level Detector** checkbox enables specific thresholds for blacks and whites. Input levels that fall below a specified level value (see below) are displayed as black, and all others are displayed as white. To use:

1. Enable **Input Level Detector** and display a continuous grayscale.
2. Set **Input Level Value** to near black (such as 200).
3. Adjust Offsets to minimize area of black stripe.
4. Set **Input Level Value** to near white (such as 800).
5. Adjust Gains to minimize area of white stripe.

• **INPUT LEVEL VALUE:**

Input Level Value defines the value to be used by the **Input Level Detector** in recognizing blacks and whites. See **Input Level Detector**, above.

• **ASPECT RATIO OVERLAY:**

Check this box to display an overlay pattern over the image. The overlay shows the boxes corresponding to the size and shape of different aspect ratios.

• **TEST PATTERN COLOR SWAP:**

This function swaps the green and red color when drawing the Grid test pattern, and may be helpful when adjusting convergence on the projector.

- **ADVANCED DIAGNOSTICS:**

Allows for the setting of advanced controls which may cause image disruption, including the possible loss of the OSD menus. These disruptions are only temporary; pressing EXIT to exit the menu will restore the settings and allow normal operation.

- **OUTPUT PEAK DETECTOR:**

Is an aid for setting up the input levels. It causes the data to be processed so that very bright and very dark signals display as fully on or off, and everything in-between is set to mid level gray. The input levels should be adjusted so that bright and dark objects in the image are just visible.

- **OUTPUT LEVEL DETECTOR:**

Is an aid for setting up the input levels. It causes the data to be processed so that all levels below a specified value are set to black and all above (and including) it are set to white.

- **INPUT LEVEL VALUE:**

Specifies the value to be used by the level detector.

- **LIGHT ENGINE TEST PATTERN:**

One of 3 light engine test patterns may be displayed: black, white or grey scale.

Option Card Settings - Submenu

Allows adjustment of any settings specific to each option card that is currently installed in the projector.

Dynamic Iris - Submenu

Refer to **Image Settings>Advanced Image Settings**

3.9 Input Switching & PIP Menu

Use the **Input Switching & PIP** menu to enable and define how you want to use PIP.

NOTE: To control the primary image, access all picture controls through the **Main** menu. To control the secondary (PIP) image, access picture controls through the **Input Switching & Picture-in-Picture** menu.

- **MAIN INPUT:**

From the list of active inputs, select one to be used as the primary or main image.

- **PIP INPUT:**

From the list of active inputs, select one to be used as the secondary or PIP.

- **SWAP MAIN AND PIP IMAGES:**

Toggle the current PIP relationship so that the primary (main) image becomes secondary (PIP), and the secondary image becomes primary. Swapping is available only when PIP is enabled. **NOTE:** There may be a slight delay when swapping the Primary and Secondary images.

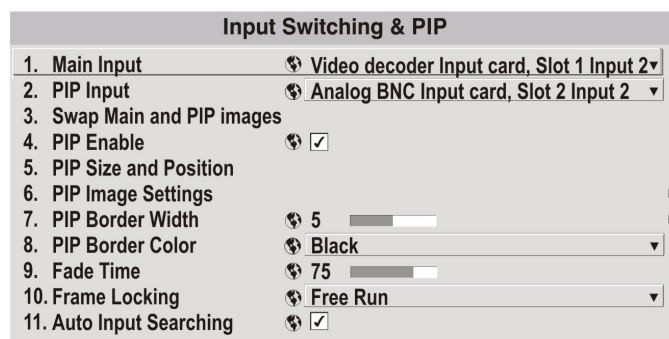


FIGURE 3-39 - INPUT SWITCHING & PIP MENU

- **PIP ENABLE:**

Short cut: *Press PIP on the Remote if menu not present.*

Toggle between displaying two sources at once (Main and PIP images) and the primary or main source only. This checkbox turns the secondary source on and off.



PIP Size & Position - Submenu

Most controls in the **PIP Size and Position** menu adjust the PIP (secondary) image in the same fashion as their counterparts in the main **Size and Position** menu.

- **POSITION PRESETS:**

Set the location of the PIP (secondary) image in the display.

PIP Image Settings - Submenu

The controls adjust the PIP (secondary) image in the same fashion as their counterparts in the main **Image Settings** menu. **NOTE:** Refer to [3.7 Image Settings Menu](#) for details of **Contrast to Advanced Image Settings**.

- **PIP BORDER WIDTH:**

Enables the optional border around the PIP image. When enabled, a one pixel-wide border will surround the PIP image. When disabled, no border will be displayed.

- **PIP BORDER COLOR:**

This control allows you to choose the color of the optional border around the picture-in-picture image. The border can be disabled by setting the width to zero.

- **FADE TIME:**

Sets the amount of time (in seconds) it takes to fade between images on a source switch and fades in the PIP image.

- **FRAME LOCKING:**

This option allows the projector to control the output frame timing based on the input signal. The **Frame Lock** option forces (if possible) the output image to be phase locked to the input frames. When Frame Locked, the output is always locked to the primary input, and never to the PIP image. **Free Run** sets the output to run at a fixed frame rate frequency. The frequency is defined by Free Run Frequency. By default, the free run frequency is 59.94Hz. **NOTE:** *Seamless switching is only available when free run is selected. When switching to a new input with frame locking enabled, the image will be black for the short period while the system locks onto the new input.*

- **AUTO INPUT SEARCHING:**

When enabled, the system will continually search for the next valid signal when no signal is present or when loss of sync occurs on the current user selected input. In the case of multiple signals to choose from, the order is based on slot, followed by inputs on that slot.

3.10 Lamp Menu

• LAMP OPERATION:

Select the operational mode of the lamps. If a lamp fails to strike on the first attempt, up to 3 more attempts to strike are made. The lamp modes are:

- **Lamp 1 single lamp use or Lamp 2 single lamp use** will only use the lamp specified. If the selected lamp will not strike, then the projector will not turn on. If the “Single Lamp Switch on fail” option is enabled, the projector will always attempt to turn on the selected lamp first, but if that lamp fails all attempts to strike, it will allow a switch to the other lamp. This option is not enabled for DLV models, which are restricted to operate in Dual Lamp Mode only.
- **Dual Lamp Use** will use both lamps together. After 3 failed attempts to stay in Dual Lamp mode, it will switch to Single Lamp operation; however, the user-selected mode will remain as Dual Lamp Mode.
- **Auto-Select a Single Lamp** will choose the best lamp for single lamp operation. The lamp selection is based on:
 - The lamp that will be the fastest to turn on (a lamp can be chosen if it is currently on, or if it has been off for at least the minimum hot re-strike period)
 - The lamp that has been least used (determined by the lamp voltage, which increases as the lamp ages)
 - The lamp with the fewest hours (this attempts to balance the lifetime of the two lamps)

In Auto-Select Single Lamp operation, a failure of a lamp to strike will cause a switch to the other lamp. This option is not enabled for DLV models, which are restricted to operate in Dual Lamp Mode only.

• LAMP MODE:

Determines how the lamp power and intensity are controlled. If **Maximum Brightness** the lamp burns as brightly as possible. Select **Constant Intensity** mode to maintain a specific brightness level over time. As the lamp ages, the projector will increase power as needed to closely maintain the required output from the lamp. Select **Constant Power** to specify the power level supplied to the lamp. Both **Constant Intensity** and **Constant Power** modes extend lamp life.

• LAMP POWER:

Set the lamp power in Watts. The Power control represents the amount of power sent to the lamps. Power increases when operating in Intensity mode, until it reaches its maximum. The value remains stable when in Max Brightness or Power mode. If using Power mode, setting a lower power level reduces brightness and extends lamp life.

• LAMP INTENSITY:

Adjust the lamp intensity to % of full. This value is used as a target value by the LiteLOC™ system to maintain constant intensity.

• YNF:

Refer to [3.7 Image Settings Menu](#).

Lamp	
1. Lamp Operation	Dual Lamp Use ▼
2. Lamp Mode	Constant Power ▼
3. Lamp Power	370
4. Lamp Intensity	50
5. Yellow Notch Filter	☐
6. Single Lamp Switch on Fail	☐
7. Lamp 1 s/n	1234567
8. Lamp 2 s/n	N/A
9. Change Lamp	
10. Lamp 1 History	
11. Lamp 2 History	

FIGURE 3-40 - LAMP MENU

- **SINGLE LAMP SWITCH ON FAIL:**

When this checkbox is enabled, if the current lamp experiences problems which prevent light on the wall, then the projector will automatically attempt to start the other lamp. This applies if there is a failure to start a lamp, or a failure during operation. This feature applies only to systems which have multiple lamps and are currently set to run in a single lamp operating mode. A brief period with no light may occur before the other lamp becomes active.

- **LAMP S/N (LAMP 1 and LAMP 2):**

Enter the serial number for the specified lamp. This will apply the serial number to the current lamp statistics file. It will not perform the archiving as done by the **CHANGE LAMP** function.

- **CHANGE LAMP:**

Informs the projector that a lamp has been changed. This allows the serial number of the new lamp to be entered.

Lamp serial numbers are used for keeping statistics on each lamp used in each lamp position. Entering of serial numbers is optional, but is recommended.

When using this function, the statistics for the previous lamp will be archived, and new statistics will be started for the new lamp. If this function is not used statistics will be cumulative, for both the new and old lamps combined.

- **LAMP 1 HISTORY and LAMP 2 HISTORY:**

Lists the serial number and the number of hours logged for each lamp that has been installed in the projector. The current lamp appears at the bottom of the list. This entry is added automatically when you record a new serial number during the lamp change process.

3.11 Status

The read-only **Status** menu lists a variety of details about the standard and optional components currently detected in the projector. Refer to the **Status** menu for versions of hardware and software installed, the type (size) of lamp, the hours logged in total and for a specific period (such as a rental period), and for your projector model name and serial number. In addition, the **Status** menu identifies the current channel, its location, its frequencies and other details.

3.12 Using Multiple Projectors

IMPORTANT: When working with more than two projectors, work left to right, top to bottom.

When an installation requires multiple projectors, use the RS232 serial ports to daisy chain the units together and control the group with a single keypad or a computer/controller connected to the first projector. In such a network, you can choose to broadcast commands to the entire group, or use the PROJ key as desired to limit responses to an individual projector.

Alternatively, you may want to add projectors to a hub on an Ethernet network. See [Figure 2-22 - Mixed Network](#) for full routing details.

Matching Colors in Multiple Screens

In a multiple-projector wall, you will likely want to precisely match color and intensity from image-to-image so that the full wall is as uniform as possible.

Preliminary Calibration

All primary colors in the projector are precisely set to pre-established values to ensure that overall color performance is optimized and is as accurate as possible. Lighting and other environmental factors may slightly change how these colors appear on your screen. While the change is negligible in most cases, you may prefer to recover the originally intended color performance before trying to match colors from several projectors.

To achieve consistency use a color meter to measure the native primary colors—red, green, blue, and white—as they appear at the screen. Record these as *Color Primary Settings* in the **Service** menu (password-protected) for each projector. On the basis of these new values, which are stored in memory, each projector will then automatically calculate any necessary corrections to reproduce the original factory colors under the current environmental conditions. This essentially calibrates a projector to its surroundings, compensating for factors such as screen type; lamp and/or ambient lighting and will improve color accuracy and consistency in a group of projectors. It ensures a good starting point for further customizing and matching; however, is not critical for all installations.

To access the **Service** menu (password-protected) return to the factory-set color primaries. Select the “*Reset to Factory Defaults?*” option in the **Color Primaries** submenu. Then repeat the calibration process describe above and continue with matching of colors.

Color Adjustment Procedure

Once the *Color Primary Settings* are calibrated for the site (see above), use the **Color Adjustments by X,Y** or **Color Saturation** menu to further refine each projector’s fundamental colors so that the hue and intensity of each color appears the same from one display to another. Once matched, you will have created a single new shared range of colors or “color gamut” that all of your projectors can produce. This palette—named User 1, 2, 3 or 4—can be applied or disabled for a source at any time throughout a bank of adjacent displays, simplifying both the setup and maintenance of a “seamless” wall.

1. Set up and optimize all projector settings. You can ignore color temperature, since you will be redefining color performance in this procedure, but do optimize each projector in every other aspect. Closely align all screen edges.
2. Assign projector numbers to make communications easier. Use desired keypad.
3. Use the same lamp mode for all projectors, and do the following:
 - Set Select *Color Adjustment* to “Max Drives”
 - Display a full white test pattern
 - Adjust lamp power and Optical Aperture until adjacent white fields appear the same brightness.
4. Display the **Color Adjustments by X,Y** menus for all projectors. Each menu shows the x/y coordinates defining the “Max Drives” color gamut for this projector. **NOTE:** *The values shown in one (any) of the displays. Use the “Copy From” function to copy them into a “User” gamut in one projector.*

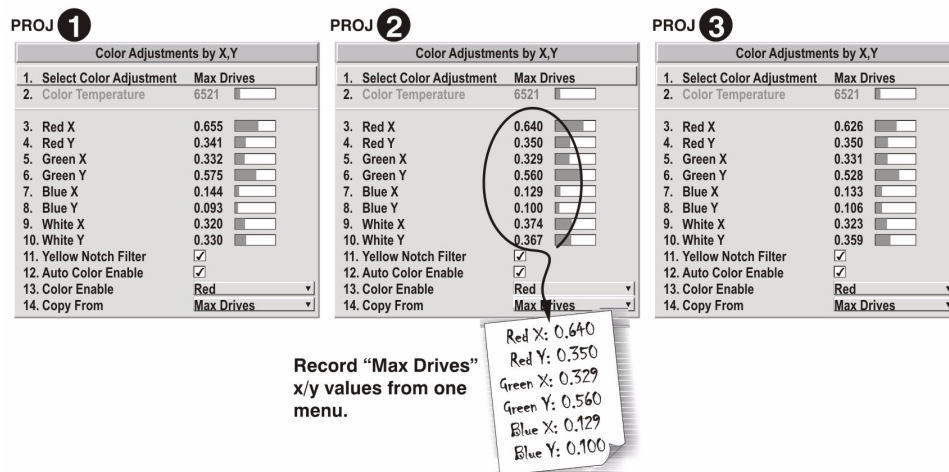


FIGURE 3-41 - JOT DOWN A SET OF "MAX DRIVES" X/Y VALUES

- In each projector, select a "User" color adjustment (1-4) to enable *Color Adjustments by X,Y* changes. Then enter your recorded x/y values into each menu.

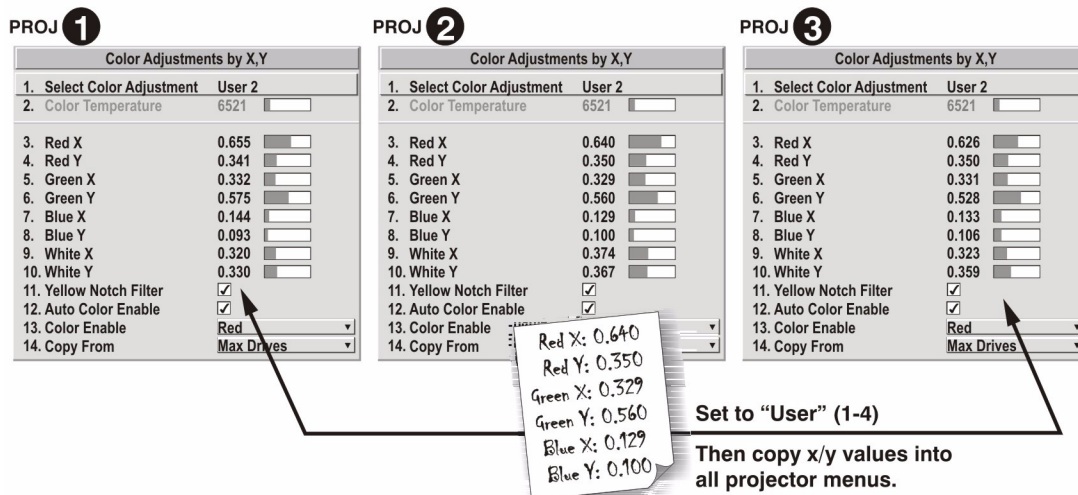


FIGURE 3-42 - COPY X/Y VALUES INTO ALL PROJECTORS

- In each projector, judge by eye and adjust x/y coordinates slightly in the following manner:

- To match reds, decrease “Red X” until full field red screens match.
- To match greens, decrease “Green Y” until full field green screens match.
- To match blues, increase both “Blue X” and “Blue Y” until full field blue screens match.

NOTE: For speed, enable the “Auto Color Enable” checkbox. Each color coordinate you select will then automatically trigger a full field display of the corresponding color.

Alternatively, use the **Color Saturation** menu for these adjustments or to fine tune.

These coordinate adjustments move the three color points closer together (see below) to establish a “shared” gamut attainable by all projectors in your group. Adjust only as necessary to ensure that the resulting color palette is as large as possible. When done, you may need to adjust lamp power slightly.

7. All screens should now be color-matched. Apply this new “User” gamut to a source at any time by selecting it in the “Select Color Adjustment” list accessed in the **Advanced Image Settings** menu.

Using the Color Saturation Menu for Color Matching

To use the **Color Saturation** menu to match colors across multiple screens. In the three Color Adjustment submenus (Red, Green, Blue, and White—see right), set all main values to 1000 and the secondary values to 0, if applicable. Then judge by eye and adjust the slide bars as needed. **NOTE:** Adjustments here define new x/y coordinates in the *Color Adjustments by X,Y* menu.

For best results, use this menu after doing the color adjustment procedure.

FIGURE 3-43 - COLOR ADJUSTMENT

FIGURE 3-44 - COLOR MATCHING USING COLOR SATURATION MENU

3.13 Remote Control of the Projector

As an alternative to using a keypad, most projector functions can be controlled remotely, typically at a controller such as a PC, via a web interface.

VIA ASCII MESSAGING — Connect a serial link between your controller and the RS232 or RS422 port (recommended), or open an Ethernet socket (i.e., Telnet) between your controller and the valid projector address. Valid ASCII codes and messages are documented in the *Christie Serial Communications* document available at the Christie website.

VIA WEB INTERFACE — Connect the PC to the projector's Ethernet port. In the web browser (i.e., Internet Explorer), enter the IP address of the projector you wish to control. This will prompt a login screen. The default login ids are: admin, service, and guest. Up to a maximum of 3 users can connect at any given time. Two users can use the same account to log in. Each user will see a different set of tabs. The default passwords can be edited by an administrator or a service user in the Admin tab. Guest users will not see this tab. Basic operations of the projector can be controlled from this interface and the Virtual OSD can be accessed from here.

3.14 Alarm Conditions

An alarm condition consists of a message that is on the LCD display located beside the built-in keypad, see [Section Figure 3-45 - Example of Alarm Condition](#).

There are two types of alarm conditions:

Warning Alarm; and

Critical Alarm

A warning alarm is shown when an error or a non-optimal condition has occurred. That will generally not prevent the projector from operating. An example is when a temperature is slightly elevated.

A critical alarm is shown when a condition occurs that could prevent the projector from operating and could cause damage to the projector. This may cause the projector to shut down automatically. An example would be a fan not running.

Both alarm types display:

- the item of alarm
- the status of the item

The item of the alarm can be either physical, i.e. fan or sensor, or the alarm can be a software issue, i.e. lamp driver. The LCD displays the status of the item and its units; if applicable. If the status of the item is out of normal range an alarm is created. When the status of the item is within normal range the alarm will clear.

NOTES: 1) When an alarm is displayed in the LCD display, the built-in keypad is disabled. To confirm the alarm, press the OK soft key to enable the built-in keypad. **2)** The alarm condition can also be viewed using the remote in the read only Status menu.



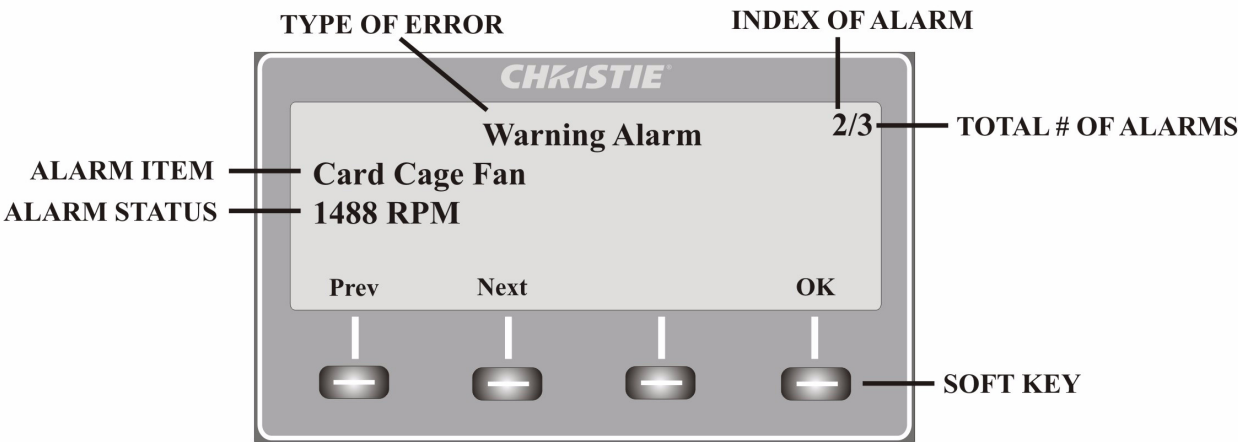



FIGURE 3-45 - EXAMPLE OF ALARM CONDITION

4 Menu Tree

4.1 M-Series Menu Tree

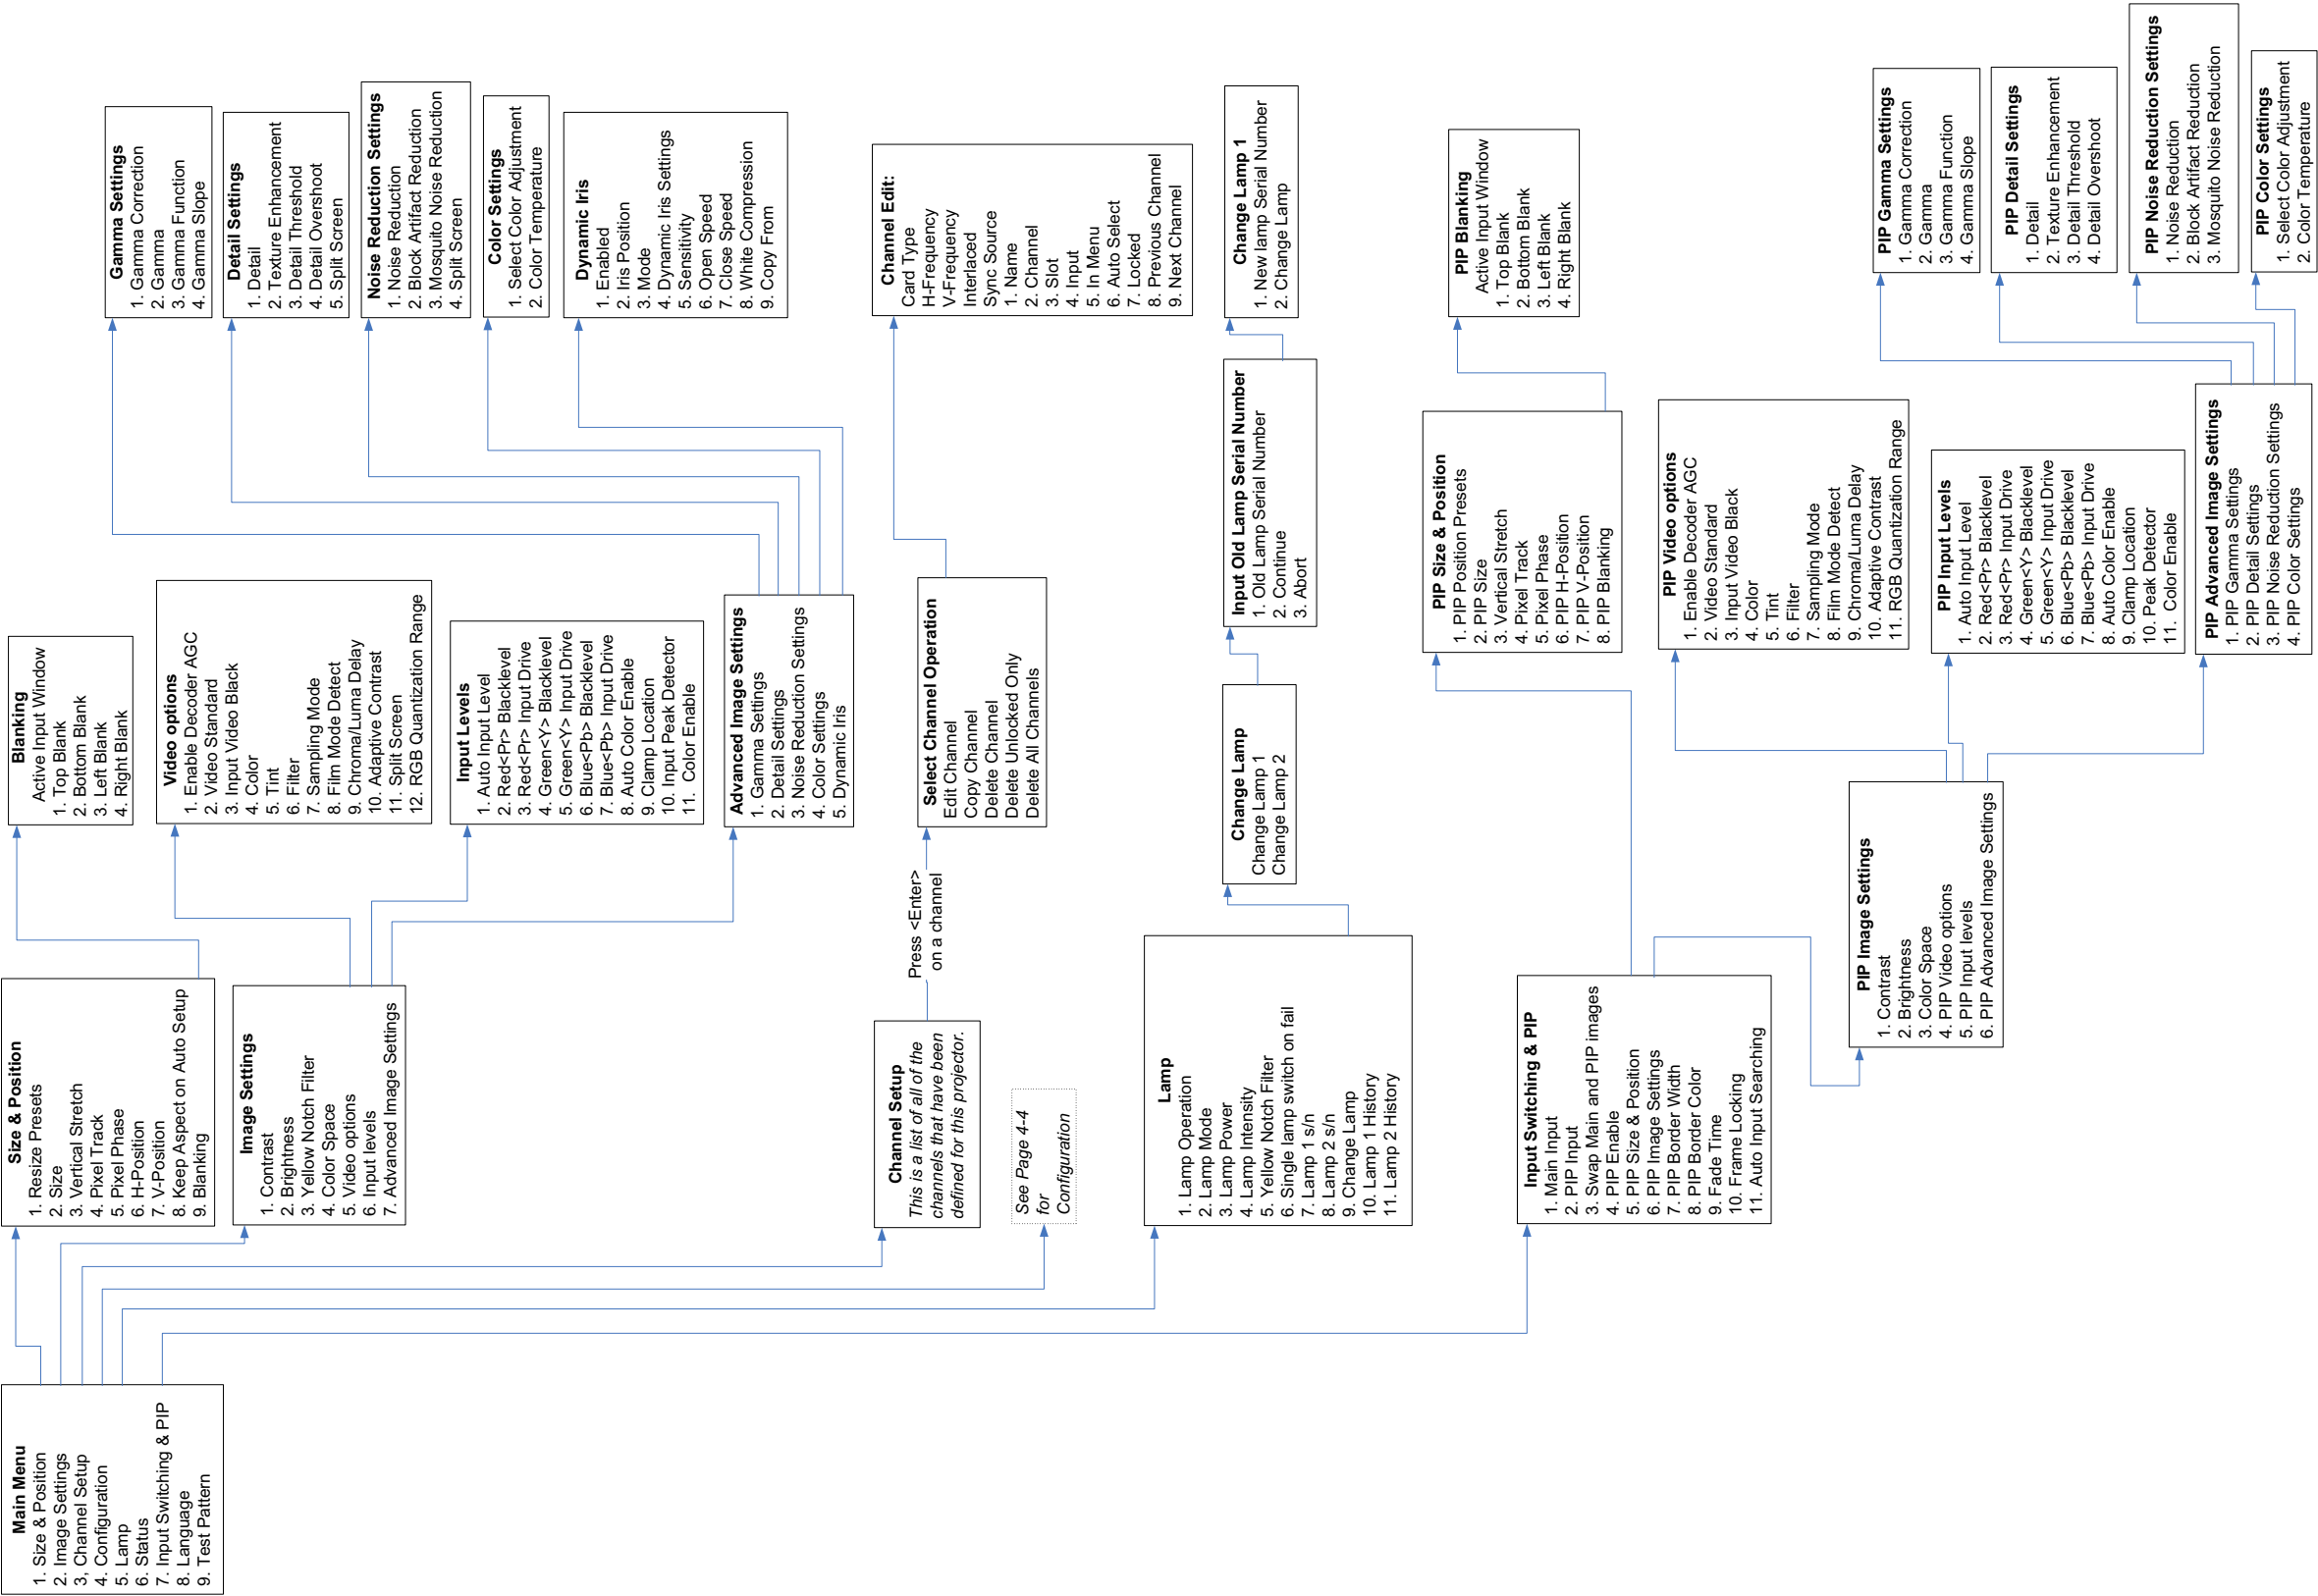

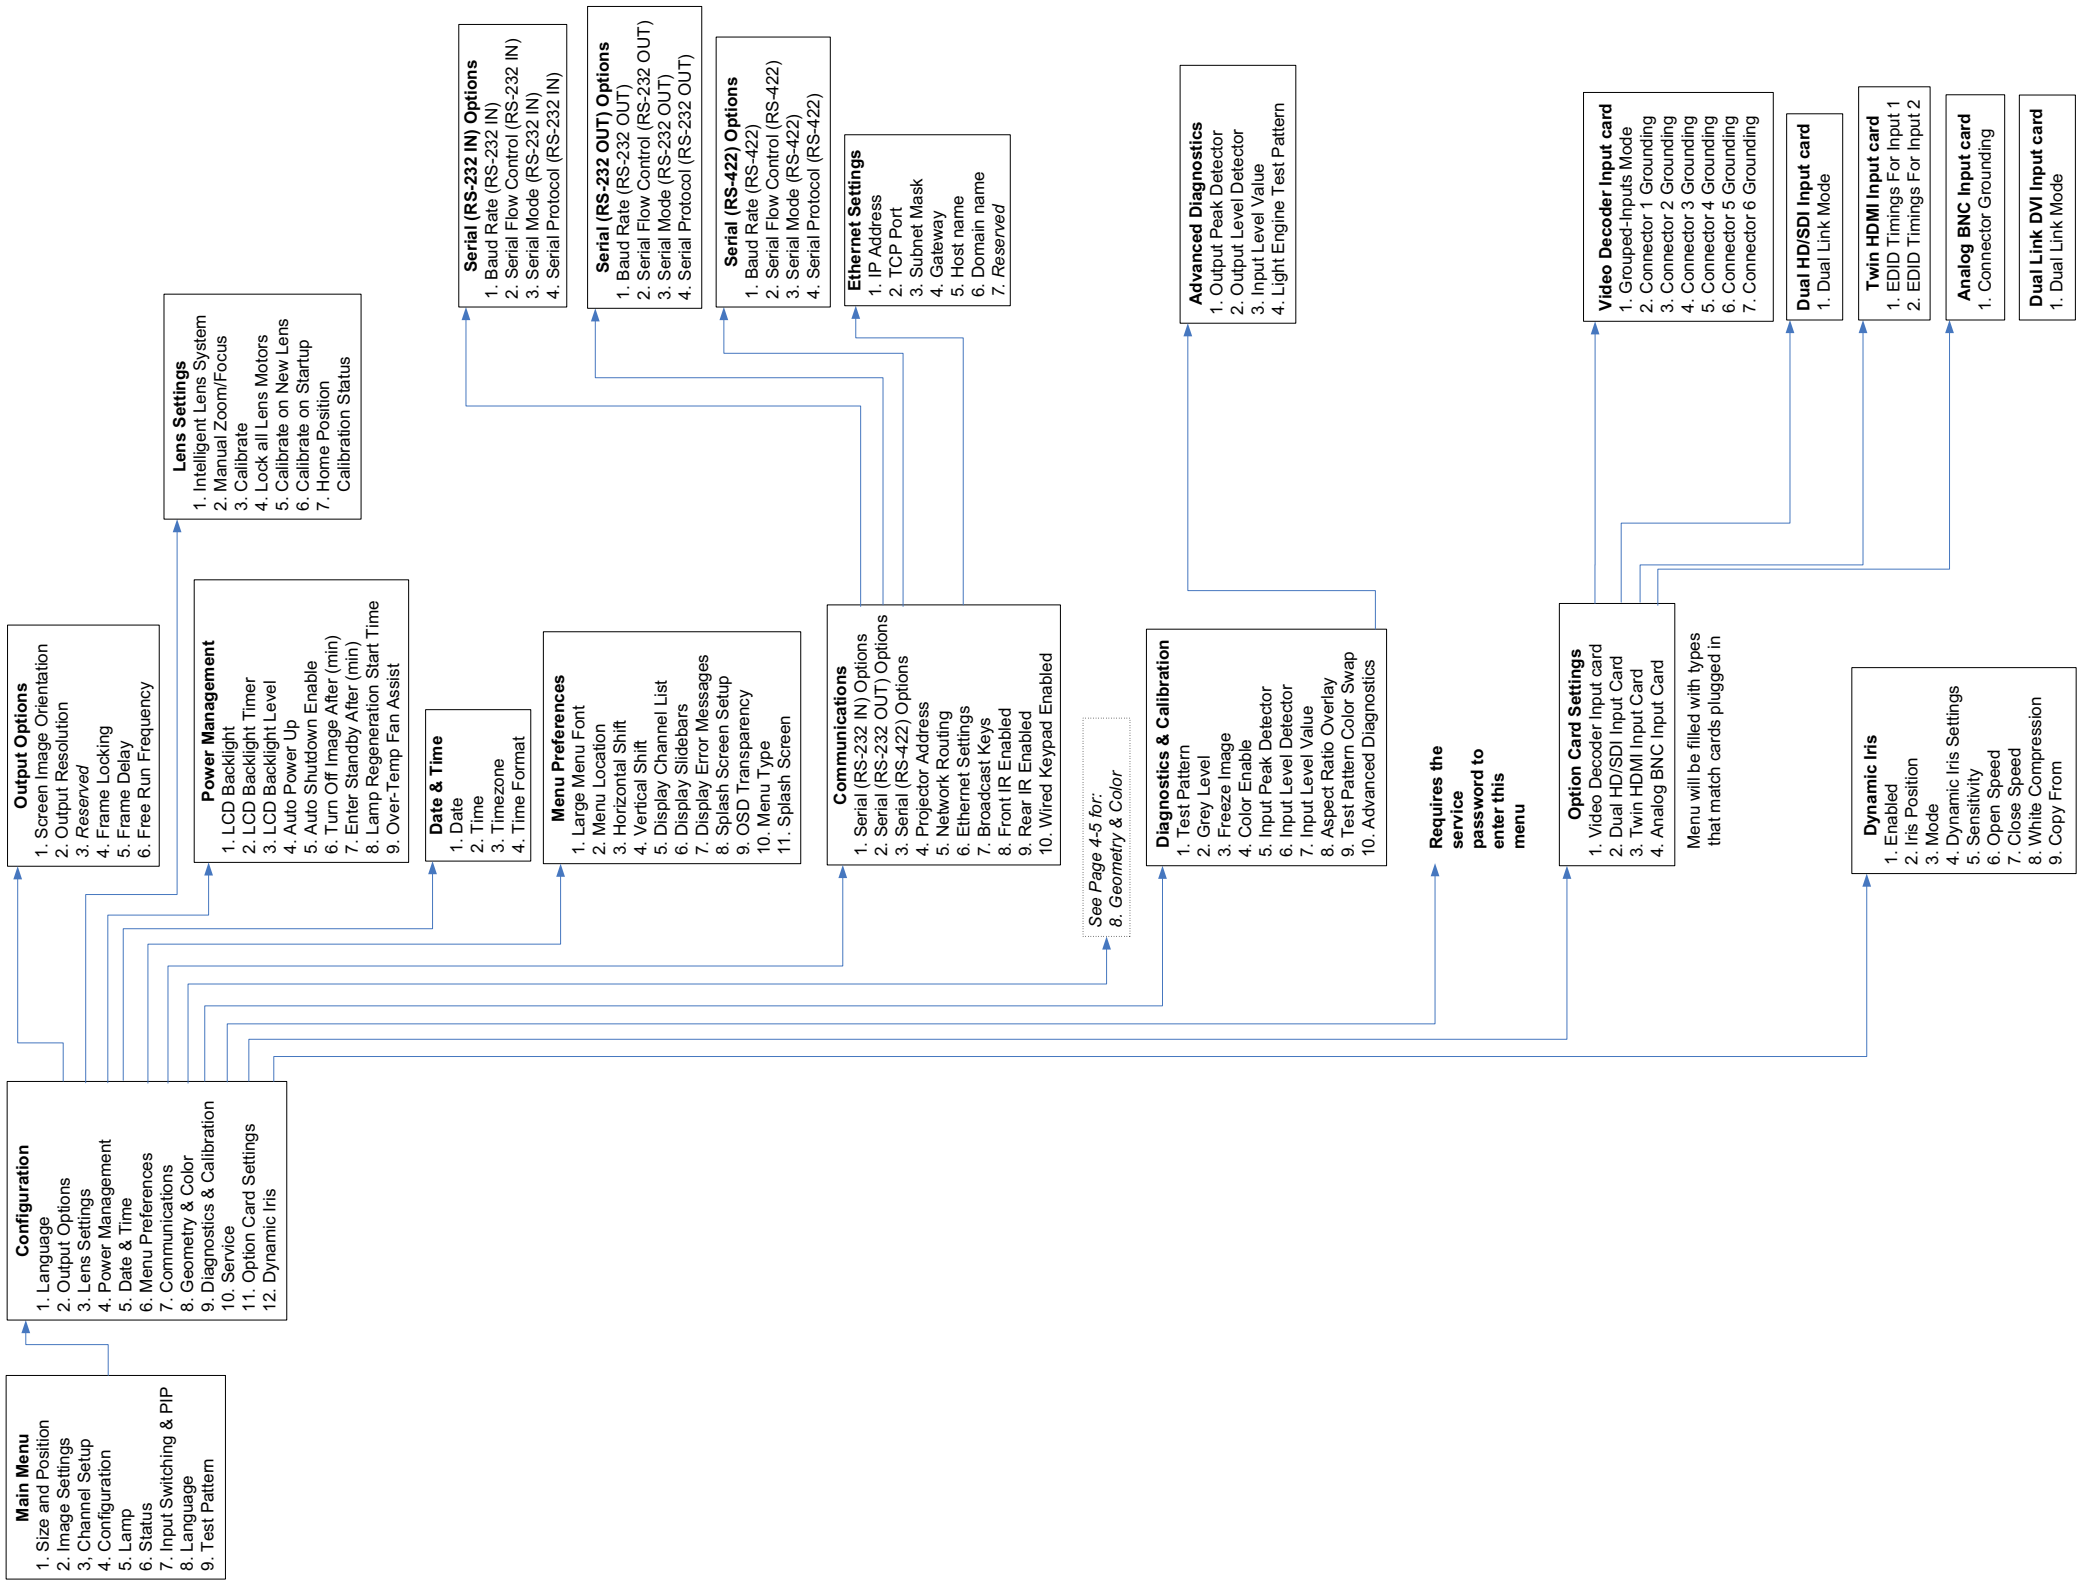

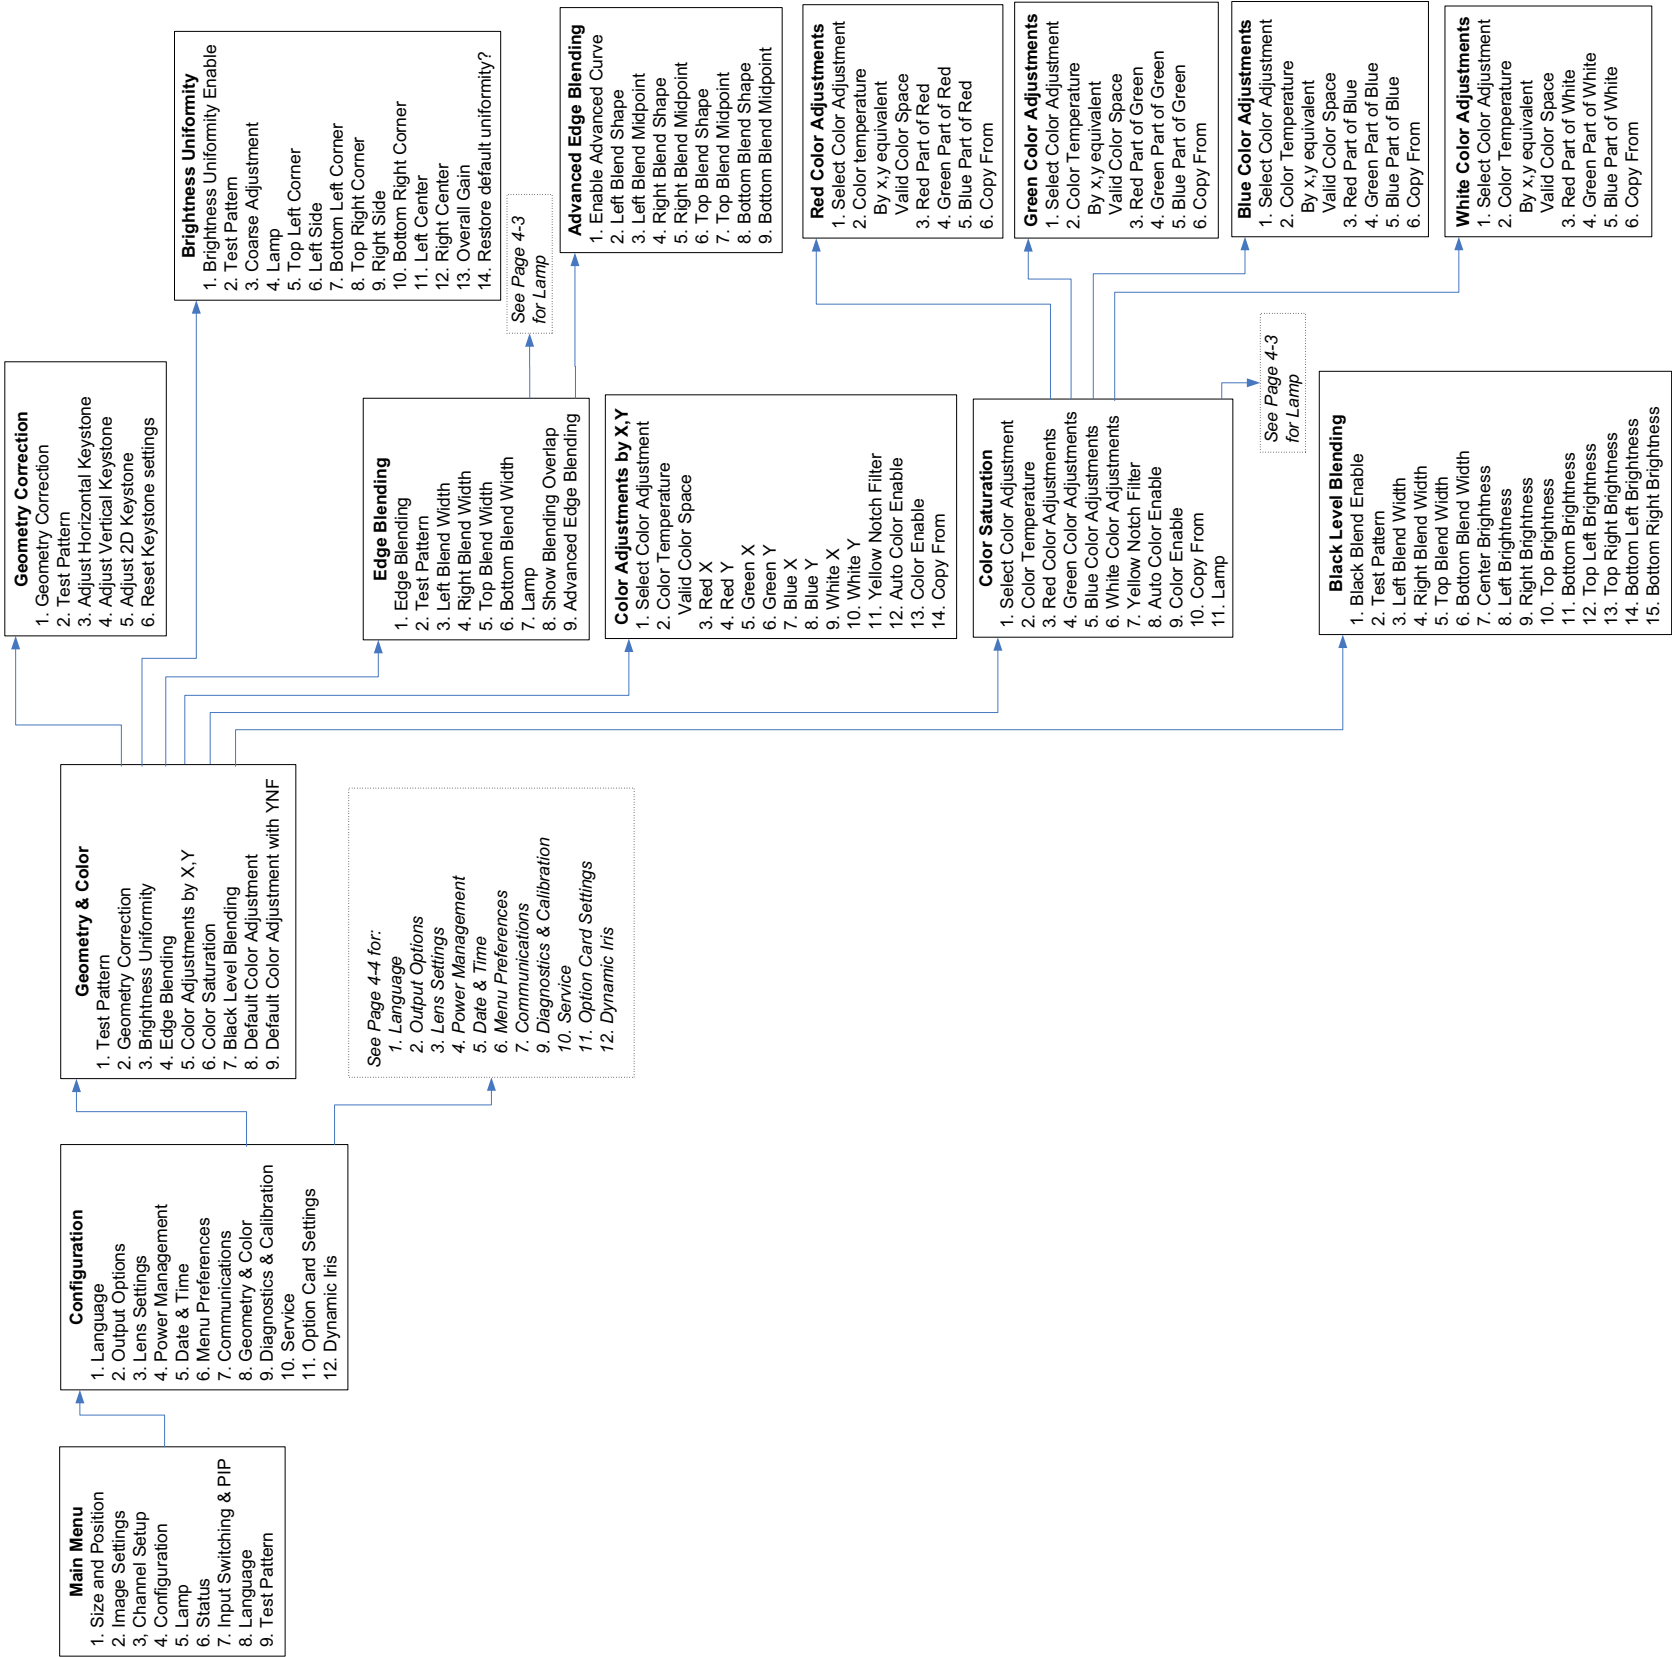

5 Maintenance


Installers, service trained operators and all other users must maintain a safe operating environment at all times. Read through this section in its entirety and understand all warnings and precautions before attempting to operate this projector.

5.1 Safety Warnings and Guidelines

5.1.1 General Precautions



Do **NOT** look into the lens

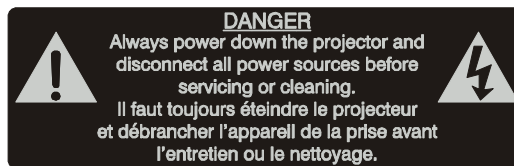

⚠ DANGER FIRE HAZARD. Keep hands, clothes and all combustible material away from the concentrated light beam of the projector. Position all cables where they cannot contact hot surfaces or be pulled or tripped over.

⚠ WARNING All installation and maintenance procedures must be performed by a CHRISTIE accredited service technician.

⚠ WARNING Projector must be operated in an environment that meets operating specifications, as listed in [Section 7 Specifications](#).

5.1.2 AC /Power Precautions

⚠ WARNING Use only the AC power cord supplied. Do not attempt operation if the AC supply and cord are not within the specified voltage and power range. Refer to the license label on the back of the projector or [Section 7 Specifications](#) for rated voltage and power.

⚠ WARNING The projector is equipped with a 3-wire plug with a grounding pin. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to have the outlet replaced. **NEVER** defeat the safety purpose of the grounding-type plug.

⚠ WARNING Do not allow anything to rest on the power cord. Locate the power cord where persons walking on it or objects rolling over it cannot damage the cord.

5.1.3 Lamp Precautions

**DANGER: LAMPS MAY EXPLODE-POSSIBLE BODILY HARM OR DEATH**
The lamps are under pressure and may explode causing physical injury and/or property damage. Allow the lamps to cool before handling or unplugging the projector. Lamp replacement to be done by qualified service personnel; consult *User Manual* or lamp kit for instructions.

⚠ WARNING Never attempt to access the lamp while the lamp is ON. After turning the lamp OFF, it is crucial that you wait at least 10 minutes before handling the lamp. This provides sufficient time for the lamp cooling fans to properly cool the lamp. For all other precautions critical for safe removal and replacement of the lamp, refer to [5.4 Replacing the Lamps](#).

5.2 Maintenance of the Cooling System

The high-intensity lamps and electronics rely on a properly functioning cooling system. Regular maintenance of the cooling system is critical to prevent overheating and sudden projector failure and helps ensure reliable operation.

5.2.1 Ventilation

Vents and louvers in the projector covers provide ventilation, both for intake and exhaust. Never block or cover these openings. Do not install the projector near a radiator or heat register, or within an enclosure. To ensure adequate airflow around the projector, with a minimum clearance of 25cm (10”) on the left, right and rear sides of the projector from any walls or other obstructions. **NOTE:** *Do not obstruct the air exchange to the projector.*

5.2.2 Optional Filters

⚠ WARNING Use only special, high efficiency Christie approved filters.

⚠ WARNING This projector is not equipped with fan finger guards. Keep fingers away from the fan blades when replacing filter.

Dust Air Filter

CHECK: Monthly

Check projector air dust filters, at minimum, every month.

Dust air filters (if fitted), should be replaced whenever the lamp is replaced or between 200-500 hours, depending on use. A clogged air filter reduces air flow and can lead to overheating and failure of the projector. Check monthly by inspecting its color through the side vent grille with a flashlight. Replace grey colored filters. Leave the filters in their sealed packaging until ready for use.

Replace Filters:

1. Unscrew the 2 captive screws at the top of each filter door (Figure 5-1). Allow the door to rest down and away from the projector.
2. Slide the air filter out and replace, vacuum or wash the filter. Wash using mild soap and water. **NOTE:** *Dry the filter before using.*
3. Insert the new or cleaned air filter(s).
4. Secure the filter door by tightening the 2 captive screws loosened in Step 1.

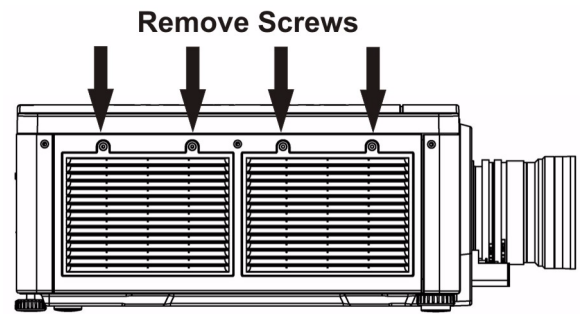


FIGURE 5-1 - REPLACE FILTER


Fog Filter

Fog filters should be replaced after each use of the projector to a maximum of 20 hours. The life of the filter is approximately 20 hours based on environmental conditions. Leave the filters in their sealed packaging until ready for use. **NOTE:** *The fog filters cannot be re-used or they will clog up with oil and the projector will overheat and shutdown.*

Replace Filters:

1. Unscrew the 2 captive screws at the top of each filter door (Figure 5-1). Allow the door to rest down, away from the projector.
2. Slide the filter (or dust air filter, if fitted) out.
3. Insert the new air fog filter with ensuring the white layer facing into the projector. **NOTE:** *Each filter is a two-stage filter; the black activated charcoal layer faces out, and the white layer faces the projector.*
4. Secure the filter door by tightening the 2 captive screws loosened in Step 1.

5.3 Maintenance of Optics

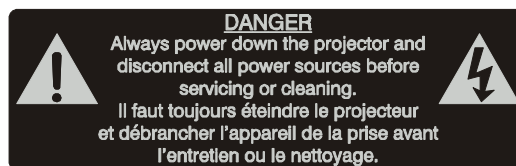

5.3.1 Optical (Excluding Lens)

Unnecessary cleaning of optics, increases the risk of degrading delicate coatings and surfaces. Only clean optics when dust, dirt, oil, fingerprints or other marks are obvious and are causing performance problems. Maintenance of optical components requires a qualified service technician. Inspect exposed optical surfaces periodically in a clean, dust-free environment using a flashlight. **Never touch** an optical surface with your bare hands. Always wear latex lab gloves.

Supplies or Cleaning Optical Surfaces

- Soft camel-hair brush
- Dust-free blower - filtered dry nitrogen blown through an anti-static nozzle.
- Dust-free lens tissue, such as Melles Griot Kodak tissues (18LAB020), Optowipes (18LAB022), Kim Wipes or equivalent
- *For lens only.* Lens cleaning solution, such as Melles Griot Optics Cleaning Fluid (18LAB011) or equivalent.
- Cotton swabs with wooden stems only
- Lens cleaning cloth/microfibre, such as Melles Griot (18LAB024) or equivalent

5.3.2 Cleaning the Lens

Check periodically. A small amount of dust or dirt on the lens has minimal effect on image quality. To avoid the risk of scratching the lens, **clean only if absolutely necessary.**

Dust:

1. Brush most of the dust from the lens with a camel-hair brush and/or blow dust away with a dust-free blower.
2. Fold a microfibre cloth smooth and gently wipe remaining dust particles from the lens. Wipe evenly with the smooth portion of the cloth that has no folds or creases. Do not apply pressure with your fingers - use the tension in the folded cloth itself to collect dust.
3. If significant dust is still bound to the surface, dampen a clean microfibre cloth with coated optics cleaning solution (damp, not dripping). Wipe gently until clean.

Fingerprints, smudges, or oil:

1. Brush away most of the dust with a camel-hair brush and/or blow away using a dust-free blower.
2. Roll a lens tissue around a swab and soak it in coated optics cleaning solution. Tissue should be damp, but not dripping.
3. Gently wipe the surface using a figure-8 motion. Repeat this motion until the blemish is removed.

5.4 Replacing the Lamps



DANGER: LAMPS MAY EXPLODE-POSSIBLE BODILY HARM OR DEATH

The lamps are under pressure and may explode causing physical injury and/or property damage. Allow the lamps to cool before handling or unplugging the projector. Lamp replacement to be done by qualified service personnel; consult *User Manual* or lamp kit for instructions.

1. To turn off the lamps:

Turn off the lamps using the remote keypad or the built-in keypad with the lamp **OFF** command (see Step 5) or by opening the lamp door. **NOTE:** *The lamps will turn off automatically when the lamp door is open.*

2. To open the lamp door:

Using a Phillips screwdriver turn the 1 captive screw on the lamp door counter-clockwise to access the lamp compartment. **NOTE:** *When the door is open, the lamps will shut off.*

3. Wait

Wait at least 10 minutes before handling the lamps, to allow the lamps to cool.

4. Remove the old lamp.

- a. Unscrew the 3 captive screws securing the lamp using a #1 Phillips screwdriver.
- b. Carefully remove the lamp from the projector. Place the old lamp in a location where it cannot fall or be bumped.

⚠ WARNING Handle lamps with extreme caution. Dispose of lamps according to safety regulations for your area.

5. To use lamp OFF command:

- a. In the lamp menu, select **CHANGE LAMP**. This will prompt for the old lamp serial number (if it was not previously entered).
- b. Enter the new lamp serial number.

NOTE: *This action is not mandatory, it is recommended for accurate lamp statistics to be archived.*

6. Install the new lamp:

- a. Take precaution to align the new lamp properly in the correct orientation inside the projector.
- b. Press firmly to seat the lamps, ensuring the lamp is secure.
- c. Using the Phillips screwdriver and captive screws secure the lamp door and tighten the captive screw.

NOTES: **1)** *If the lamps were turned off with the **OFF** command in step 1, they will have to be manually turned on.* **2)** *If the lamps were turned off by opening the door, then they will automatically turn on again when the door is closed.*

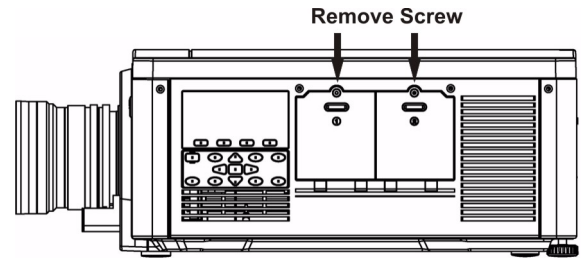


FIGURE 5-2 - REPLACE LAMP

6 Troubleshooting

If the projector is not operating properly, note the symptoms and use this section as a guide to resolve the problem. If the problem cannot be resolved, contact your dealer for assistance. **NOTE:** *A CHRISTIE accredited service technician is required when opening an enclosure to diagnose any “probable cause”.*

6.1 Power

6.1.1 Projector Does Not Power ON

1. **Ensure projector is plugged in?** Check power switch above power cord is in the ON position.
2. **Check that the Status LEDs are ON.** While the projector is busy initializing, the LEDs should be cycling. When finished initializing, the Power and Shutter LEDs (the two on the right) should be on.
3. **Check the LCD display.** While the projector is busy initializing, the display should show “Please wait”. When finished initializing, the display should show “Standby mode”.
4. Check the LCD display for any warnings or errors.

6.2 Lamp

6.2.1 Lamp Does Not Ignite

1. **Is there an interlock failure?** Check the LCD display for an error. If the other lamp has ignited and an image can be seen, use the remote keypad and check the **Status** menu for any errors and for the Lamp door interlock status. If not lamp has ignited, use the Virtual OSD on the web interface to check these items. The interlock failure could be an open lamp door or a failed lamp fan.
2. If a DMD temperature is too high, the lamp will not ignite. Cool the projector and try again. Ensure there is proper ventilation. If an optional exhaust is used ensure it has adequate airflow. Using the remote keypad or Virtual OSD as above, check the lamp mode in the **Lamp** menu. This may be set to a single lamp or dual lamp mode. Check in the **Status** menu what the reported mode is.
3. For suspected communication failures, power-down the projector and try again.
4. If the lamp does not ignite after the second attempt and after powering down and up again (complete AC power down, then replace the lamp.

6.2.2 Lamp Suddenly Turns OFF

1. Check lamp power through the remote keypad checking the **Lamp** menu or from the web user interface **Advanced: Lamp** menu. Try increasing lamp power.
2. The DMDs may be overheated. Check for an alarm condition on the LCD keypad display.
3. Replace the lamp.

6.2.3 Flicker, Shadows Or Dimness

1. Check lamp power through the remote keypad checking the **Lamp** menu or from the web user interface **Advanced: Lamp** menu. Try increasing lamp power.
2. Replace the lamp.

6.3 LCD

6.3.1 Blank Screen, No Menu Displaying

1. The LCD should never be blank regardless of power state.
2. Press any arrow key on the built-in keypad. The backlight on the LCD and the backlight for the built-in keypad should turn on. If the LCD is still blank, restart the projector.

6.4 Remote Keypad

6.4.1 Remote Keypad Does Not Seem to Work

1. Replace the batteries.
2. Check if IR signals are received by the projector. Pressing any key on the remote control towards the front or rear sensor, the PWR status LED will blink, regardless if any command is executed. If the LED does not blink, restart the projector.
3. Ensure the remote keypad is enabled. If the projector is powered, using the built-in keypad, open the OSD menu and go to the Main Menu>Configuration>Communication submenu and check the checkboxes for Front IR Enabled and Rear IR Enabled are checked. Enable them if they were disabled and try again.
4. Projector is busy. If the projector is busy in a warm-up mode or in a cool-down mode, the commands from the remote keypad may be ignored. Wait until the projector reaches a stable state (Power ON or Stand By) and try again.
5. Press the PROJ key on the remote keypad. If this brings up a pop-up box on the OSD, ensure that the checkbox is marked to enable the projector.
6. Using the XLR connector, use the remote as a “wired” keypad. If it does work and all the IR sensors have been enabled, then there may be a problem with the IR sensors.

6.5 OSD

6.5.1 The OSD Menu does not display

1. Using the LCD, ensure that OSD Menu is enabled, scroll down until the item OSD is displayed. LCD read “OSD: off” press and hold the OSD soft key on the built-in keypad. The LCD will read “OSD on” and press Menu key
OR
2. Press and hold OSD key on the remote keypad for 2-3 seconds, then press the Menu key on the remote keypad.

6.6 Ethernet

6.6.1 Trouble Establishing Communication with Projector

1. Ensure any address changes have been saved, and reboot to implement. If you still have trouble establishing communications with a projector added to an existing Ethernet network, the projector's IP address is likely in conflict with another address already in use. Contact your network administrator.
2. Ensure Ethernet settings are valid for the site. All devices should have the same subnet mask yet unique IP addresses.

6.7 Displays

6.7.1 The projector is on but there is no display

1. Was a lens cover accidentally left on? Remove lens cover.
2. On the LCD display, check that the shutter is open. This will also be indicated by the shutter LED being green.
3. Is the correct input selected. Check cable connections.
4. Check if menus appear on the screen.
5. Can you access test pattern? Ensure a full black test pattern has not been selected for display, press Menu to access test patterns, then cycle patterns with keys. Check your source connections again.

6.7.2 Severe Motion Artifacts

1. Most likely there is a synchronization problem with reversed 3-2 pull-down in 60Hz-to-24Hz film-to-digital conversion in your source. Correct at the source.
2. Set the projector to run in Free run. Open OSD menu and go to Input Switching & PIP. Ensure that running mode is set to Free run not to Frame Lock.
3. Display a test pattern on the screen, pressing the Test button on the remote keypad. The test pattern should be displayed correctly. If not, contact your dealer for assistance.

6.7.3 Image Appears 'Squeezed' or Vertically Stretched into Center of Screen

1. Run auto setup, pressing Auto button on the remote keypad.
2. Check your Resizing selection.

6.7.4 The Display is Jittery or Unstable

1. If the display is jittery or blinking erratically, ensure that the source is properly connected and of adequate quality for detection. With poor quality or improperly connected source, the projector will repeatedly attempt to display an image, however briefly.
2. The horizontal and vertical scan frequency of the input signal may be out of range for the projector. Refer to [Section 7 Specifications](#) for scan frequency ranges.
3. The sync signal may be inadequate. Correct the source problem.

6.7.5 The Display is Faint

1. Brightness and/or contrast and/or gamma may be set incorrectly.
2. The source may be double terminated. Ensure the source is terminated only once.
3. The source (if non-video) may need a different sync tip clamp location.

6.7.6 The Upper Portion of the Display is Waving, Tearing or Jittering

This can occur with video or VCR sources. Check your source.

6.7.7 Portions of the Display are Cut Off or Warped to the Opposite edge

Resizing may need adjustment. Adjust until entire image is visible and centered.

6.7.8 Display Appears Compressed (Vertically Stretched)

1. The frequency of the pixel sampling clock is incorrect for the current source.
2. Sizing and positioning options may be adjusted poorly for the incoming source signal.
3. Use an anamorphic lens for typical HDTV and anamorphic DVD sources that have been re-sized and vertically stretched, via 3rd-party software.

6.7.9 Data is Cropped from Edges

To display the missing material, reduce image size to fill the display area available in the projector, then stretch vertically to fill the screen from top to bottom. Add the anamorphic lens to regain image width.

6.7.10 Display Quality Appears to Drift from Good to Bad, Bad to Good

1. The source input signal may be of low quality.
2. The H or V frequency of the input may have changed at the source end.

6.7.11 Display has Suddenly Frozen

If the screen blacks out inexplicably, it is possible that excessive voltage noise on the AC or ground input has interrupted the projector's ability to lock on to a signal. Power down the projector and disconnect from AC. Then plug in again and power up as usual.

6.7.12 Colors in the Display are Inaccurate

1. The color, tint, color space and/or color temperature settings may require adjustment at your input source.
2. Try Auto Setup.
3. Ensure signal connections are correct.
4. Ensure the proper channel for this source is being used.

6.7.13 Display is Not Rectangular

1. Check leveling of the projector. Ensure the lens surface and screen are parallel to one another.
2. Is the vertical offset correct? Make the necessary adjustments to the vertical offset on the lens mount.

6.7.14 Display is "Noisy"

1. Display adjustment at the input source may be required. Adjust pixel tracking, phase and filter. Noise is particularly common on YPbPr signals from a DVD player.
2. Ensure the video input is terminated (75 ohms). If it is the last connection in a loop-through chain, the video input should be terminated at the last source input only.
3. The input signal and/or signal cables carrying the input signal may be of poor quality.
4. If the distance between the input source device and the projector is greater than 25 feet, signal amplification/conditioning may be required.
5. If the source is a VCR or off-air broadcast, detail may be set too high.

7 Specifications

This section provides detailed M-Series specifications, including: Due to continuing research, specifications are subject to change without notice.

7.1 Image Performance

7.1.1 Pixel Format

1080p (H x V square pixels)	1920 x 1080
1080p Imaging Device & Configuration	Dark Metal 4 DMD, 3 chip, 0.95" diagonal
SXGA+ (H x V square pixels)	1400 x 1050
SXGA+ Imaging Device & Configuration	Dark Metal 4 DMD, 3 chip, 0.95" diagonal

7.1.2 Brightness (ANSI Lumens)

Projector Base Model	Lamp Power	Nominal Brightness
350W 1080p	370W	9500
	350W	9100
	300W	7700
350W SXGA+	370W	9435
	350W	9050
	300W	7600
200 W 1080p	200W	5100
	150W	3800
200W SXGA+	200W	5000
	150W	3700
DLV 200W 1080p	150W	2500
DLV 22W SXGA+	150W	2500

Brightness loss 0-24 hours
10% maximum

7.1.3 Contrast

ANSI: 16 pt. checker pattern on black screen	450:1 min
	650:1 nominal
Full field: 9 pt. average ON/OFF with background light subtraction	2000:1 min (full open aperture)
	2500:1 nominal (full open aperture)
	5000:1 min (with dynamic aperture)
	10000: 1 nominal (with dynamic aperture)

7.1.4 Luminance Uniformity

Dual lamp Full white ANSI 13-pt. (w/o electronic corr.)	+15%, -23%
Single lamp Full white ANSI 13-pt. (w/o electronic corr.)	+15%, -32%
Full white ANSI 13-pt. (w/ electronic corr.)	+5%, -5%
Full black ANSI 13-pt.	Negative uniformity shall be between -35% and 0% and positive uniformity shall be between 0% and +35%.

7.1.5 Color Uniformity

Full white ANSI 13-pt.	+/-0.005 cluster on u',v' chart (CIE 1976)
Full black ANSI 13-pt.	+/-0.075 cluster on u', v', chart (CIE 1976)

7.1.6 Color Primaries

ANSI 9 point measurement without YNF		
	x	y
Red	0.665 ± .025	0.335 ± .025
Green	0.343 ± .040	0.640 ± .040
Blue	0.145 ± .020	0.050 ± .025
White	0.300 ± .050	0.300 ± .050

ANSI 9 point measurement with YNF		
	x	y
Red	0.670+/-0.025	0.330+/-0.025
Green	0.300+/-0.040	0.673+/-0.040
Blue	0.148+/-0.020	0.045+/-0.025

7.1.7 Gamma

Default Gamma (all points from 10 to 90 IRE)	2.2 + linear segment
Adjustable Gamma range	1.0 to 3.0

7.1.8 Grayscale/Color Resolution

Resolution	10 bits (non-linear) min. (Gamma encoded)
------------	---


7.1.9 Color Temperature

White Default CCT (without YNF)	7500 K $\pm$ 1000K
White YNF CCT (with YNF activation, electronically corrected)	6500K $\pm$ 1000K
Range of Adjustment	3200 K – 9300 K
Tracking (deviation from normal over full range from 0 – 100 IRE)	$\pm$ 500 K max
Stability (during rated lamp life)	$\pm$ 500 K max

7.1.10 Convergence

Convergence zones A, B, C are as defined in Figure 2. Zone A has a diameter $\frac{1}{4}$ of the image height. Zone B has a diameter of full image height. All specified convergence errors are between any two colors after a minimum warm-up of 30 minutes.

Convergence is specified with a 1.4-1.8 HD lens (part number 118-100112-01) in the 1.4:1 position with zero offset. Bore-sight alignment must be adjusted for zero angular error. (Note: convergence error includes the effects of lateral color in the projection lens. Measurements must be done on horizontal and vertical test pattern lines that intersect the center of the image).

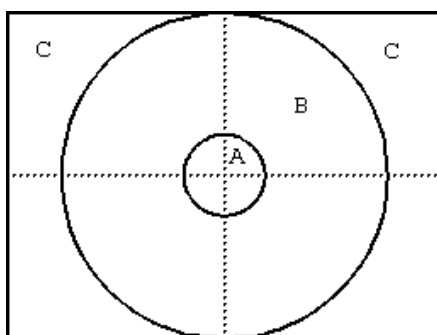

(Figure applicable to both 1080p and SXGA+)

Measurement Area	Maximum Convergence Error (Pixels)
Zone A	1/4
Zone B	1/2
Zone C	3/4

7.1.11 Blemishes

Blemishes are to be observed at 1 full screen height distance from the image for a period of 30 seconds. Screen size: 10 foot wide for 350W models, 8 foot wide for 200W models. Blemishes are defined as per TI Specification 2506811.

Red screen	No blemishes
Green screen	No blemishes
Blue screen	No blemishes
White screen	No blemishes
Black screen	No blemishes

7.1.12 Pixel Defects

Red	0 bright, 1 dark
Green	0 bright, 0 dark
Blue	0 bright, 2 dark non-adjacent

7.1.13 Image Artifacts

Evaluate on multi-burst or fine grid test pattern	No visible artifacts with observer at 1 full screen height from image
---	---

7.1.14 Picture Centering

1080p centering error	±5% of vertical offset (32 pixels)
SXGA+ centering error	±5% of vertical offset (26 pixels)

7.2 Feature Set**7.2.1 Airflow**

Air intakes	Right side of projector
Air exhaust	Hot lamp exhaust: rear of projector
	Cool light engine exhaust: left side of projector

7.2.2 Air Filters (Optional)

Filter media types	Coarse foam filter
Filter access	Fog filter
	Service-interchangeable via access panel

7.2.3 Dust Sealing

Dust sealed DMDs	Gasket sealed
Dust sealed illumination system	Sealed from lamp input to entrance face of prism when lamps are installed

7.2.4 ILS (Intelligent Lens System)

Motorized lenses and lens mount with position encoding	Zoom, focus, horizontal and vertical offsets
Accuracy	±2 pixel
Manual control	1/3 pixel fine movement control per button press on any applicable User Interface (e.g., remote).
Calibration	Automatic calibration on lens change detection
User Configurable Calibration Modes	Automatic calibration on power-up
	Manual calibration
Calibration time	< 10 secs when required
Bore sight	3-point +/- 4 degrees adjustment and lockable without removing covers
Travel time stop to stop	
Zoom and Focus	10 sec nominal (depends on lens type)
Offsets	5 sec (nominal (depends on lens type)
Manual Lens Movement	Manual over-ride permissible for zoom and focus

7.2.5 Projection Lens Compatibility

Lens type	Reverse Telecentric Internal-focus
Lens throw ratio	Motorized zoom and focus with position feedback Lens ILS 0.73:1SX+/0.67:1HD Lens ILS 1.25-1.6SX+/1.16-1.49HD Lens ILS 1.5-2.0SX+/1.4-1.8HD Lens ILS 2.0-2.8SX+/1.8-2.6HD Lens ILS 2.8-4.5SX+/2.6-4.1HD Lens ILS 4.5-7.5SX+/4.1-6.9HD Lens ILS 7.5-11.2SX+/6.9-10.4HD Lens ILS 1.2SX+/1.1HD Lens ILS 1.2SX+/1.1HD SFL
Compatibility	Easy Rider-type HD lenses with motor and mount change
Lens change-out	Clamp type tool-less mount with built-in connector
Lens ID	Each lens type is encoded with a unique ID code that is identified in the projector

7.2.6 Dynamic Iris

Motorized iris with position feedback	Scene controlled motorized iris automatically adjusts to image content
Max frequency open-close-open	20 Hz
Sound level	Within ambient noise level of projector Configurable per channel

7.2.7 Automatic Fans

Temperature sensitive fan speed control	Fans automatically adjust to required speed to maintain projector at proper operating range as function of outside ambient temperature
Standby	All fans are off when projector is in standby and not running active loop-through on a Twin HDMI option card
Temperature range for variable fan speed	5 to 40 degrees C
Transition steps	Smooth speed transitions with no abrupt audible changes

7.2.8 Automatic Color Filtering

Motorized yellow notch filter	User selectable optical color switch (in or out) to enhance color space Configurable per channel
-------------------------------	---

7.2.9 Constant Lamp Output Management

LiteLOC™	Automatically adjusts lamp output to maintain constant lumens setting within operating range of lamp.
----------	---

7.2.10 Shutter

Open	Light transmitted to projection lens
Closed	All light blocked - no light on screen
Activation	Operation in less than 0.25 seconds.

7.2.11 Lamps

Dual Mercury lamp system	Lamps are accessed from side of projector Lamps are individually swappable while the projector is running
--------------------------	--

7.2.12 Status LED

Status LED's	Located at back of projector
LED STATES	
Lamp 1, Lamp 2	Off – Lamps are off Yellow – Lamp time has expired and lamp should be replaced Green – Lamp is on and operating correctly Flashing red – Lamp has malfunctioned
Power	Off – AC power is off Yellow – AC is present but projector is in standby Green – Projector is powered up and operating normally Flashing green/yellow – Projector communication in progress Flashing red – Error has occurred. Details are displayed on the status display
Shutter	Green – shutter is open Yellow – shutter is closed

7.2.13 Electronics/SW

FEATURE	COMMENTS
Imaging Device	Supports 3 chip DMD operation
Video Format Re-Sizing	All video formats can be resized to fill screen either horizontally or vertically while maintaining aspect ratio
Picture in Picture	
Seamless Switching	
Built-in 2D keystone and geometry correction	
Auto-scaling	
Auto-de interlacing	
Edge blending	
Warping	
Tiling (support for up to 3x3 arrays)	
Blanking and Image positioning	
Brightness, contrast, color, and uniformity user settable control	
Image orientation	Can display image front/rear, normal/inverted (ceiling)
Electronics HW access	All accessible electronics are mounted from the back of the projector
Number of option cards	6 user inter-changeable – hot swappable
Number of processor cards	2 user inter-changeable
Number of option slots	4, located at back of projector for option cards; 1, located at back of projector for processor card
Native format adjustment	Optional global aspect ratio setting can be set for projector allowing for automatic scaling of all input images to required output format
Arbitrary Gamma	User definable gamma curves

7.3 Image Processor Performance

Min input pixel rate	13 Mpix/s	Single image processor (SIPC)
Max input pixel rate	165 Mpix/s Standard mode	
Max input resolution	2048x1536 (QXGA)	
Min input resolution	640x400	
Max input frame rate with Single Image Processor Card	50Hz at 2048x1536 (QXGA) *	
Processing	10 bit throughout *	* With sources that can output minimum blanking, otherwise lower vertical rates
Source switching time	Seamless switching with switch time less than 1 second	* Except Dual-DVI input in dual-link mode (dual 8 bit input paths into 10 bit processing)

7.4 Input (Source Signal) Compatibility

7.4.1 Analog (Only) Input

Connectors	5 female BNC, 75 Ohm R/Pr G/Y B/Pb H/C V
Color spaces/signal types	RGB YPbPr
A/D conversion	10 bits

7.4.2 Twin HDMI Input

Connectors	2 independent HDMI inputs type A 2 loop-out connectors type A
Color spaces/signal types	RGB YCbCr (4:2:2) YCbCr (4:4:4) HDCP support HDMI 1.3 supported (not including audio) except: 12 bit color dithered to 10 bits; 16 bit color not supported

7.4.3 Dual Link DVI Input

Connectors	1 dual link DVI-I 1 analog 15-pin VGA
Color spaces/signal types	HDCP support
A/D conversion	10 bits for single link DVI input 8 bits for dual link DVI inputs
Frequency	165 MPixel/s analog

7.4.4 Video Decoder Input

Connectors	2 S-Video 4-pin miniature DIN 4 BNC, 75 Ohm 2 independent decoder channels for PIP
Color space/Signal types	Composite video Component video (SD and ED only) S-video
Video Standards	NTSC, NTSC 4.43, PAL, PAL M, PAL N, PAL 60, SECAM
A/D conversion	10 bits

7.4.5 Dual Standard Definition, High Definition or Serial Digital Input

Connectors	BNC, 75 Ohm
Color spaces/signal types	Dual HD input SDI, HDSDI

7.5 Control Signal Compatibility

7.5.1 Remote Dual Frequency

Number of transmitters	2 IR
Modulation frequency	Dual frequency (38 kHz, 455 kHz)
Wavelength (peak intensity)	950 nm
Range	Min 35 m
Wired Keypad	
Wire connection (option)	3 pin XLR
Max cable length	30 m
XLR Connections	Optional boot for remote with XLR connector built-in to avoid requirement to use phono-to-XLR adaptor cable

7.5.2 Control Receiver

Number of sensors	1 front, 1 rear
Coverage	130 degrees coverage in-line with lens at 3 m distance
Modulation (carrier) frequency	Dual frequency (38 kHz, 455 kHz)

7.5.3 RS232

Number of ports	2
Connector	1 female 9-pin Dsub (IN) 1 male 9-pin Dsub (OUT)
Max bit rate	115.2 kbps
Flow control	Xon/Xoff

7.5.4 RS422

Number of ports	1
Connector	1 female 9-pin Dsub
Max bit rate	115.2 kbps
Power output	12 V $\pm 5\%$ @ 400mA maximum

7.5.5 Ethernet

Number of ports	1
Standard	10/100 Base-T
Connector	Female RJ-45

7.5.6 USB 2.0 Device Port

Number of ports	1
Standard	Supports: mass storage device type, Ethernet device type, and/or serial device type.
Connector	USB type B (full size)
Max bit rate	3-12 Mbps (high speed 480 Mbps not supported)

7.5.7 GPIO

Number of I/O Lines	7
Connector	Male 9-pin Dsub
Output sink current (logic low)	100 mA @ 1V typical
Power output	12 V $\pm 5\%$ @ 400mA maximum

7.5.8 Built-In Keypad and Display

Key type	Soft-touch keys
Display type	Graphics LCD backlight

7.5.9 AMX/Crestron Support

AMX Device Discovery Partner
Crestron Integrated Partner

7.6 Power Requirements

Rated voltage	100 VAC – 240 VAC
Rated Current (dual lamp operation)	
370W 1080p	12 A @ 100 VAC
200 W 1080p	9 A @ 100 VAC
370W SXGA+	12 A @ 100 VAC
200W SXGA+	9 A @ 100 VAC
Line frequency	50/60 Hz
AC Input Coupler	15 A, 250 VAC
Type of connector	IEC 320-C14 with wire cable clamp
Line Cord	14AWG type FT1 with plug, NEMA 5-15P, 15A
Inrush Current	60 A max

Power Requirements cont.

Maximum Power Consumption

370 W 1080p	1320 W (dual lamp) / 831 W (single lamp)
350 W 1080p	1267 W (dual lamp) / 805 W (single lamp)
300 W 1080p	1135 W (dual lamp) / 739 W (single lamp)
200 W 1080p	871 W (dual lamp) / 607 W (single lamp)
150 W 1080p	739 W (dual lamp) / 541 W (single lamp)
370 W SXGA+	1320 W (dual lamp) / 831 W (single lamp)
350 W SXGA+	1267 W (dual lamp) / 805 W (single lamp)
300 W SXGA+	1135 W (dual lamp) / 739 W (single lamp)
200 W SXGA+	871 W (dual lamp) / 607 W (single lamp)
150 W SXGA+	739 W (dual lamp) / 541 W (single lamp)

Maximum Current at 100V

370 W 1080p	13.2 A (dual lamp) / 8.3 A (single lamp)
350 W 1080p	12.7 A (dual lamp) / 8.0 A (single lamp)
300 W 1080p	11.4 A (dual lamp) / 7.4 A (single lamp)
200 W 1080p	8.7 A (dual lamp) / 6.1 A (single lamp)
150 W 1080p	7.4 A (dual lamp) / 5.4 A (single lamp)
370 W SXGA+	13.2 A (dual lamp) / 8.3 A (single lamp)
350 W SXGA+	12.7 A (dual lamp) / 8.0 A (single lamp)
300 W SXGA+	11.4 A (dual lamp) / 7.4 A (single lamp)
200 W SXGA+	8.7 A (dual lamp) / 6.1 A (single lamp)
150 W SXGA+	7.4 A (dual lamp) / 5.4 A (single lamp)

7.6.1 Lamp Specification

Type	Mercury Lamp (Hg)
Power	
350 W HD/350 W SX+	300 W min., 370 W max (software adjustable)
200 W HD/200 W SX+	150 W min., 200 W max (software adjustable)
350W Lamp rated lamp life to 50% brightness (2 hrs on, 15 min. off duty cycle)	1300 hrs typical @ 370W
	1500 hrs typical @ 350W
	2000 hrs typical @ 300W
200W Lamp rated lamp life to 50% brightness (2 hrs on, 15 min. off duty cycle)	2000 hrs typical @ 200W
	3000 hrs typical @ 150W
Warm-up time (to full output)	5 minutes max
Operating position	±20 deg max tilt of lamp axis from horizontal

7.7 Physical Specifications**7.7.1 Size**

Maximum product dimensions (L x W x H) (with lens removed)	561mm (22.1") x 500mm (19.7") x 247mm (9.75")
Maximum shipping dimensions (L x W x H)	680mm (26.5") x 650mm (25.6") x 458mm (18")

7.7.2 Adjustment

Product Alignment	2" of vertical adjustment on 2 front feet 1" of vertical adjustment on single rear foot
-------------------	--

7.7.3 Weight

Maximum product weight (with lens removed)	25kg (55lb.)
Maximum shipping weight (includes packaging)	34kg (75lb.)

7.7.4 Operating Position

Horizontal	±20 degrees allowable rotation about lens axis
Inverted	±20 degrees allowable rotation about lens axis
Rotation	±180 degrees perpendicular to lens axis

7.7.5 Cosmetics

Paint and Colors

Skins	Sandtek black F63TXB11783-8703 Sherwin-Williams, Polane-T polyurethane enamel. Pale grey text silkscreen Pantone 421 matte finish.
Option Cards Faceplates	Smooth black 63B12 10 to 15 degree gloss per 010-100594. Pale grey text silkscreen Pantone 421 matte finish.
Card cage Faceplate	Grand Century B711-T1856 gloss black. Pale grey text silkscreen Pantone 421 matte finish.

7.8 Reliability and Serviceability

7.8.1 Reliability

MTBF – excluding consumable components	15,000 hrs
Consumable components	Air filters, fans, lamps

7.8.2 Serviceability

Time to replace any option card	1 minute
Time to replace lamp	1 minute
Time to replace projection lens	30 seconds
Time to replace air filter	1 minute

7.9 Environment

7.9.1 Temperature/Humidity/Altitude

Operating temperature range	5 to 40 degrees C
Storage temperature range	-40 to 70 degrees C
Humidity range	10% to 80%, non condensing
Operating Altitude	10,000 ft. maximum

7.10 Accessories and Service Components

Product Name	Part Number	Sold With Product	Sold Separately
Standard Image Processor	003-002556-XX	X	X
Analog Card Input	108-309101-XX	X	X
Dual Link DVI Input	108-312101-XX	*	X
Video Decoder Input	108-310101-XX	*	X
Dual HDSOI Input	108-313101-XX	*	X
Twin HDMI Input	108-311101-XX		X
Dust filter	118-100104-XX		X
Fog filter	118-100105-XX		X
Stacking frame	118-100107-XX	*	X
Ceiling mount	118-100108-XX		X
Lens ILS 0.73:1SX+/0.67:1HD	118-100110-XX		X
Lens ILS 1.25-1.5SX+/1.16-1.39HD	118-100111-XX		X
Lens ILS 1.5-2.0SX+/1.4-1.8HD	118-100112-XX		X
Lens ILS 2.0-2.8SX+/1.8-2.6HD	118-100113-XX		X
Lens ILS 2.8-4.5SX+/2.6-4.1HD	118-100114-XX		X
Lens ILS 4.5-7.3SX+/4.1-6.9HD	118-100115-XX		X
Lens ILS 7.5-11.2SX+/6.9-10.4HD	118-100116-XX		X
Lens ILS 1.2SX+/1.1HD	118-100117-XX		X
Lens ILS 1.2SX+/1.1HD SFL	118-101103-XX		
Portrait Mode Coupler	118-116109-XX		X
IR remote	TBD	X	X
User Manual	020-100009-XX	X	
Service Manual	020-100010-XX		X

NOTE:* Model Dependant

7.10.1 Service Components

Service Item	Part Number
Lamp (200W); DS+6K-M, HD6K-M, DLV1920-DL, DLV1400-DL	003-100856-XX
Lamp (350W); HD10K-M, Roadster HD10K-M, DS+10K-M, Roadster S+10K-M	003-100857-XX
Air Filter Dust M-Series (Package of 6)	118-100104-XX
Air Filter Fog M-Series (Package of 6)	118-100105-XX

7.11 Regulatory

This product conforms to the following regulations related to product safety, environmental requirements and electromagnetic compatibility (EMC).

- FCC Part 15, Subpart B Class A; CISPR22/EN55022; CISPR24/EN55024
- UL 60950-1 First Edition; CAN/CSA-C22.2 No. 60950-1-03 First edition;
- IEC60950-1:2001
- 2002/95/EC RoHS

Appendix A:GPIO

This section explains how to use a GPIO link from the projector to external equipment, such as devices for 3D synchronizing.

A.1 GPIO Port

The GPIO connector located on the input panel provides a flexible method of interfacing a wide range of external I/O devices to the projector. There are 7 GPIO pins available on the 9pin D-Sub GPIO connector, which are configurable via RS232 commands. The other two pins are reserved for ground and power - see table below for pin identification.

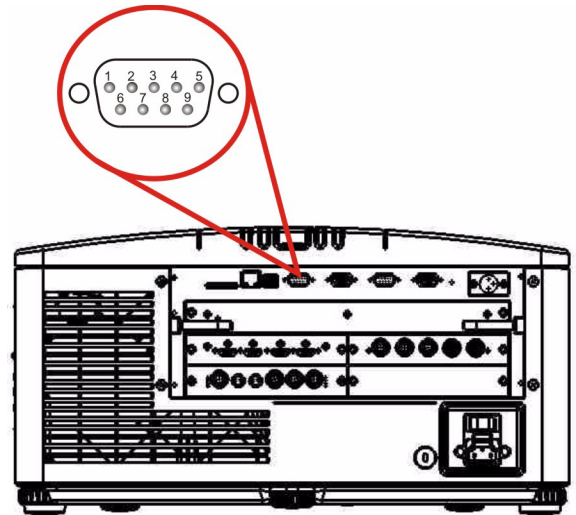


FIGURE A-1 - GPIO CONNECTOR

Table A.1 GPIO Pin

GPIO PINS	
PIN #	SIGNAL
Pin 1	+ 12V (200mA)
Pin 2	GPIO 1
Pin 3	GPIO 2
Pin 4	GPIO 3
Pin 5	Ground
Pin 6	GPIO 4
Pin 7	GPIO 5
Pin 8	GPIO 6
Pin 9	GPIO 7

The serial cable required for connecting the external device to the projector's GPIO connector, must be compatible with the external device.

Configuring the GPIO

The GPIO connector can be configured to automate any number of events using the serial command code **GIO**. Each Pin is defined as either an **input** or **output** depending on the desired outcome. Configure the pin as an input if you want the projector to respond to something the device does and as an output if you want the external device to respond to an action taken by the projector. For example, configure the pin as an output if you want the lighting in a room to automatically dim when the projector is turned on.

By using the GIO command, you can also set the state of each pin as **high** or **low**. By default, the state of each pin is **high**. The voltage applied to pins in the high state is +3.3V.

Example 1. Turn room lighting on when the projector is turned off. (*Assumes a control/automation unit is configured to turn the lights on when pin 2 of its input goes high.*)

(GIO+CNFG "OOOllll") Set pin #2, 3 & 4 configuration to output and
pin 6, 7, 8 & 9 to input

(GIO+STAT "10xxxxx") Set pin #2 to high, pin 3 to low and the state of
all other pins unchanged

Query Command

(GIO+STAT) Request the state of all pins

(GIO+STAT "1001001") Reply of pin states - 1 means pin is high, 0
means pin is low

(GIO+CNFG) Request the configuration of all pins

(GIO+CNFG "lllOOOO") Reply of pin configurations - pins 2, 3 & 4 are
Inputs, pins 6, 7, 8 & 9 are Outputs

NOTE: The strings in the commands refer to pins 2, 3, 4, 6, 7, 8, 9 in order from left to right.